



10-sheet Microcut DVD/CD Paper Shredder DX-PS10MC



QUICK SETUP GUIDE

Features

GoECO™ Power-Saving Technology (patent-pending) consumes energy only during actual shredding. This means the shredder does not use power when it is in stand-by mode.

Control panel



- Power
- Door Open
- Overheat Overload

LED

| | |
|-------------------|--|
| Power | Lights green when the shredder is in use. Turns off when the shredder is in stand-by (power saving) mode. |
| Door Open | Lights yellow if the wastebasket is opened or the shredder head is not mounted correctly. |
| Overheat/Overload | Lights red when the shredder is jammed or overheated. You have inserted more sheets of paper than recommended or the shredder has been used too long. Please reduce the number of sheets or stop shredding until the light turns off. |

Power switch

| | |
|-------------|---|
| AUTO | The shredder starts automatically when an item is inserted into the paper or disc slot. When the item has passed through the slot, the shredder stops. Caution: Always feed paper in as straight as possible. Caution: Do not insert more than ten sheets of paper, one credit card, or one disc at a time. |
| REV | Use the reverse setting to clear a paper jam or to pull out unshredded paper. Caution: Never try to clear a jam by using REV when the wastebasket is full. This could make the jam worse. |
| OFF | Turns off the shredder. Warning: Always turn off the shredder when it is not in use. |

Setting up the shredder

- 1 Place the shredder head securely on the rim of the supplied wastebasket. The shredder has a built-in safety mechanism that requires the shredder to be correctly placed on the wastebasket. Be careful not to touch the bottom of the shredder head to avoid touching the sharp blades.
Note: Do not use plastic bags to line the wastebasket.
- 2 Connect the power cord to a power outlet.

Using the shredder

- 1 Slide the power button from **OFF** to **AUTO**.
- 2 Insert paper into the paper slot, or insert one credit card or one disc (CD/DVD) into the disc slot. The shredder automatically shreds what you insert.
Caution: Do not insert more than 10 pages, one credit card, or one disc at a time. You may damage the shredder.

Specifications

| | |
|-----------------------------|--|
| Sheet capacity | 10 sheets of 20 lb. bond paper |
| Credit card capacity | One at a time |
| Disc capacity | One at a time |
| Paper shred size | 0.12" × 0.35" (0.3 cm × 0.9 cm) pieces |
| Voltage | 120V ~ 60 Hz 3.2A |

Troubleshooting

- If a jam occurs and the cutter stops, slide the power button to **REV** and pull out the jammed paper.
- If paper is jammed in the shredder blades, slide the power button to **OFF**, unplug the power cord, and remove all paper from the entrance and exit of the paper or disc slot.
- If the shredder runs continuously for a long period of time and the motor overheats, a safety switch automatically turns off the shredder. If this occurs, slide the power button to **OFF** and do not use the shredder for 50 minutes.

Maintenance

Once a month, drizzle vegetable oil or cooking oil (nothing petroleum based) on a few pieces of paper and feed them through the shredder.

Important safety information

- Do not attempt to repair the shredder yourself. Repairs must be made by a qualified technician.
- Do not alter the shredder or power cord in any way.
- Do not use the shredder if it or the power cord appears damaged in any way.
- Always unplug the power cord when moving the shredder or if you do not plan to use it for a long period of time.
- Do not shred wet paper, carbon paper, or vinyl or plastic bags. Shredding these items may reduce the shredder's performance or cause shock or injury.
- Empty the wastebasket regularly to make sure that the paper slot does not become blocked.
- Do not use garbage bags with the shredder. Garbage bags could prevent the shredder wastebasket from being correctly mounted, which would prevent the shredder from functioning correctly.
- Although our shredders are safe to shred the occasional circular paper clips (#2 and 3), do not run industrial or non-standard (#4 and 8) clips through the shredder.

| | | | | | | | |
|---|--|---|--|---|---|---|---|
|  |  |  |  |  |  |  |  |
| WARNING | Shredder is not intended for use by children | Do not insert fingers into the paper slot or the optical disc slot | Avoid getting loose clothing or jewelry near the paper slot or the optical disc slot | Do not spray or keep any aerosol products in or around the shredder | Avoid getting hair near the paper slot or the optical disc slot | Do not put industrial or non-standard circular paper clips in the shredder | Do not insert more than ten pages |

One-year limited warranty

Visit www.dynexproducts.com for details.

Contact Dynex:

For customer service, please call 1-800-305-2204

www.dynexproducts.com

Distributed by Best Buy Purchasing, LLC

7601 Penn Avenue South, Richfield, MN USA 55423-3645

© 2012 BBY Solutions, Inc., All Rights Reserved. DYNEX is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.

UPC: 600603151101
ENGLISH 12-0834