


QUICK SETUP GUIDE

Side Dock
Charging Station for
Xbox® One X

NS-GXBOSBCX19 / NS-GXBOSBCX19-C

PACKAGE CONTENTS

- Charging station
- Rechargeable battery packs (2)
- Quick Setup Guide

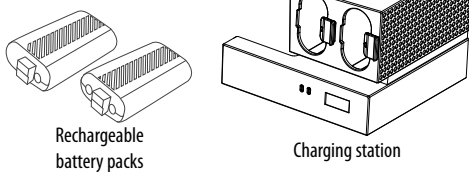


Before using your new product, please read these instructions to prevent any damage.

FEATURES


- Charge up to two controller battery packs simultaneously
- View charging status at a glance via LED indicators
- Battery lock mechanism holds battery packs in place
- USB port with power and data pass-thru
- Compatible with Xbox One X
- Full UL certified battery packs

SETTING UP THE BATTERY CHARGING STATION


- 1 Make sure that the locking switch is in the unlocked position.

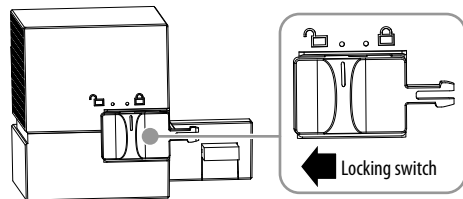


- 2 Slide your charging station onto the right side of your Xbox One X Console.

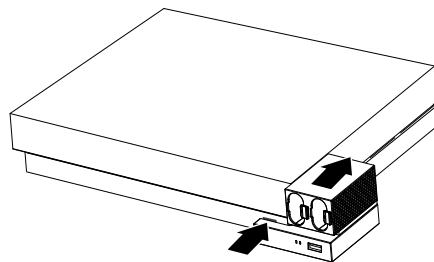

- 3 Slide the locking switch to the right to lock.

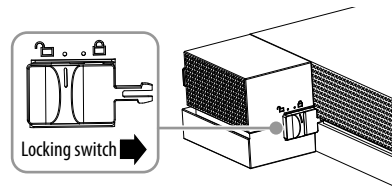


- 4 Insert the contact end of your rechargeable battery pack into your charging station. Make sure that the lighter stripe faces the battery lock. The battery pack automatically locks in when fully seated.

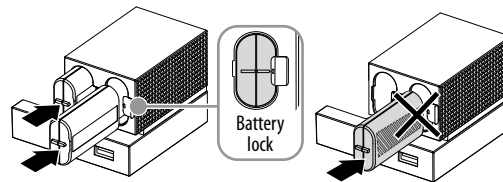


- Status light information:

STATUS LIGHTS	DESCRIPTION
Amber	Charging
White	Fully charged

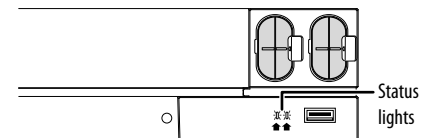


- 5 When your battery pack is fully charged, slide the battery lock to the right to release the battery pack. The battery automatically pops out.

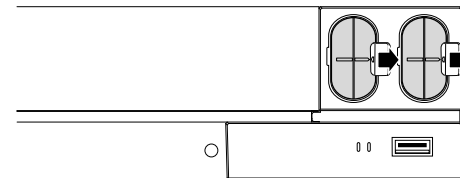

INSTALLING THE RECHARGEABLE BATTERY PACK


- 1 Remove the battery cover from your controller.
- 2 Insert the rechargeable battery pack into the battery compartment.
- 3 Make sure that the battery contacts are facing left and the darker stripe faces outward.
- 4 Replace the battery cover.

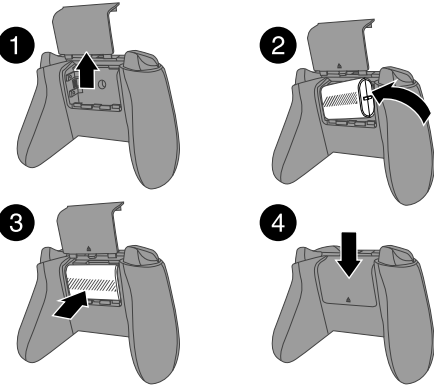

REMOVING THE BATTERY CHARGING STATION


Note: The battery charging station is designed to stay connected to your Xbox One X console. It is recommended that you leave it connected. However, if you need to remove it for some reason, do the following:

- 1 Slide the locking switch to the left to unlock.

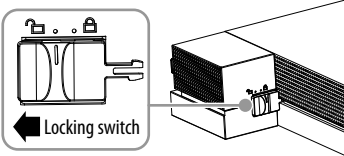

- 2 Hold on to the console, then slide the charging station back to remove it from your console.

Caution: If you slide the charging station the wrong way, you could damage it.

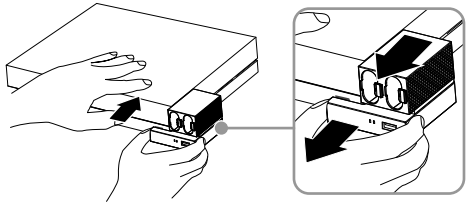

SPECIFICATIONS

External dimensions: charge station (W×H×D)	3.2 × 3.4 × 2.4 in. (8.1 × 8.6 × 6.1 cm.)
Battery capacity	1200 mAh each battery
Battery type	Ni-MH LSD battery
External dimensions: battery (W×H×D)	1.97 × 1.18 × .59 in. (5 × 3 × 1.5 cm.)
Operating temperature	32°F~104°F (0°C~40°C)

SAFETY INFORMATION/WARNING

Incorrect battery usage may result in battery leakage, overheating, or an explosion. When using batteries, make sure that you follow these instructions:

- Keep batteries out of the reach of children.
- Do not heat, open, puncture, mutilate, or dispose of batteries in a fire.
- If a battery leaks, remove the battery, taking care to keep the leaked fluid from touching your skin or clothes. If fluid from the battery comes into contact with your skin or clothes, flush your skin with water or remove your clothing immediately. Before inserting a new battery, thoroughly clean the controller with a damp paper towel.

- Do not allow metal objects to touch the battery terminals, because they can become hot and cause burns. For example, do not carry the battery in a pocket with keys or coins.
- Remove the battery when the product will not be used for an extended period of time.

LEGAL NOTICES

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try

to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ICES-003 Statement

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)
www.insigniaproducts.com

Microsoft and Xbox One X are registered trademarks of the Microsoft group of companies.

INSIGNIA is a trademark of Best Buy and its affiliated companies
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2019 Best Buy. All rights reserved.
Made in China