

FINISHING TOUCH®

# FLAWLESS®



## FACIAL HAIR REMOVER

Thank you for your purchase of FLAWLESS®, the easy and convenient facial hair remover.

### Installing / Changing Battery

- Remove the FLAWLESS® cap (Image 1).
- Grab the upper section of the unit with one hand, the bottom half with the other, and pull apart (Image 2) to reveal the battery chamber.
- Place 1 AA battery into the compartment, making sure the positive pole (+) is facing the bottom of the unit.
- Slide/snap the unit's bottom casing back into place (Image 2).

### How to Use

- Remove the FLAWLESS® cap (Image 1).
- Slide the switch located on the side of the unit upward into the "ON" position (Image 3). The light will automatically turn on when the unit is "ON".
- Gently press the head of the unit flat against your skin. The unit should not be on an angle. Proceed making small, circular motions to remove unwanted hair (Image 5).

NOTE: It is normal for the head to become warm with use.

### Cleaning (Be sure unit is off)

- Twist the rotating the head counter-clockwise and lift off (Image 4).
- **After each use, clean the head by using a brush (included) to wipe away the hair residue.**
- Empty any hair from the body of the FLAWLESS® unit by turning it over and gently tapping the sides.
- To put the head back on the unit, line up the "groove" indicators on the cap with those on the unit and twist clockwise (Image 4).

### Tips & Pointers





- **If the unit begins to slow down, clear the head and body of any hair residue. If the unit is still running slow change the battery.**
- Gentle enough to use every day.
- For airbrush-like make-up application, use daily.

NOTE: Prior to first use, test the FLAWLESS® on a small area. If any sensitivity or allergic reactions occur, discontinue use immediately. Do not use your Flawless on sensitive or irritated skin.

### Replacement Head

For optimal results it is recommended that you replace your Flawless head every 3-4 months, or when it no longer provides the desired results. The head may need to be replaced sooner if the Flawless loses performance or if the head becomes chipped or damaged in any way.

Go to [www.FlawlessBeauty.com](http://www.FlawlessBeauty.com) for special replacement heads offer.

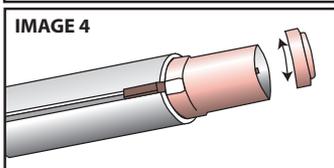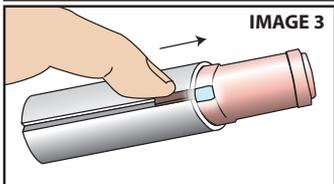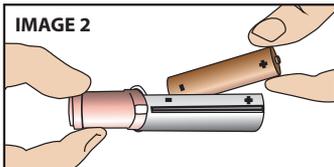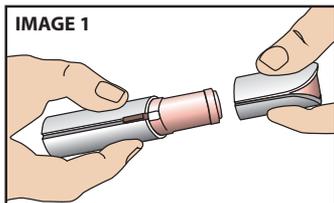


### Warning


- Keep out of reach of children.
- Do not use on irritated skin. Discontinue use if skin irritation occurs.
- Not recommended for use around eyes.
- Do not rinse trimmer head under water.
- Do not submerge unit under water.
- Store in a cool dry place when not in use.
- Do not connect battery improperly, charge, or dispose of in fire. Battery may explode or leak.
- Dispose of old batteries according to all applicable local regulations.

# QUICK START GUIDE


- 1. Remove cap. (Image 1)**

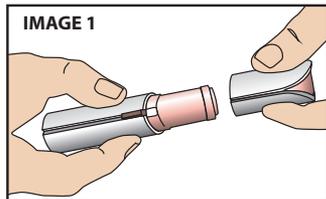

- 2. Install battery: Grab the upper section of the unit with one hand, the bottom half with the other, and pull apart. (Image 2)**

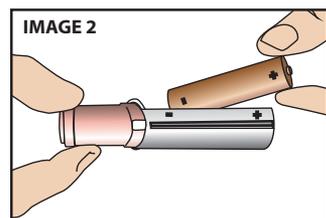

- 3. Turn Unit On: Just slide gold switch upward. (Image 3)**

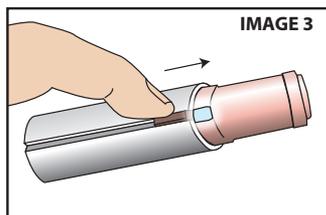

- 4. To Remove Hair: Use in a circular motion. (Image 4)**



U.S. & International Patents Pending

**FCC Statement**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Distributed by:

Wayne, NJ 07470

Made in China © 2018 Ideavillage  
customerservice@ideavillage.com

FTFLAW061419MW