 


LEISURE 3

Projector for Home Entertainment

USER MANUAL

PACKING LIST



Projector



Remote (Batteries Not Included)



User Manual



Power Adapter



HD Cable




Carrying Bag

NOTICE


Recommended





NOT Recommended

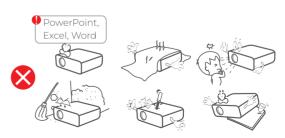


FUNCTION OVERVIEW

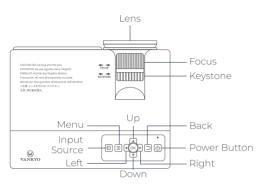

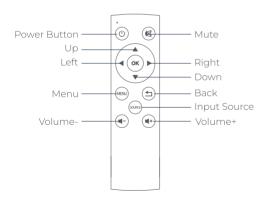


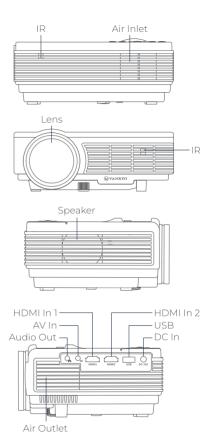

QUICK START

 

Connect the projector to power.

 


Press the Power Button to turn on the projector.




Select the correct input source to project your device.



 
Adjust the keystone and focus ring to get the best image performance.



Press the Power Button twice to turn off the projector.

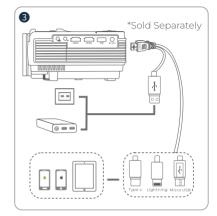

 Connect your device to the projector correctly.





Adjust the kickstand accordingly.

INPUT SOURCE


Press the input source button on the projector/remote to enter the interface of Input Source.

  
1. USB Connection






  2. HDMI Connection





 3. AV Connection



Input Source

AV

HDMI 1


HDMI 2

Media

OK Enter

PROJECTOR CONNECTION



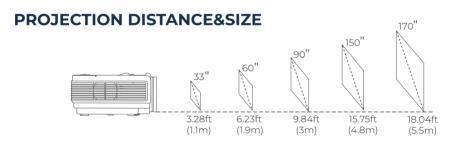

- * The recommended projection distance varies with different projection contents. Please adjust the distance between the wall/screen and the projector properly as needed.
- * Ambient darkness will improve the clarity of the projected images.

SPECIFICATION

Display Technology	LCD	Light Source	LED
Resolution	Native 800x480	Input Signal	576i/576P/720i/720P/ 1080i/1080P
Installation Type	Front/Rear/Ceiling	Aspect Ratio	4:3/16:9/Auto
Focus	Manual	Keystone	±15°
Speakers	5W/4Ω	Power Supply	DC 12V 4A 48W
Unit Dimension	198 x 148.6 x 68mm (7.8 x 5.9 x 2.7inches)	Unit Net Weight	0.9kg(1.98lb)
Photo Format Supported	BMP/JPG/PNG/GIF/JPEG	Audio Format Supported	ACC/MP2/MP3/PCM/ FLAC/WMA
Video Format Supported	AVI/MP4/MKV/FLV/MOV/ RMVB/3GP/MPEG1/ MPEG2/H.264/XVID	Ports	HD In x 2/USB Port x 1/ AV In x 1/Audio Out x 1/
Mounting Screw	1/4 ''	Number of Screw	1

TROUBLESHOOTING GUIDE

- Blurry Image
 - * Adjust focus ring/keystone.
 - * Projector and screen/wall must be in effective distance.
- 2 Remote Unresponsive
 - * Make sure remote points at IR receiver directly.
 - * Do not cover IR receiver.
 - * Try a new pair of batteries.
- Mobile Connection
 - * iOS: Genuine lightning to HDMI cable.
 - * Android: Micro USB to HDMI adapter/Type C to HDMI cable.
- 4 Upside Down Images
 - * Go to Menu > OPTION > Flip to flip the projection image.

VANKYO SUPPORT

North America support@ivankyo.com



www.ivankyo.com



@VankyoOfficial



VANKYO