




Mattress Vacuum Cleaner

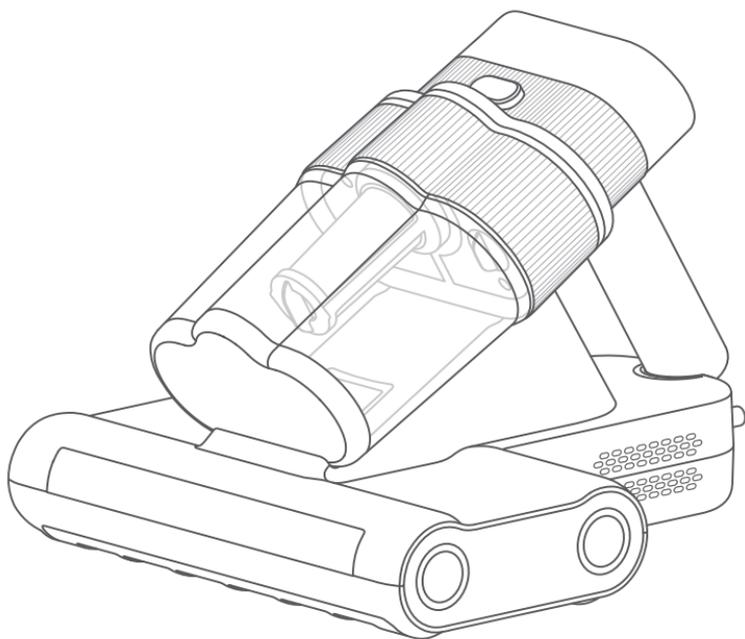

User Manual

Please read this manual carefully before use and keep it for future reference.

ENGLISH



Thank you for purchasing from easyera.
If you have any questions or need further assistance,
please contact us at
support@easy-era.com.

CONTENTS


SAFETY INSTRUCTIONS	01
IN THE BOX	02
PRODUCT OVERVIEW	03
USING THE VACUUM CLEANER	04
Power Connection	04
Power On/Off & Mode Switch	04
Using UV Light & Dust Removal Function	05
Cleaning Instructions	05
CLEANING & STORAGE	06
Cleaning	06
Storage	07
TROUBLESHOOTING GUIDE	08
SPECIFICATIONS	09

SAFETY INSTRUCTIONS

- This product is not suitable for individuals with physical, sensory, or cognitive disabilities (including children) or those lacking experience or knowledge unless they are supervised by someone responsible for their safety or have received prior instructions on using the machine. Always supervise children to ensure they do not use the machine as a toy.
- Keep this product out of reach of children under eight years old. Do not use the vacuum cleaner if it has been dropped, appears visibly damaged, or is malfunctioning. Avoid prolonged operation with the suction port blocked, as this can damage the vacuum cleaner.
- Before use, check that the power supply voltage matches the specifications on the bottom nameplate.
- This machine is intended for indoor use only; do not use it outdoors or on wet surfaces. Ensure the dust cup is correctly installed before use. If not installed properly, it may cause damage or reduce performance. Make sure the dust cup is dry before installation.
- Do not obstruct the machine's air inlet or outlet. If the air inlet is blocked, do not operate the machine.
- Turn off the power before moving the machine. Unplug the machine when not in use or before performing maintenance. When unplugging, pull the plug directly - do not pull the cord.
- Do not use or store the machine near heating devices such as stoves, flammable gasses, and other flammable materials.
- Do not run multiple electrical appliances on the same power strip at the same time.
- If the plug's metal contacts are stained with dust or moisture, clean them with a dry towel. Do not connect to power or operate the machine if the power plug is wet.
- Do not move or lift the machine by its power cord, press the cord under doors, place it near sharp objects, or in tight spaces. Avoid placing the power cord in a position where it may be pinched while operating the machine.
- Do not use the machine to vacuum burning or smoking items, such as cigarettes, sharp objects, or liquids.
- Avoid contact with the plug's metal prongs when plugging in or unplugging. Do not touch the power plug or switch with wet hands. Ensure the machine is unplugged before cleaning, and use only clear water or pure alcohol to clean it.

- Turn off the machine immediately and contact our customer service team if:
Abnormal noises, odors, or smoke occur.
The machine fails to operate when powered on.
- Please note that the machine needs to be used on a flat surface: Not suitable for fine hair of humans and pets; not suitable for long velvet/long fluff carpets. UV-C Bed vacuum cleaner with UV-C light is suitable for beds, mattresses, pillows, cribs, and other flat fabric surface.
- UV-C Warning: The UV-C ultraviolet light can harm skin and eyes. Do not expose people, plants, or animals directly to the UV-C light for a long time. Seek medical attention if discomfort occurs after prolonged exposure.
- Never look directly at the UV-C light tube to avoid injury.
- If the power cord is damaged, it must be replaced by authorized service personnel or professionals from the manufacturer to avoid potential hazards.

IN THE BOX

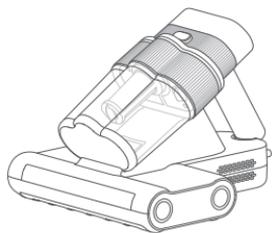

Mattress Vacuum Cleaner x 1






Replacement Sponge Set x 1



User Manual x 1

PRODUCT OVERVIEW

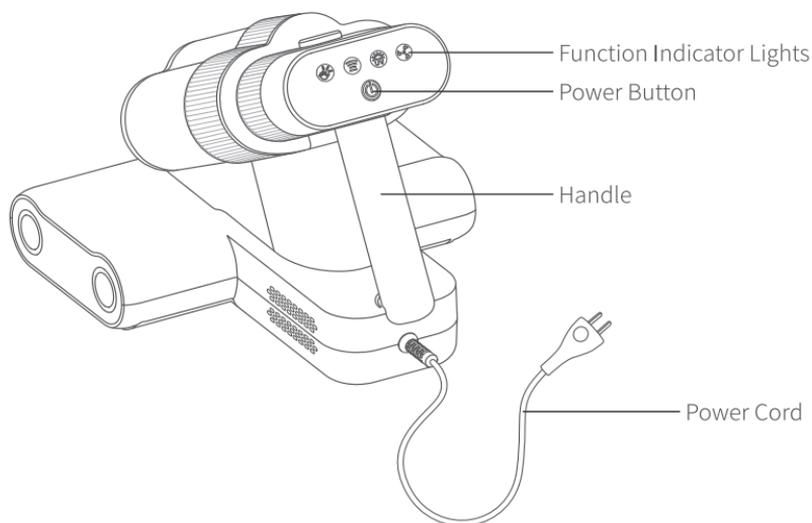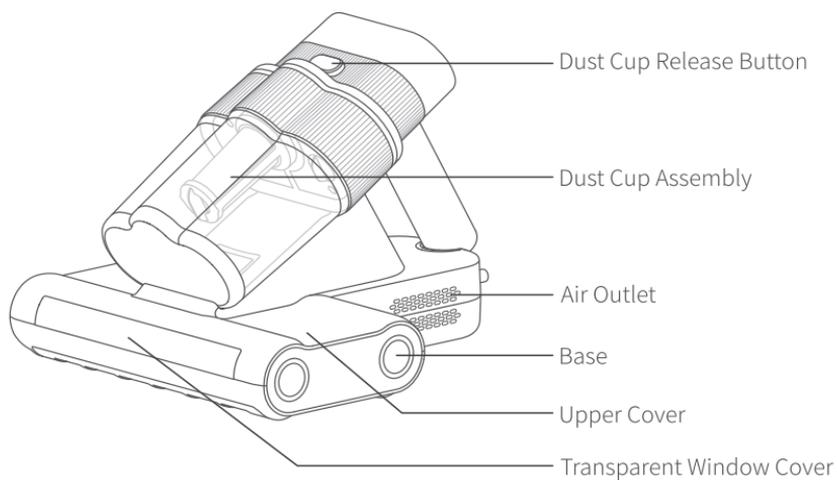


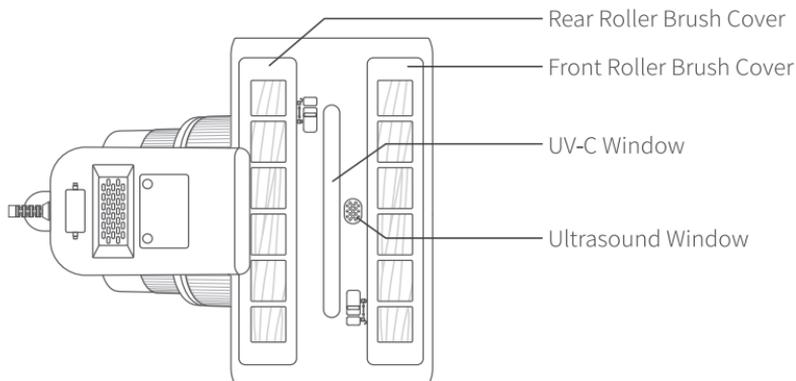

USING THE VACUUM CLEANER


Power Connection

Plug the power cord into an outlet.

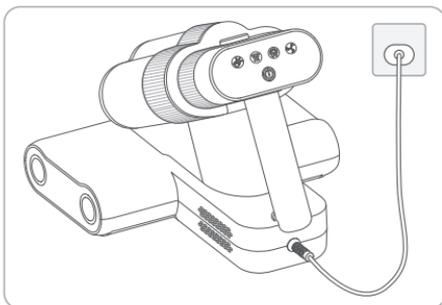

Power On/Off & Mode Switch

Press the **Power Button** to turn the machine on, press it again to switch from lower to high power mode, and press once more to turn off the machine.

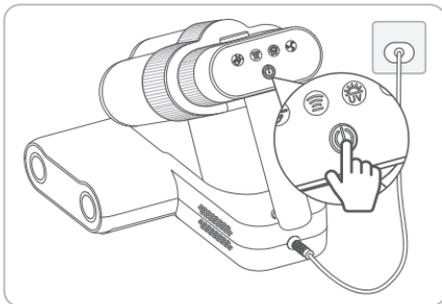

Using UV Light & Dust Removal Function


- When the machine is turned on, the dust removal indicator light will activate. When the machine is close to a surface, the roller brush, UV-C light, and ultrasonic waves will turn on synchronously. All 4 white indicator lights on the control panel will light up.
- When the machine is lifted 0.4 inches (1cm) away from the surface, the roller brush, UV-C light and ultrasonic waves will stop working synchronously and enter standby mode. The roller brush, UV-C light, and ultrasonic indicator lights will turn off, while the dust removal indicator light will stay on.

Cleaning Instructions


For Beds: Push the machine gently while keeping it parallel to the bed edge.



For Pillows, Cushions, etc.: Move the machine from back to front.

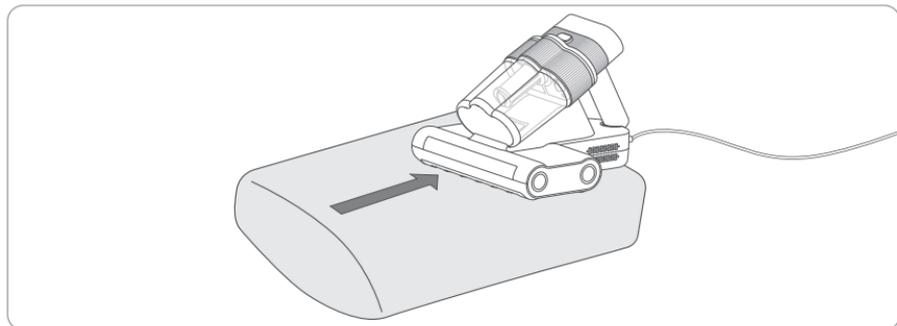


For Carpet Pads: Place the machine flat on the surface and move it up and down.

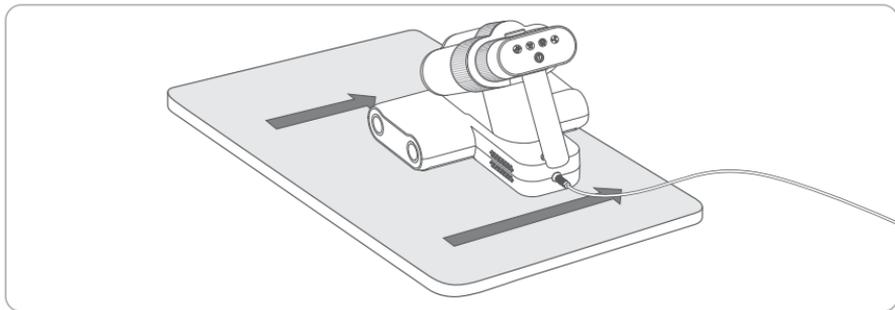

CLEANING & STORAGE

Cleaning

Turn off and unplug the machine. Press the dust cup release button, then lift up and remove the dust cup. Take out the dust cup cover, then clean the garbage. Rinse the filter with water, allow it to dry completely, and reinstall it.

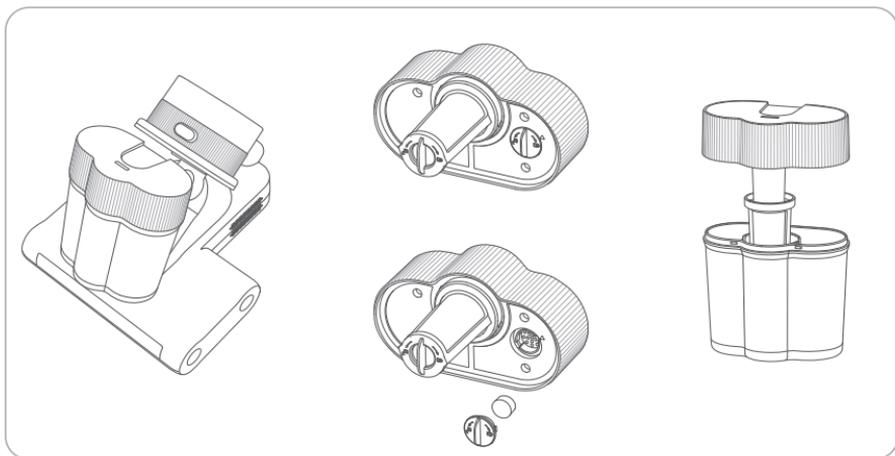

Notes:

- * Unplug the vacuum cleaner before cleaning or maintenance.
- * Clean the dust cup often to prevent malfunction.
- * Clean the high-efficiency filter regularly with a damp, soft cloth and replace it as needed.
- * Regularly wipe the UV light tube, as dust and stains can reduce its effectiveness. Avoid touching the UV light tube with your fingers, as smudges can impact performance. If the UV light tube fails, contact our customer service team for assistance. Do not disassemble it yourself.
- * Wipe the vacuum cleaner's surface with a damp, soft cloth and mild detergent—do not use gasoline or oily substances. Do not use strong cleaning agents, as these may damage the outer surface. Be sure the cloth is damp, not wet, to avoid water entering electrical parts.
- * Avoid placing accessories in a dishwasher for cleaning.
- * Ensure the machine and all accessories are completely dry before reconnecting to power.

Storage

Coil the power cord neatly, then place the machine back into its box for storage.

Notes:

- * Store the machine in a dry location. Do not expose the machine to outdoor humidity.
- * Do not place heavy objects on top of the machine during storage.

TROUBLESHOOTING GUIDE

Issue	Possible Cause(s)	Solution
The vacuum cleaner does not work at all	Power plug is not securely inserted into the socket.	Reinsert the plug.
	No electricity in the socket.	Check the circuit breaker.
	Vacuum cleaner is not turned on.	Press the power button to turn the machine on.
Reduced suction performance	Dust cup is too full.	Empty and clean the dust cup in time.
	Excessive dust on the surface of the sponge filter.	Clean the filter layer.
The display is not working	Circuit board failure.	Repair or replacement.
UV-C light and ultrasonic function not working	Distance between the sensor and the cleaning surface is greater than 1 cm.	Ensure direct contact with the surface.
	UV-C light is damaged.	Repair or replacement.
	Internal parts may be damaged.	
Roller brush is not working	Hair or similar is tangled and the brush is stuck.	Remove the roller brush and clean any entanglements.
	Control circuit board is damaged.	Repair or replacement.

SPECIFICATIONS

Model No.	HS-VC308B
Input	110V~ 50/60Hz
Rated Power	500W
Dimensions	254*295*220mm
Unit Net Weight	4.365lbs (1.98kg)
Unit Gross Weight	5.95lbs (2.7kg)
Working Temperature	14°F to 104°F/-10°C to 40°C