INSIGNIA

QUICK SETUP GUIDE

Essential Accessory Kit for GoPro Action Camera

NS-DGPK10 / NS-DGPK10-C

FEATURES

- Compatible with most GoPro cameras
- Perfect for securing your GoPro to your body, head, car, boat, or other vehicle, or tripod, for capturing hiking, biking, rock climbing, skiing, snowboarding, boating, swimming, and other activities

PACKAGE CONTENTS

· Accessories for GoPro (see table)

Note: Place your GoPro inside its housing (included with or attached to your GoPro, not included with this kit) to mount with these accessories.

· Quick Setup Guide

ITEM	DESCRIPTION
Quick-release buckles	Use to secure your GoPro to the chest strap.
Thumb screws	Use to secure your GoPro to mounts or adapters in this kit or as replacements for other accessories.
Extendable monopod pole	Attach your GoPro to the monopod with the thumb screw to capture striking perspectives, individual shots, or group shots. Twist to loosen the monopod, pull to extend it to the desired length you want, then twist again to secure. Note: DO NOT force the monopod open or closed. It will slide freely when properly loosened.
Head strap	Attach your GoPro using the thumb screw. Adjust the head strap mount to fit comfortably and securely.
Chest strap	Push the quick-release buckle into the grooves on the chest mount until it clicks into place, then attach your GoPro using the thumb screw. Adjust the chest straps to fit comfortably and securely. Note: To remove, press the buckle on the quick-release buckle, then slide it out.

ITEM	DESCRIPTION
Tripod to GoPro mount adapter	Use with the suction cup mount or any other standard tripod.
Flexible 6" mini tripod	Attach your GoPro to the tripod to GoPro mount adapter, then screw it onto the tripod. Stand the tripod upright or wrap the foam legs around objects for better placement.
Suction cup mount	To attach to cars, boats, or other vehicles, screw the tripod to GoPro mount adapter into the mount holder, then attach your GoPro using the thumb screw. Press the suction cup to your vehicle's surface, then push the lock down. Note: Attach the safety cable to prevent your GoPro from falling.
Safety tether cable	Use in any situation where you risk losing your GoPro if it falls (for example, while boating or biking). Connect directly to your GoPro and a fixed object such as a boat railing, sideview mirror, or other suitable location. Note: Do not attach the safety tether cable to your body, clothing, or safety gear.

ITEM	DESCRIPTION
Floating handle	Use as a short handle for filming or to keep your GoPro afloat in the water. Put your GoPro into a waterproof housing (not included), then attach it to the floating handle grip using the thumb screw.
Soft carrying pouch	Convenient transportation for your GoPro and a few accessories. Note: Not intended to hold the entire accessory kit. Do not store wet accessories inside the pouch.

Note: The accessories are waterproof, but must be rinsed with clean, fresh water and allowed to dry completely after use. Items used in salt water must IMMEDIATELY be rinsed with clean, fresh water and dried after use. User is responsible for ensuring that the attached camera is waterproof.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico) www.insigniaproducts.com

GOPRO, HERO, the GOPRO logo, and the GoPro Be a Hero logo are trademarks or registered trademarks of GoPro. Inc.

INSIGNIA is a trademark of Best Buy and its affiliated companies. Distributed by Best Buy Purchasing, LLC ©2016 Best Buy. All rights reserved.

Made in China