

## WAHL 8171 CORDLESS DETAILER LI – USER MANUAL (SUMMARY)

### SAFETY INSTRUCTIONS

- For professional dry-use only.
- Do not use near water, in shower, or on wet surfaces.
- Unplug charger before cleaning.
- Keep away from children.

### FEATURES

- Model: 8171 Cordless Detailer Li
- Runtime: 100 minutes (Lithium-Ion)
- Charge Time: 60 minutes
- Blade: T-Wide High-Carbon Steel
- Usage: Dry trimming, detailing, edging

### CHARGING INSTRUCTIONS

1. Plug charging stand into wall outlet (120V).
2. Mount trimmer firmly into stand.
3. LED indicator shows charging status.
4. Full charge reached in approximately 60 minutes.

### OPERATION

- Turn unit ON with side switch.
- Use T-wide blade for detailing and edge-ups.
- Always operate on dry hair only.

### MAINTENANCE

- Clean blade with brush after every use.
- Apply 2–3 drops of blade oil to teeth while running.

- Replace blade when dull (compatible: #2215 / #2227).
- Do NOT rinse under water.

## TROUBLESHOOTING

- Low power: fully recharge unit.
- Pulling hair: clean and oil blade.
- Overheating: turn off and allow to cool.

## WARRANTY

- 1-Year Limited Warranty (Parts & Labor)
- USA-Made Unit

For full detailed manual, visit: <https://wahlusa.com>