

Quick Start Guide

10.1" Quad-Core Tablet



ematic

 
EGQ236BD

GETTING STARTED

Turning the Tablet On or Off

Turn on the tablet: Press and hold the power button to start device.

Turn off the tablet: Press and hold the power button to power off the interface. Touch the “Power off” button to turn off the device.

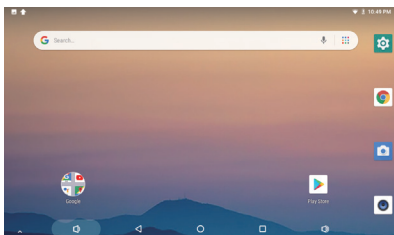


Turning the Screen On or Off

When the screen is bright, briefly press the power key to turn off the screen. Briefly press the power key again to turn on screen.

To conserve battery power, the screen can be set to turn off automatically when the tablet is not in use (between 1 minute and 30 minutes). This “Screen timeout” option can be found in the Display menu.

Unlocking the Screen

 When the screen turns off, you will have to unlock the screen when you turn it back on. To unlock the screen, drag the lock icon upward across the screen.

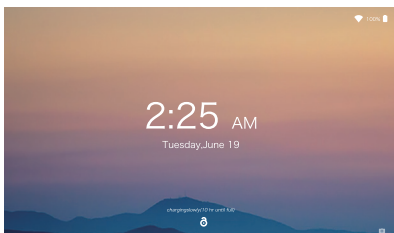

TOUCH SCREEN BASICS

Tap the screen once to activate or open something.



Touch and hold to move an item by dragging.

*In many apps touch and hold can offer more options.



Zooming: Double tap quickly to zoom into a webpage, picture, or map. Some apps allow you to zoom in and out by touching the screen with two fingers and pinching them together or spreading them apart.



TIP: You can flick the screen with your finger to quickly scroll through a long list, such as a library of music.

 
Tap a specific location on the screen where you would like to enter text. The on-screen keyboard will pop up.

INSTALLING APPLICATIONS

You can download and install additional applications from the device's applications marketplace, the web browser, or other sources.

The tablet must be set to allow installation of applications from non-Market sources. The "Unknown Sources" option can be set in the Application Settings menu.

UNIT AT A GLANCE

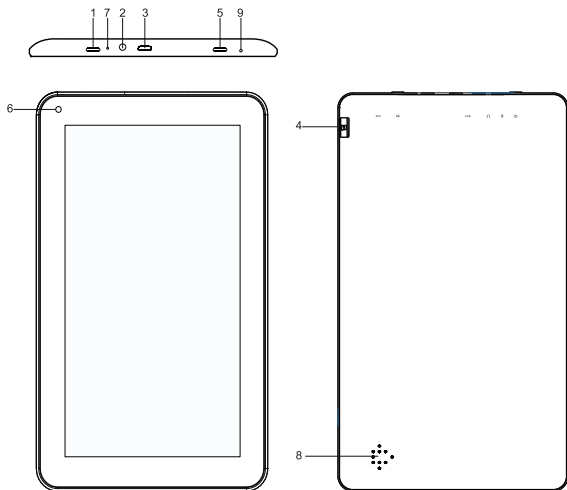

1. **Power Button:** Press this button to turn your device on or off.
2. **Headphone Jack:** Audio output connection for headphones.
3. **Micro USB Port:** Connect to a USB device.
4. **SD Card Slot:** Load external microSD memory cards here.
5. **Return:** Press this button to go back to previous screen.
6. **Front Camera:** Take photos or videos.
7. **Reset:** Restore the device to it's default factory settings.
8. **Speakers:** Project crystal-clear audio directly from your device.
9. **Microphone:** Capture audio signals for calls or voice recordings.

SPECIFICATIONS

- Android Oreo (Go Edition)
- 10.1" 1024 x 600 Screen
- Capacitive Multi-Touch Type
- 1.2GHz Quad-Core Processor
- 1GB RAM
- 16GB of Built-in Storage
(formatted capacity will be less)
- WiFi 802.11 b/g/n+
- 0.3MP Front Camera
- Micro SD Card Slot - Up to 64GB
- USB Connection
- Bluetooth 4.0

CUSTOMER SERVICE

Visit **ematic.zendesk.com** for customer support regarding your device. To submit a request, fill out the required information online. You will be provided a ticket number regarding your issue which you can refer to when contacting us further.

You can also reach an Ematic customer service representative by calling: 1-888-968-1985.

We are open Monday - Friday 9 AM - 5 PM PST, except weekends and major holidays. Ematic strongly urges customers to email their inquiry before calling, as this will enable us to better assist you.

Our email address is: **customerservice@ematic.us**

Please make sure to include the model number and brief description of the problem you are encountering.

Thank you for purchasing an Ematic product.

©2018 Ematic. All Rights Reserved. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License. This device complies with part 15 of the FCC Rule. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Micro SD card not included. 1 year limited warranty from date of purchase, 90 days only on labor.