

INSIGNIA


QUICK SETUP GUIDE DVD Player NS-HDVD18

PACKAGE CONTENTS

- DVD player
- Remote control
- AAA batteries (2)
- AV cable
- Quick Setup Guide


FEATURES

Front view

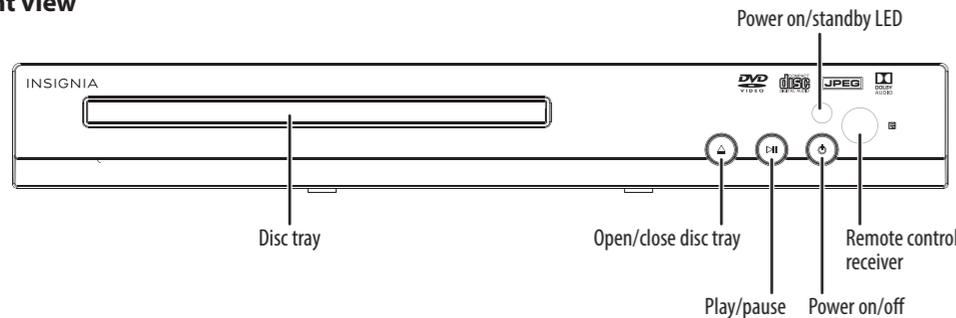


Before using your new product, please read these instructions to prevent any damage.

Back view

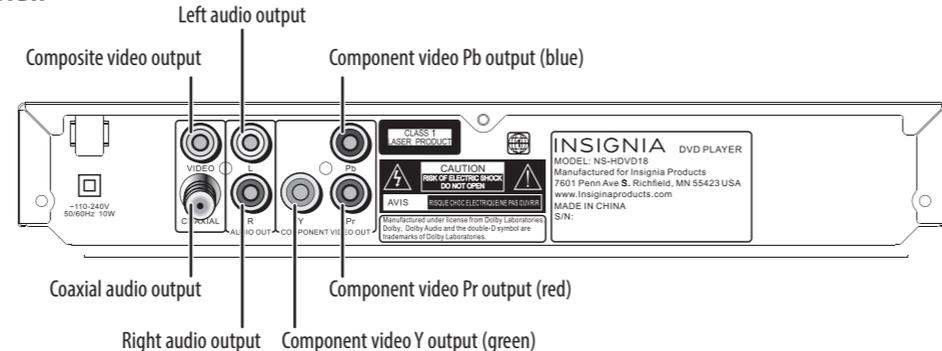

Remote control

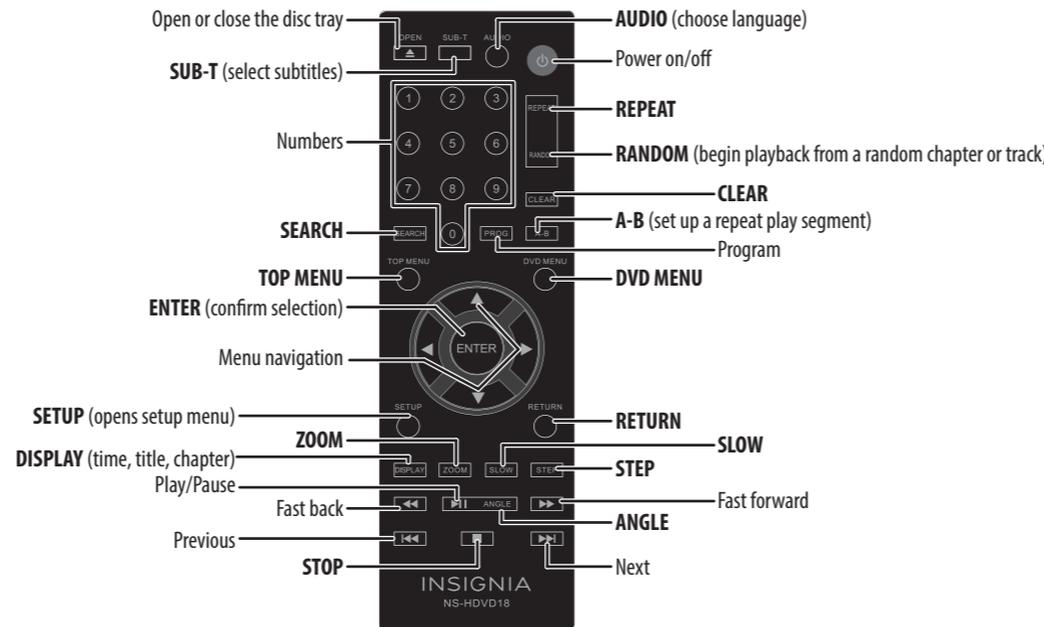

SETTING UP YOUR DVD PLAYER


1 Composite: Plug the yellow connector from the included AV cable into the **VIDEO** jack on your DVD player. Plug the other end of the yellow cable into the composite video in jack on your TV or monitor.

-OR-


2 Component: Plug the red, green, and blue connectors from an RCA cable (not included) into the **COMPONENT VIDEO OUT** connectors (Y, Pb, and Pr) on the back of your DVD player and into the component video in jacks on your TV or monitor, making sure to match the colors on the connectors with the jacks.

Note: You may have to select the correct input on your TV or monitor.

Component video (better)

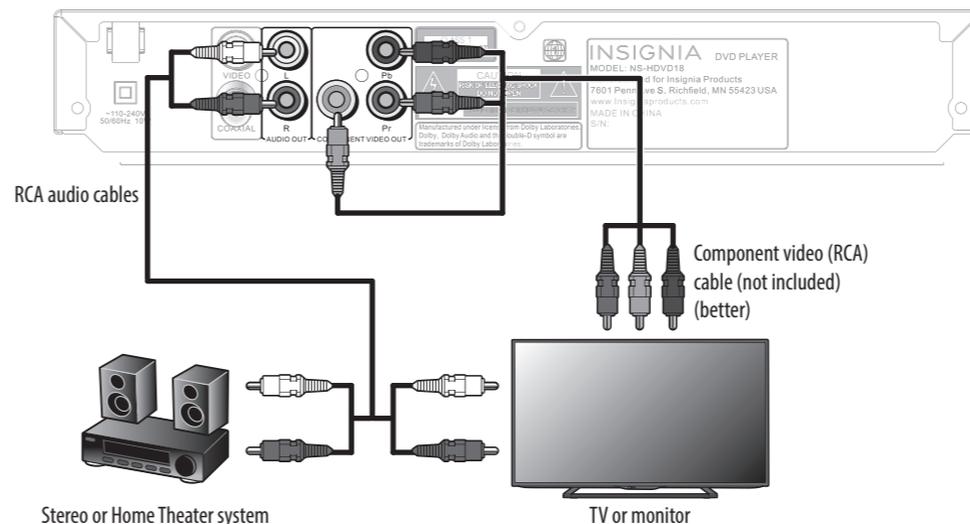

AV (good)

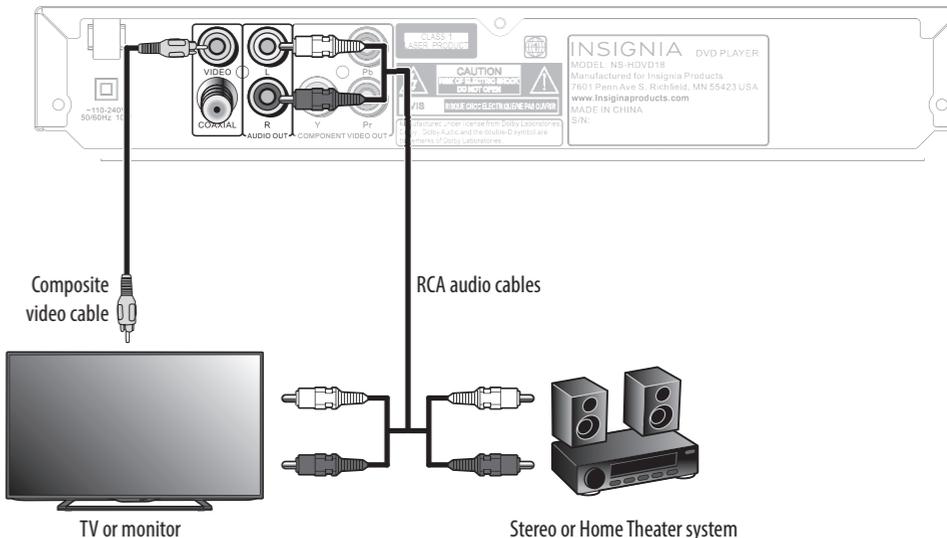

3 Composite or Component: Plug the white (left) and red (right) connectors from an RCA audio cable to the **L** and **R AUDIO OUT** jacks on your DVD player to the white (left) and red (right) audio in connectors on your TV, monitor, stereo, or home theater system.

Note: You can also connect a coaxial cable from your DVD player to an alternate audio device.

USING YOUR DVD PLAYER

Powering your DVD player

- 1 Make sure that your DVD player is connected to power.
- 2 Press the  (power) button on the front of your DVD player, or on the remote control, to turn it on.
- 3 The start-up picture (DVD VIDEO) appears on the screen.
- 4 Press the  (power) button on the front of your DVD player, or on the remote control, to turn it off.

Playing a DVD or audio CD

- 1 Press the  (open/close) button on the front of your player, or on the remote control, to open the disc tray.
- 2 Place a disc, label side up, in the disc tray, then close the tray. The disc starts playing automatically.

Controlling DVD or audio CD playback

- Press  (**STOP**) once to stop playback. Your DVD player remembers where you stopped. If you press , your DVD player starts playing at the point where you stopped.
- Press  (**STOP**) twice to stop playback. If you press , your DVD player starts playing at the beginning of the disc.
- Press  to pause playback. Press this button again to resume playback.
- Press  to fast-forward the disc. Each time you press this button, the fast-forward speed changes from 2 to 4 to 8 to 16 to 32 times the normal speed.
- Press  to fast-reverse the disc. Each time you press this button, the fast-reverse speed changes from 2 to 4 to 8 to 16 to 32 times the normal speed.
- Press  (**NEXT**) to go to the next title, chapter, or track.
- Press  (**PREV**) to go to the previous title, chapter, or track.

Adjusting the volume

- Adjust the volume of playback by turning it up or down on your TV, stereo system, or home theater.

For information about using the Setup menus see your online *User Guide*.

TROUBLESHOOTING

No sound or distorted sound.

- Adjust the volume on your TV, monitor. or amplifier.
- Make sure that the sound in not muted.
- Make sure that all cables are inserted correctly into the appropriate jacks. Make sure that the sound in not muted on your TV , monitor, or amplifier.

Disc does not play.

- Make sure that the disc is inserted with the label side up.
- Make sure that the disc is compatible with your DVD player. Your DVD player can play region code 1 DVDs and audio CDs. Blu-ray and 3D discs will not play.
- Make sure that the correct input is selected on your TV or monitor.

Play starts, then stops immediately.

- Make sure that the region code for a DVD matches the region code for your DVD player. Your DVD player's region code is 1. The DVD's region code is on the DVD or the DVD packaging.
- Make sure that the disc is not dirty.
- If condensation has formed inside your DVD player, let your DVD player dry out.

SPECIFICATIONS

Compatible discs	Compatible discs: CD Digital Audio 12cm, CD-R, CD-RW, DVD-Video 12cm, DVD-R, DVD-RW, DVD+R, DVD+RW, DVD-R DL Dual Layer, DVD+R Dual Layer. Does not support Blu-ray, 3D
Signal system	NTSC
Video output	Electrical output:1.0±0.2V Resistance: 75 ohms Unbalanced negative
Audio S/N	Equal to or better than 80 dB
Dynamic range	Equal to or better than 80 dB
Wave length	650 nm/795 nm
Power source	110-240 V ~ 50/60 Hz 10W
Weight	2.2 lbs. (1.0 kg)
Dimensions (W × H × D)	10.24 × 7.28 × 1.50 in. (260 × 185 × 38 mm)

SAFETY INFORMATION

- Do not use this apparatus near water.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- To reduce the risk of fire or electric shock, do not expose this device to rain, moisture, dripping, or splashing, and do not place objects filled with liquids, such as vases, on it.

LEGAL NOTICES

FCC Part 15

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2017 Best Buy. All rights reserved.

Made in China