

INSIGNIA™

# 1.5 L Electric Kettle

NS-TK15BK6/NS-TK15BL6/NS-TK15PK6



Before using your new product, please read these instructions to prevent any damage.

# Insignia 1.5 L Electric Kettle

## Contents

- Introduction ..... 2
- IMPORTANT SAFEGUARDS..... 2
- Features ..... 5
  - Package contents ..... 5
  - Main features ..... 5
- Using your electric kettle ..... 6
  - Boil-dry protection..... 7
- Cleaning and maintaining your electric kettle ..... 7
  - Removing mineral deposits ..... 7
  - Cleaning the outside ..... 7
  - Cleaning the filter ..... 7
  - Storing your electric kettle ..... 7
- Troubleshooting ..... 8
- Specifications ..... 8
- ONE-YEAR LIMITED WARRANTY - INSIGNIA ..... 9

## Introduction

Congratulations on your purchase of a high-quality Insignia product. Your NS-TK15BK6, NS-TK15BL6, or NS-TK15PK6 represents the state of the art in electric kettle design and is designed for reliable and trouble-free performance.

## IMPORTANT SAFEGUARDS



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within your electric kettle.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying your electric kettle.

- 1 Read all Instructions.
- 2 Do not touch hot surfaces. Use handles or knobs.
- 3 To protect against fire, electric shock and injury to persons do not immerse cord, plugs, or the kettle in water or other liquid.
- 4 Close supervision is necessary when any appliance is used by or near children.
- 5 Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- 6 Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- 7 The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- 8 Do not use outdoors.
- 9 Do not let cord hang over edge of table or counter, or touch hot surfaces.
- 10 Do not place on or near a hot gas or electric burner, or in a heated oven.
- 11 Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to <sup>2</sup>off,<sup>2</sup> then remove plug from wall outlet.
- 12 Do not use appliance for other than intended use.
- 13 Do not attempt to modify or extend the power cord of this appliance.
- 14 Do not handle the plug with wet hands. This could result in an electric shock.
- 15 Unplug the power cord by holding the plug, never by pulling the cord.
- 16 This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## SAVE THESE INSTRUCTIONS



### WARNING

#### Electric Shock Hazard

**Failure to follow these instructions can result in electric shock, fire, or death.**

### Additional safety concerns

- 1 Before connecting the kettle to the power supply, make sure that the voltage indicated on the bottom of the kettle and base corresponds with the voltage in your home. If this is not the case, contact your dealer and do not use the kettle.
- 2 The attached base cannot be used for other than its intended use.
- 3 Even though there is boil-dry protection built into the kettle, we recommend that you do not operate the kettle without water to avoid damaging the heat elements.
- 4 Unplug the kettle when not in use.
- 5 If you try to operate the kettle without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling it with cold water.
- 6 To prevent injury or damage from an overturned kettle, make sure that the kettle is used on a firm and flat surface where children can't touch it.
- 7 Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
- 8 Be careful when opening the lid for refilling when the kettle is hot.
- 9 Use the handle to avoid touching the hot surface of the kettle.
- 10 Use extreme caution when moving an appliance containing hot water.
- 11 This kettle is not a toy. Do not let the children play with it.
- 12 Avoid contacting steam from the spout when water is boiling, or just after it has switched off. Do not remove the lid too soon.
- 13 Unplug the kettle from the wall outlet when not in use and before cleaning. Allow it to cool before putting on or taking off parts and before cleaning the kettle.
- 14 Always make sure that the lid is closed and that you do not lift it while the water is boiling. Scalding may occur if the lid is removed during use.
- 15 Do not move the kettle while it's on.
- 16 Only use the kettle with the base provided.
- 17 If the kettle is overfilled, boiling water may be ejected.
- 18 This kettle is intended to be used in household and similar environments.

### Notes on the plug and the power cord

- a) A short power-supply cord (or detachable power-supply cord) should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a longer detachable power-supply cord or extension cord is used:
  - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance; and
  - 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.


## Features

- 120V/60Hz/1500W
- 1.5L Capacity
- 360° rotational plastic kettle

## Package contents

- 1.5 L Electric kettle
- *User Guide*

## Main features

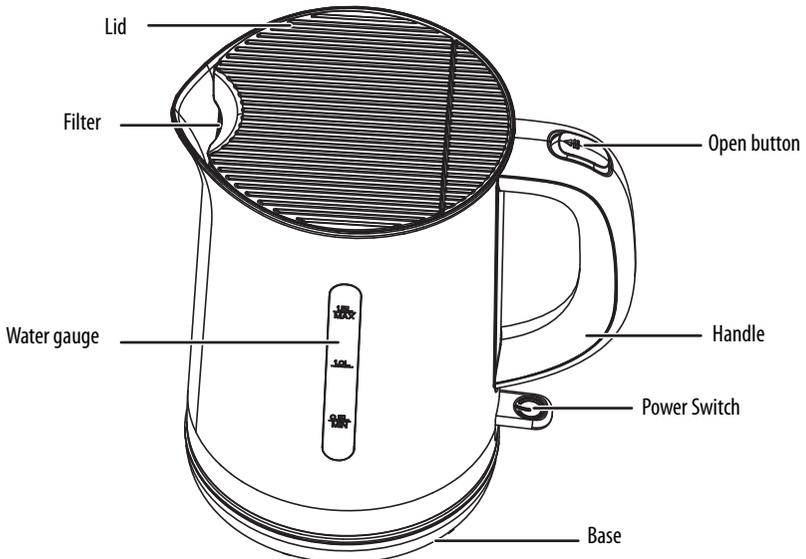

## Using your electric kettle

**Note****Using your electric kettle for the first time**

Clean your electric kettle before using it by boiling two full kettles of water, then discarding the water.

- 1 Place the base on a flat, heat resistant surface, as close as possible to a power outlet.
- 2 Remove the kettle from the base and open the lid by pressing the open button.
- 3 Fill with the desired amount of water.

**Notes**

- Always fill the kettle between the minimum (0.5L) and maximum (1.5L) marks. Too little water results in the kettle turning off before the water has boiled.
- Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Make sure that the lid is firmly in place before connecting the power cord to the outlet.
- Never fill the kettle with any liquid other than water.

- 4 Close the lid. Position the kettle on the base, making sure that the kettle contacts the base completely.
- 5 Connect the plug to a power outlet and press the power switch down to turn on the kettle. The light turns on and the water begins to heat. After the water has boiled, the kettle turns off automatically and the light turns off.

You can shut off the power at any time by turning off the power switch.

**Note**

Make sure that the power switch is clear of obstructions and the lid is firmly closed. The kettle will not turn off if the power switch is constrained or if the lid is left open.

- 6 Lift the kettle from the base, then pour the water.

**Caution**

- Use caution when pouring the water from your kettle. Contacting boiling water may result in a serious burn.
- Do not open the lid while the water in the kettle is hot.

- 7 The kettle will not re-boil until the switch is turned on. Allow the kettle to cool for 15~20 seconds before trying to reheat the water.

The kettle may be stored on the base when not in use.

**Note**

Make sure that the power cord is unplugged when the kettle is not in use.

## Boil-dry protection

If you try to operate the kettle without water, the boil-dry protection will automatically turn it off. If this should occur, allow the kettle to cool before filling with cold water.

## Cleaning and maintaining your electric kettle

- Always unplug the power cord and allow the kettle to cool down completely before cleaning.
- Never immerse the kettle, cord, or base in water, or allow moisture to contact with these parts.

## Removing mineral deposits

Mineral deposits commonly found in tap water may cause the kettle interior to discolor. To remove this build-up, use a non-toxic liquid descaler.

**You can also:**

- 1 Fill the kettle with three cups of white vinegar and the remainder with water and let it stand overnight. **Do not boil.**
- 2 Empty the solution from the kettle. Remove remaining stains with a damp cloth.
- 3 Boil two full kettles of water, then discard the water.

## Cleaning the outside

Wipe the outside of your electric kettle with a damp cloth or sponge.

**Caution**

Do not use chemicals, steel wool, or abrasive cleaners to clean the outside of the kettle.

## Cleaning the filter

Remove the filter periodically and clean it with a damp cloth.

## Storing your electric kettle

When not in use, the power cord can be wound around the cord storage under the base of the kettle.

# Troubleshooting

**Caution**

Do not try to repair your kettle yourself. Doing so invalidates the warranty.

Problem	Possible solution
The kettle and indicator light do not work when the power switch is turned on.	<ul style="list-style-type: none"> <li>• Make sure the kettle is seated properly on the base and that the base is connected to a functioning electrical outlet.</li> <li>• If the problem persists, please contact our customer service department.</li> </ul>
The water is boiling, but the power switch and indicator light are still on.	<ul style="list-style-type: none"> <li>• The auto-shut off function so not operate properly if the lid is not completely closed. Let the kettle cool, then make sure that the lid is properly locked into place.</li> <li>• If the problem persists, please contact our customer service department.</li> </ul>
The kettle will not turn on.	<ul style="list-style-type: none"> <li>• Make sure that the kettle is seated properly on the base and that the base is connected to a functioning electrical outlet.</li> <li>• Water or debris on the bottom of the kettle or on the base may interfere with the functioning of the kettle. Be sure that the bottom of the kettle and the base are dry and free of debris.</li> <li>• If the problem persists, please contact our customer service department.</li> </ul>
There are mineral deposits inside the kettle.	<ul style="list-style-type: none"> <li>• A certain amount of scale build-up is normal after long periods of use and is caused by minerals contained in hard water. The best way to prevent mineral deposits is to always use distilled water in the kettle.</li> <li>• To remove deposits, try filling the kettle with water and adding a few slices of lemon, then boil. If this does not work, see "Removing mineral deposits" on page 7.</li> </ul>

# Specifications

Dimensions (WxDxH)	8.6 x 5.9 x 8.8 in. (219.5 x 149.5 x 224 mm)
Weight	31.75 oz. (0.9 kg)
Power requirements	1500W
Capacity	1.6 qt. (1.5 L)



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

# ONE-YEAR LIMITED WARRANTY - INSIGNIA

## Definitions:

The Distributor\* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at [www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca) and is packaged with this warranty statement.

## How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

## What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

## How to obtain warranty service?

If you purchased the Product at a Best Buy or Future Shop retail store location, please take your original receipt and the Product to any Best Buy or Future Shop store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from a Best Buy or Future Shop online web site ([www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca)), mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States call 1-888-BESTBUY, Canada call 1-866-BESTBUY for Future Shop call 1-800-663-2275. Call agents may diagnose and correct the issue over the phone.

## Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy or Future Shop branded retail stores or websites to the original purchaser of the product in the county where the original purchase was made.

## What does the warranty not cover?

This warranty does not cover:

- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence

- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold “as is” or “with all faults”
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

For customer service please call 1-877-467-4289

[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Registered in some countries.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2015 Best Buy. All rights reserved.

Made in China

# INSIGNIA™

[www.insigniaproducts.com](http://www.insigniaproducts.com)

1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Registered in some countries.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2015 Best Buy. All rights reserved.

Made in China.

V2 ENGLISH  
15-0277