

# Recliner Assembly Instructions

Your recliner comes packaged in one box.

**DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.**

Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching the finish.

Estimated Assembly  
Time in Minutes

★ ★ ★  
<15 <45 60+


 
## Parts List

- A** 1 x Back
- B** 1 x Seat
- C** 1 x Left Back wing
- D** 1 x Right Back wing




- E** 2 x Front Legs
- F** 2 x Back Legs
- G** 4 x Plastic Washers

\* Replaceable Parts  
Legs and back wing can be found under the seat

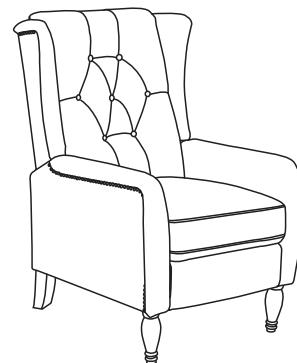


## Assembly

### Step 1

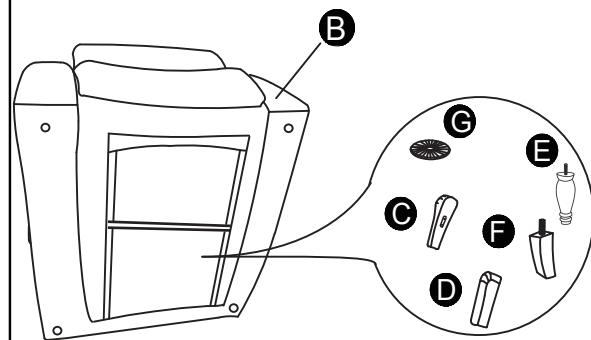


### Step 2

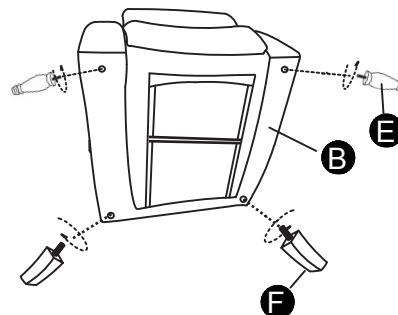


### Step 3


Line up brackets. Push down hard on the back. Make sure bracket locks into place on both sides. There should be no gaps between the back and the seat.

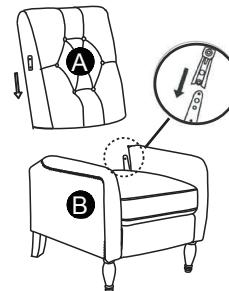

### Step 4

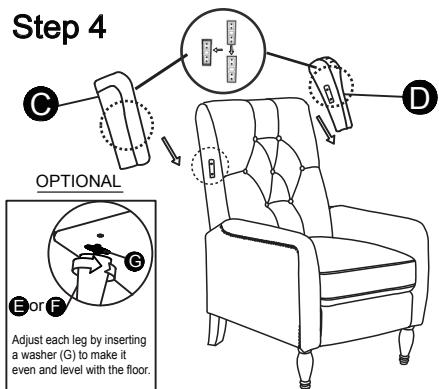

### Step 5

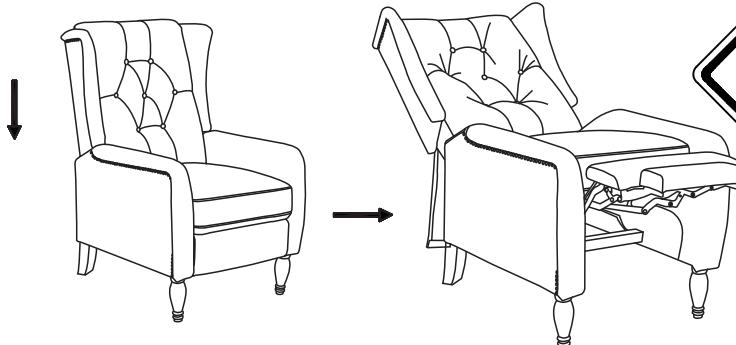

Your recliner style may differ from images. Care for your furniture by periodically tightening all legs.

**CAUTION:** Tighten all components securely before use. Failure to do so may result in personal injury.

About your furniture piece:

- Softening of foam is natural and will happen over time with use.
- Fabric will fade or discolor in direct sunlight. Minimize exposure to direct sunlight to extend the life of your furniture.
- Wood grain, knots, streaks, and color variation occur naturally in wood and are not considered defects.