

INSIGNIA™

QUICK SETUP GUIDE

Advanced Camera Accessory

NS-DCKIT10/NS-DCKIT10-C



Before using your new product, please read these instructions to prevent any damage.

PACKAGE CONTENTS

- Advanced camera accessories (see table)
- *Quick Setup Guide*

FEATURES

- Memory card reader works with Windows® 10, Windows® 8, Windows® 7, Windows Vista®, and Mac OS X 10.4 or higher
- Remote shutter works with most Canon, Nikon, and Sony cameras
- Bubble level attaches to a standard hot shoe
- HDMI cable connects to a mini/micro HDMI output


Note: Some products may not work with all cameras.

ITEM	DESCRIPTION
 <p>Lens cap keeper</p>	<p>Connects your lens cap to your camera lens.</p> <p>To attach, remove the protective film from the foam pad, then press it firmly to the lens cap. Place the elastic band around the camera lens.</p> <p>Note: Designed for one-time use. It cannot be switched between lens caps.</p>
 <p>Cleaning kit</p>	<p>Keeps your camera clean. Includes a lens cleaning pen, dust blower, liquid cleaning solution, lens cleaning tissues (50 sheets), microfiber cleaning cloth, and carrying pouch.</p> <p>Start cleaning with the lens pen (brush, followed by gentle swirling of the cleaning pad) and dust blower (for any loose dust or debris). If debris remains, use a small amount of liquid cleaning solution with a lens tissue to remove. The microfiber cloth can be used for cleaning LCD screens.</p>
 <p>LCD screen protectors</p>	<p>Attach to your digital camera's display to protect it from scratches. Includes a squeegee to ensure a smooth application.</p> <p>To install, DO NOT remove the backing until you have cut it to size. Clean the screen completely with a microfiber cloth before installing. Use scissors to cut the screen protector to the size of your screen. It is best to have the size slightly smaller instead of larger. Remove the backing and carefully place on the LCD screen. Use the squeegee to remove any air bubbles.</p>
 <p>Memory card case</p>	<p>Stores up to four SD cards, four CF cards, and four MicroSD cards. Memory cards must be removed from their plastic carrying case before being placed in this case.</p>

ITEM	DESCRIPTION
 <p>USB 3.0 memory card reader</p>	<p>Transfers photos between your SD or microSD memory card and a computer. See "Using your card reader" for more information.</p>
 <p>HDMI cable with mini/micro adapter</p>	<p>Connects to your camera's mini/micro HDMI port to view photos on an HDTV. Compatible with cameras that have an HDMI output. Included adapter allows for use with both mini and micro HDMI outputs.</p>
 <p>Bubble level</p>	<p>Connects to your camera's hot shoe to accurately position your camera horizontally and vertically for high-quality stills and videos.</p>
 <p>IR remote shutter</p>	<p>Remotely activates your camera's shutter. Works with Canon, Nikon, and Sony cameras that have remote shutter capabilities. See "Using your IR remote shutter" for more information.</p>

USING YOUR CARD READER

- 1 Connect the card reader to your computer's USB port. Drivers are automatically installed.
- 2 Insert your memory card into the correct slot.
 - Insert cards into the microSD slot with the label-side down.
 - Insert cards into the SD slot with the label-side down.

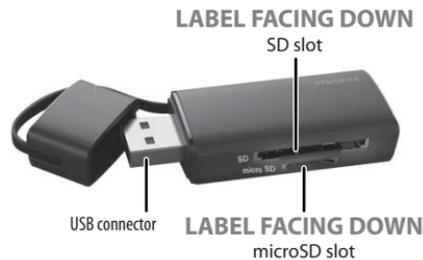

- 3 If connecting to a Windows computer, open *Computer* or *This PC*, then double-click your memory card's drive to access files.
OR
If connecting to a Mac computer, open *Finder*, then click your memory card's drive in the menu on the left to access files.

USING YOUR REMOTE SHUTTER

- 1 Set your camera to IR mode. See the instructions that came with your camera for more information.
- 2 Attach your camera to a tripod, or place it on a steady surface like a shelf or table.
- 3 Point your shutter control directly at your camera's IR receiver, then press the shutter button. When your camera receives the IR signal, it automatically focuses and takes a picture.



ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)
www.insigniaproducts.com

All other trademarks are property of their respective owners.

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2017 Best Buy. All rights reserved.
Made in China