

*Rangaire*

Product Installation & User Manual



# Rangaire

Rangaire: 36" Electric Range | RRE361TS

---

<b>Safety Requirements</b> .....	1
----------------------------------	---

---

<b>INSTALLATION REQUIREMENTS</b> .....	4
Safety Requirements .....	4
Parts Supplied .....	5
Ventilation Requirements .....	6
Electrical Requirements .....	7
Tools and Parts .....	8
Range Dimensions .....	9

---

<b>INSTALLATION INSTRUCTIONS</b> .....	11
Unpack Range .....	12
Install Leveling Feet and Back Panel .....	12
Install Anti-Tip Bracket .....	13
Electrical Connection .....	14

---

<b>Surface and Oven Cooking</b> .....	17
Location Of The Burners .....	17
Description Of Symbols .....	17
Setting Surface Controls .....	18
Surface Cooking Utensils .....	19
Setting Oven Clock and Timer .....	20
Oven Cooking .....	21
Setting Oven Controls .....	22
Cooking Instructions .....	23
Care and Cleaning .....	25

---

<b>Solutions To Common Problems</b> .....	27
Warranty .....	29



**YOUR SAFETY AND THE SAFETY OF OTHERS ARE VERY IMPORTANT.**  
 We have provided many important safety messages in this manual and on your appliance.  
 Always read and obey all safety messages.

	<p><b>This is the safety alert symbol.</b>                  This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and either the word "DANGER", "WARNING" or "CAUTION".</p>
<p> <b>DANGER</b></p> <p> <b>WARNING</b></p> <p> <b>CAUTION</b></p>	<p>An imminently hazardous situation. You could be killed or seriously injured if you don't immediately follow instructions.</p> <p>A potentially hazardous situation which, if not avoided, could result in death or serious bodily injury.</p> <p>A potentially hazardous situation which, if not avoided, may result in moderate or minor injury.</p>
<p>All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.</p>	

** WARNING**

- Remove all tape and packaging before using the appliance. Never allow children to play with packaging material. Do not remove the model/serial plate attached to the appliance.
- Be sure your appliance is properly installed and grounded by a QUALIFIED TECHNICIAN in accordance with the National Fuel Gas Code ANSI Z223.1—latest edition in the United States, or in Canada CAN/CGA B149.1, and CAN/CGA B149.2, and the National Electrical Code ANSI/NFPA No. 70—latest edition in United States, or in Canada CSA Standard C22.1, Canadian Electrical Code, Part 1, and local code requirements. Install only as per installation instructions provided in the literature package for this appliance.

**⚠ WARNING**



**FIRE HAZARD**

**RANGE SAFETY**

If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

**⚠ WARNING**

**Never Operate the Top Surface Cooking Section of this Appliance Unattended**

Failure to follow this warning statement could result in fire, explosion, or burn hazard that could cause property damage, personal injury, or death.

If a fire should occur, keep away from the appliance and immediately call your fire department.

**DO NOT ATTEMPT TO EXTINGUISH AN OIL/GREASE FIRE WITH WATER.**

**⚠ WARNING**

**If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.**

**FOR YOUR SAFETY:**

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Installation and service must be performed by a qualified installer. Ask your dealer to recommend a qualified technician and an authorized repair service. Know how to disconnect the electrical power to the appliance at the circuit breaker or fuse box in case of an emergency.
- Do not repair or replace any part of the appliance unless specifically recommended in the manuals. All other servicing should be done only by a qualified technician. This may reduce the risk of personal injury and damage to the appliance.
- Proper Installation – The range, when installed, must be electrically grounded in accordance with local codes or, in the absence of local codes, with the National Electrical Code, ANSI/NFPA 70. In Canada, the range must be electrically grounded in accordance with Canadian Electrical Code. Be sure the range is properly installed and grounded by a qualified technician.
- Disconnect power before servicing.
- Never modify or alter the construction of the appliance by removing panels, wire covers or any other part of the product.
- Injuries may result from the misuse of appliance doors or drawers such as stepping, leaning, or sitting on the doors or drawers.
- Overhead range hoods, which operate by blowing a downward air flow on to a range, shall not be used in conjunction with gas ranges other than when the hood and range have been designed, tested and listed by an independent test laboratory for use in combination with each other.
- Ensure that the room is well ventilated by keeping the air intakes open and in good working order or by installing an extractor hood with discharge pipe. If the appliance is used intensively for a long time the effectiveness of the ventilation will have to be increased, for example by opening a window or increasing the power of any electric extractor fan.
- Flammable materials should not be stored on the appliance or near surface units. This includes paper, plastic and cloth items, such as cookbooks, plastic ware and towels, as well as flammable liquids. Do not store explosives, such as aerosol cans, on or near the appliance. Flammable materials may explode and result in fire or property damage.
- Maintenance – Keep range area clear and free from combustible materials, gasoline, and other flammable vapors and liquids.
- Storage in or on the Range – Flammable materials should not be stored in an oven or near surface units.

**⚠ DANGER**

Do not store items of interest to children in the cabinets above the appliance or on the backguard of a range. Children should not be left alone or unattended in the area where appliance is in use. Do not allow children to climb or play around the appliance. They should never be allowed to sit or stand on any part of the appliance. Children climbing on the appliance to reach items could be seriously injured.

**⚠ WARNING****FOR YOUR SAFETY:**

- **DO NOT TOUCH THE COOKING SURFACE, THE BURNERS, GRATES OR ANY AREAS NEAR THEM.** Surface burners or appliance may be hot even though flames are not visible. Areas near surface burners or appliance may become hot enough to cause burns. During and after use, do not touch, or let clothing or other flammable materials touch these areas until they have had sufficient time to cool.
- Do not wear loose-fitting or hanging garments while using the appliance. Do not let clothing or other flammable materials contact hot surfaces.
- Smother grease fires with a pan lid, or use baking soda, a dry chemical or foam-type extinguisher.
- Use an extinguisher **ONLY** if:
  1. You know you have a Class A, B, C extinguisher, and you already know how to operate it.
  2. The fire is small and contained in the area where it is started.
  3. The fire department is being called.
  4. You can fight the fire with your back to an exit.
- When heating fat or grease, watch it closely. Fat or grease may catch fire if allowed to become too hot.
- Use only dry potholders. Moist or damp potholders on hot surfaces may result in burns from steam. Do not let potholders touch hot heating elements, the flame or burners. Do not use a towel or other bulky cloth instead of a potholder.
- Do not heat unopened food containers. Buildup of pressure may cause the container to burst and result in injury.
- Stepping, leaning or sitting on this appliance can result in serious injuries and also cause damage to the appliance.
- Never use this appliance as a space heater to heat or warm the room. Doing so may result in carbon monoxide poisoning and overheating of the oven.
- Know which knob controls which surface burner. Visually check that the burner has lit. Then adjust the flame so it does not extend beyond the edge of the utensil.

## **WARNING**

### **FOR YOUR SAFETY:**

- Clean the appliance regularly to keep all parts free of grease that could catch fire. Exhaust fan ventilation hoods and grease filters should be kept clean. Do not allow grease to accumulate on hood or filter. Greasy deposits in the fan could catch fire. When cooking food turn the hood, fan on. Refer to hood manufacturer's instructions for cleaning.
- Utensil handles should be turned inward and not extend over adjacent surface burners. To reduce the risk of burns, ignition of flammable materials, and spillage due to unintentional contact with the utensil, the handle of the utensil should be positioned so that it is turned inward, and does not extend over adjacent surface burners.
- Never leave surface burners unattended at high heat settings. Boil overs cause smoke and greasy spillovers that may ignite, or a pan that has boiled dry may melt.
- Do not use aluminum foil to line any part of the appliance. Use aluminum foil only to cover food during cooking. Improper installation of these liners may result in risk of electric shock or fire.
- Only certain types of glass, glass/ceramic, ceramic, earthenware, or other glazed utensils are suitable for appliance service without breaking due to the sudden change in temperature. Check the manufacturer's recommendations for appliance use.
- Do not use decorative surface burner covers. If a burner is accidentally turned on, the decorative cover will become hot and possibly melt. You will not be able to see that the burner is on. Burns will occur if the hot covers are touched. Damage may also be done to the range or burners because the covers may cause overheating. Air will be blocked from the burner and cause combustion problems.
- Use the proper pan sizes. This appliance is equipped with surface units of different sizes. Select utensils having flat bottoms large enough to cover the surface unit. The use of undersized utensils will expose a portion of the surface heating unit to direct contact and may result in ignition of clothing. Proper relationship of utensil to the surface unit will also improve efficiency.

## **WARNING**

**TO REDUCE THE RISK OF TIPPING OF THE RANGE, THE RANGE MUST BE SECURED BY PROPERLY INSTALLED ANTI-TIP DEVICES. TO CHECK IF THE DEVICES ARE INSTALLED PROPERLY, SLIDE RANGE FORWARD, LOOK FOR ANTI-TIP BRACKET SECURELY ATTACHED TO FLOOR OR WALL, AND SLIDE RANGE BACK SO REAR RANGE FOOT IS UNDER ANTI-TIP BRACKET.**

### **IMPORTANT**

The range will not tip during normal use. However, the range can tip if you apply too much force or weight to the open door without having the anti-tip bracket fastened down properly.


**⚠ DANGER**



**TIP-OVER HAZARD**

- A child or adult can tip the range and be killed.
- Install anti-tip bracket to floor or wall per installation instructions.
- Slide range back so rear range foot is engaged in the slot of the anti-tip bracket.
- Re-engage the anti-tip bracket if range is moved.
- Do not operate the range without anti-tip bracket installed and engaged.
- Failure to follow these instructions can result in death or serious burns to children and adults

**ANTI-TIP BRACKET**

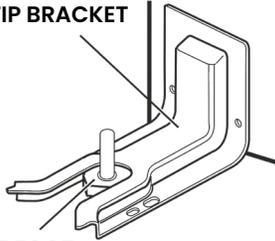

**RANGE FOOT**

**Making sure the anti-tip bracket is installed:**


- Slide range forward.
- Look for the anti-tip bracket securely attached to floor and wall.
- Slide range back so rear range foot is under anti-tip bracket.

**⚠ WARNING**

The range should have proper ventilation in order to keep the unit operating properly and maintain the temperature of immediate surroundings within safe limits. Check your local building codes as they may vary from the general rules outlined in this guide. It is recommended that a hood be installed above the range that is rated no less than 400 CFM. This will provide adequate ventilation for this range. Mounting distance of your ventilation is outlined by the manufacturer of your hood.

**INSTALLATION REQUIREMENTS****VENTING REQUIREMENTS**

- Observe all governing codes and ordinances. Do not obstruct flow of combustion and ventilation air.
- It is the installer's responsibility to comply with installation clearances specified on the model/serial rating plate.
- The range should be located for convenient use in the kitchen.
- Recessed installations must provide complete enclosure of the sides and rear of the range.
- To eliminate the risk of burns or fire by reaching over heated surface units, cabinet storage space located above the surface units should be avoided. If cabinet storage is to be provided, the risk can be reduced by installing a range hood or microwave hood combination with minimum 400 CFM that projects horizontally a minimum of 5" (12.7 cm) beyond the bottom of the cabinets. (See Figure 1)
- If a range hood is installed above the appliance, maintain a 30" minimum clearance between cooking surface and bottom of range hood. The range hood must be connected directly to flues or to the outside. (See Figure 1)
- Avoid placing cabinetry directly above the appliance when possible. If cabinetry is used above the cooking surface, use cabinets no more than 13" deep. Make sure the wall coverings, countertop and cabinets around the appliance can withstand heat up to 200° F (93°C) generated by the appliance. (See Figure 1)
- Cabinet opening dimensions that are shown must be used. Given dimensions are minimum clearances. (See Figure 1)
- Working areas adjacent to the range should have 18" minimum clearance between countertop and cabinet bottom. (See Figure 1)
- All openings in the wall or floor where range is to be installed must be sealed.
- Contact a qualified floor covering installer to check that the floor covering can withstand at least 200°F (93°C).
- Use an insulated pad or ¼" (0.64 cm) plywood under range if installing range over carpeting.
- The floor anti-tip bracket must be installed. To install the anti-tip bracket shipped with the range, see "Install Anti-Tip Bracket" section.
- Grounded electrical supply is required. See "Electrical Requirements" section.

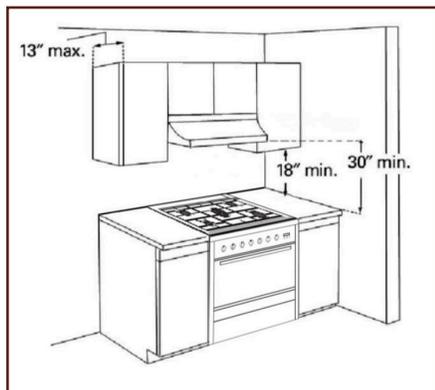

**FIGURE 1**

- Use cabinets no more than 13" deep.
- 18" minimum clearance between countertop and cabinet bottom.
- 30" minimum clearance between cooking surface and bottom of range hood.

## **⚠ WARNING**

To avoid damage to your cabinets, check with your builder or cabinet supplier to make sure that the materials used will not discolor, delaminate or sustain other damage. This oven has been designed in accordance with the requirements of UL and CSA International and complies with the maximum allowable wood cabinet temperatures of 194°F (90°C).

## **MOBILE HOME - ADDITIONAL INSTALLATION REQUIREMENTS**

- The installation of this range must conform to the Manufactured Home Construction and Safety Standard, Title 24 CFR, Part 3280 (formerly the Federal Standard for Mobile Home Construction and Safety, Title 24, HUD Part 280). When such standard is not applicable, use the Standard for Manufactured Home Installations, ANSI A225.1/NFPA 501A or with local codes.
- In Canada, the installation of this range must conform with the current standards CAN/CSAA240-latest edition, or with local codes.
- When this range is installed in a mobile home, it must be secured to the floor during transit. Any method of securing the range is adequate as long as it conforms to the standards listed above.

**ELECTRICAL REQUIREMENTS**

**⚠ WARNING**



**ELECTRICAL SHOCK  
HAZARD**

**Electrical Grounding Instructions**

**DO NOT USE AN EXTENSION CORD.**

Failure to do so can result in death, fire or electrical shock.

- Any additions, changes or conversion required in order for this appliance to satisfactorily meet the application needs must be made by a qualified service technician in accordance with the manufacturer’s instructions and all codes and requirements of the authority having jurisdiction. Failure to follow the instructions could result in serious injury or property damage. The qualified agency performing this work assumes responsibility for the conversion.
- This appliance is not supplied with a plug. If you wish to install this appliance with a plug, it must be installed by a qualified service technician. The plug must be a 4-prong, 3- phase plug that is designed specifically for freestanding ranges.
- This appliance can be installed directly to the main (without a plug). To do so, follow instructions in the “Electrical Connection” section. If you wish to install this appliance directly to the main (without a plug), it must be installed by a qualified service technician.
- **DO NOT** operate this appliance using a 2-prong adapter or an extension cord. If a 2- prong wall receptacle is the only available outlet, it is the personal responsibility of the consumer to have it replaced with a properly grounded 4-prong wall receptacle installed by a qualified electrician.
- Severe shock, or damage to the range may occur if the range is not installed by a qualified installer or electrician.
- It is **220-240V/50-60Hz**. With recommendation to connect to a **50 Amp** power supply.
- Total Input Power is 11.7kw (48.75A). A dedicated circuit, protected by a minimum 50 amp time delay fuse or circuit breaker is required.
- For personal safety, the appliance must be properly grounded.
- See the “Installation Instructions” packaged with this appliance for complete installation and grounding instructions.

## INSTALLATION REQUIREMENTS

Gather the required tools and parts before starting installation. Read and follow the instructions provided with any tools listed here.

### Tools Needed:

<ul style="list-style-type: none"> <li>• Tape Measure</li> <li>• Flat-Blade Screwdriver</li> <li>• Phillips Screwdriver</li> <li>• Level</li> <li>• Hand or electric drill</li> <li>• Wrench or Pliers</li> </ul>	<ul style="list-style-type: none"> <li>• 1/8" flat blade screwdriver</li> <li>• 1/8" (3.2 mm) Drill Bit (for wood floors)</li> <li>• Marker or Pencil</li> <li>• 3/16" (4.8 mm) Carbide-Tipped Masonry Drill Bit (for concrete/ ceramic floors)</li> </ul>
---	--

Parts Supplied:	Parts Needed:
-----------------	---------------



<ul style="list-style-type: none"> <li>• 3 - Oven racks</li> <li>• 1 Anti-tip brackets</li> <li>• 2 plastic anchors</li> <li>• 2 screws</li> </ul>	<p>Check local codes. Check existing electrical supply. See "Electrical Requirements" section.</p>
--	--

The anti-tip bracket must be securely mounted to the floor. Thickness of flooring may require longer screws to anchor bracket to subfloor.

## RANGE DIMENSIONS

- Avoid placing cabinetry directly above the appliance when possible. If cabinetry is used above the cooking surface, use cabinets no more than 13" deep. Make sure the wall coverings, countertop and cabinets around the appliance can withstand heat up to 200° F (93°C) generated by the appliance. (See Figures 1 and 2)
- Cabinet opening dimensions that are shown must be used. Given dimensions are minimum clearances. (See Figures 1 and 2)
- Working areas adjacent to the range should have 18" minimum clearance between countertop and cabinet bottom. (See Figures 1 and 2)

FIGURE 2

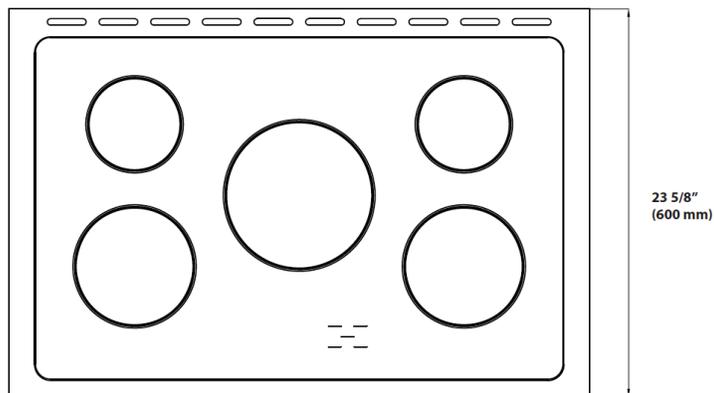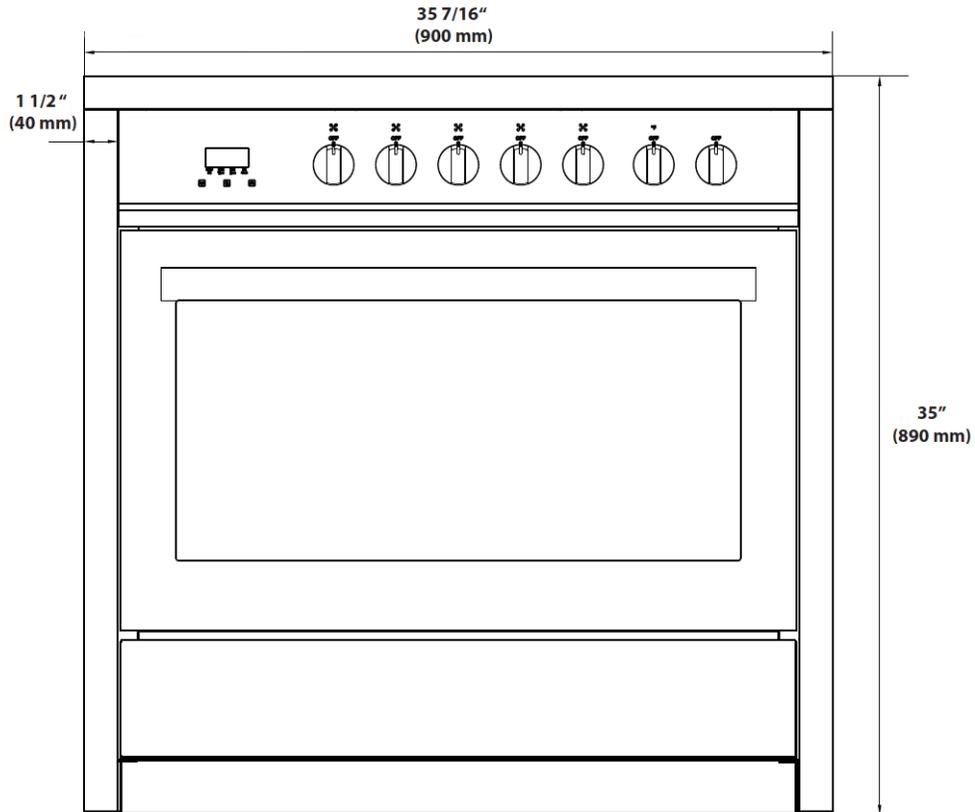

This height measurement does not include leveling feet.

**INSTALL LEVELING FEET AND BACK PANEL**

**⚠ WARNING**

- Excessive Weight Hazard
- Tip Over Hazard
- A child or adult can tip the range and be killed.
- Use two or more people to move and install range.
- Failure to follow these instructions can result in death or serious burns to children and adults.

**1** Remove shipping materials from the range. DO NOT remove protective film covering the appliance. DO NOT remove tape securing the drawer.

**2** Remove oven racks and parts package from inside oven.

**3** Place range on its back; take four (4) Lshaped cardboard corners from the carton. Stack one cardboard corner on top of another. Repeat with the other 2 corners.

**4** Place the four (4) L-shaped cardboard corners lengthwise on the floor behind the range to support the range when it is laid on its back.


**5** Using 2 or more people firmly grasp the range and gently lay it on its back on the cardboard corners.

**6** Install the leveling feet one at a time. The leveling feet can be found in one of the boxes that was inside the oven.

**7** Place cardboard or hardboard in front of range. Using 2 or more people, stand range back up onto cardboard or hardboard.

**8** Remove the protective film covering the appliance. Remove tape securing the drawer.

**9** The stainless steel back panel can now be installed. Align backsplash holes with holes at the edge of the stovetop, which extends past the back of the oven.

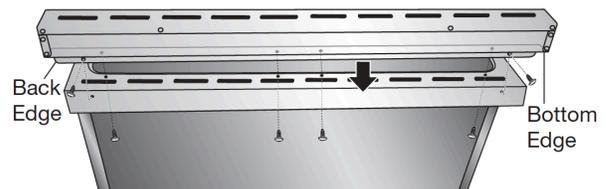

**10** With one person holding the backsplash and working from underneath the extended rear edge, insert screws through the bottom of the backsplash. Tighten completely.

**11** Insert the two screws on each side, through the back edge of the backsplash and into the cooktop. Tighten completely.

**INSTALL ANTI-TIP BRACKET**


**⚠️ WARNING**

 <p><b>TIP-OVER HAZARD</b></p>	<ul style="list-style-type: none"> <li>• A child or adult can tip the range and be killed.</li> </ul>
	<ul style="list-style-type: none"> <li>• Install anti-tip bracket to floor or wall per installation instructions.</li> </ul>
	<ul style="list-style-type: none"> <li>• Slide range back so rear range foot is engaged in the slot of the anti-tip bracket.</li> </ul>
	<ul style="list-style-type: none"> <li>• Re-engage the anti-tip bracket if range is moved.</li> </ul>
	<ul style="list-style-type: none"> <li>• Do not operate the range without anti-tip bracket installed and engaged.</li> <li>• Failure to follow these instructions can result in death or serious burns to children and adults</li> </ul>

Contact a qualified floor covering installer for the procedure of drilling mounting holes through your type of floor covering.

Assemble the required tools and parts before starting installation. Read and follow the instructions provided with any tools listed here.

**INSTALL ANTI-TIP CHAIN (WITH ROUND ADJUSTABLE LEGS)**

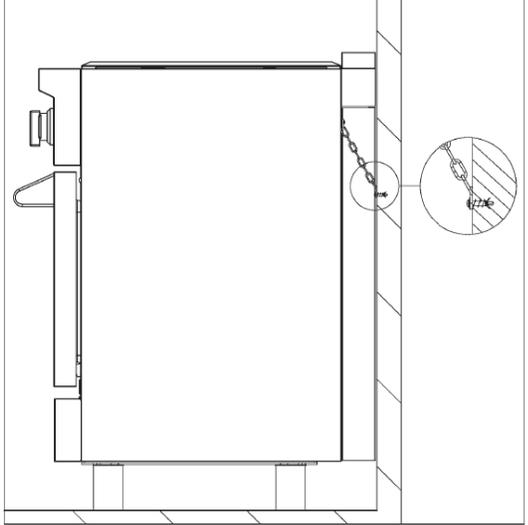	<p><b>1</b> Remove the anti-tip wall anchor hooks and screws from the parts bag.</p>
	<p><b>2</b> Drill an adequate hole at similar chain level in the back wall.</p>
	<p><b>3</b> Insert and screw in the wall anchor hooks until it is firmly secured to the wall.</p>
	<p><b>4</b> After moving the range to its final position, connect the chain to the hook.</p>

## ELECTRICAL CONNECTION

### **WARNING**



#### **ELECTRICAL SHOCK HAZARD**

- Do not use an adapter
- Do not use an extension cord.
- Failure to follow these instructions can result in death, fire, or electrical shock.
- Electrical connection must be performed by a qualified service technician in accordance with the kit instructions and all local codes and requirements.

This appliance is not supplied with a plug and needs to be connected directly to the electrical mains.

If you wish to install this appliance with a plug, it must be installed by a qualified service technician. The plug must be a 4-prong, 3-phase power plug that is designed specifically for ranges and ovens.

**Electrical Requirements: 220-240V/50-60Hz.**  
**With recommendation to connect to a 50 Amp power supply.**

## ELECTRICAL SPECIFICATIONS

SYSTEM	WATTAGE
OVEN LIGHT	2 X 25 W
UPPER HEATING ELEMENT	2395 W
BOTTOM HEATING ELEMENT	1960 W
GRILL HEATING ELEMENT	3158 W
CONVECTION HEATING ELEMENT	2 X 1250 W

## INSTALLATION INSTRUCTIONS

### WARNING

#### BEFORE MAKING THE ELECTRICAL CONNECTION, MAKE SURE THAT:

- The safety circuit-breaker and the electrical system are able to with stand the load of the appliance. See rating label on back of range.
- Rating plate is located on back of range should you need to verify any of the electrical requirements.
- The power supply system has a ground connection in good working order in accordance with the regulations in force.
- The electrical socket is easily accessible with the appliance installed. In all cases, the power supply lead must be positioned so that it does not reach a temperature of 50oC above the room temperature at any point.
- The manufacturer is not liable for any direct or indirect damage caused by faulty installation or connection. It is therefore necessary that all installation and connection operations are carried out by qualified personnel complying with the local and general regulations in force.

#### CONNECTION OF THE RANGE WIRES TO THE MAINS:

- ① This appliance is equipped with the following wires:
  - One black wire (L1 - Live) and one red wire (L2 - Live)
  - One yellow /green (Ground)
- ② Follow the diagram below to know how to connect the freestanding range wires to the electrical main wires of the home. (See Figure 8)
- ③ The black and red wires can be connected to the electrical main wires of the home in one of the following three configurations:
  - Configuration 1: L1 to L1 and L2 to L2
  - Configuration 2: L1 to L1 and L2 to L3
  - Configuration 3: L1 to L2 and L2 to L3


**CONTINUED ON NEXT PAGE.**

- ④ Never use reductions, shunts, or adaptors which can cause overheating or burning.
- ⑤ After carrying out the connection to the mains, check that the supplying cable does not come into contact with parts subject to heating.

FIGURE 8


### HOUSE ELECTRICAL WIRES

220V Three-Phase Power Source

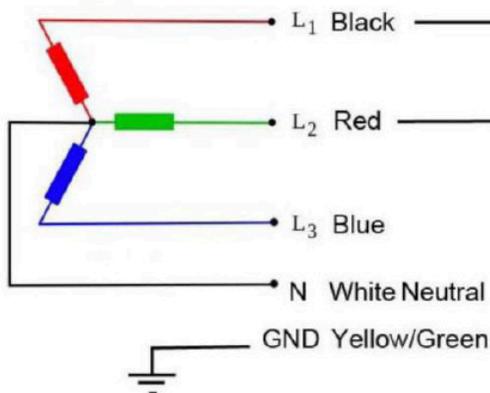

### RANGE WIRES

AC 240V Single-Phase

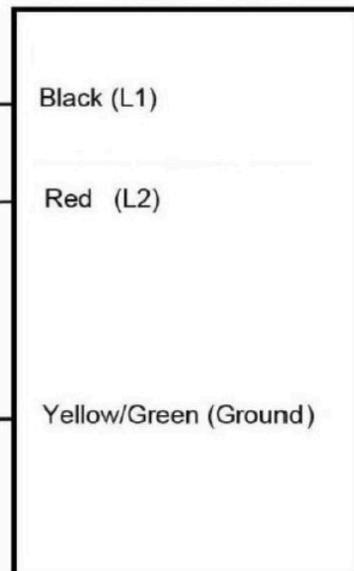


**The following wire connections will provide 240V:**

- Configuration 1: L<sub>1</sub> to L<sub>1</sub> and L<sub>2</sub> to L<sub>2</sub>
- Configuration 2: L<sub>1</sub> to L<sub>1</sub> and L<sub>2</sub> to L<sub>3</sub>
- Configuration 3: L<sub>1</sub> to L<sub>2</sub> and L<sub>2</sub> to L<sub>3</sub>

**SURFACE COOKING**


**LOCATION OF THE BURNERS**

**FIGURE 9**

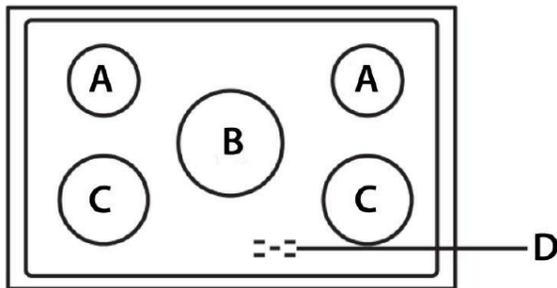

- (A)** Single cooking zone - 1200W
- (B)** Single cooking zone - 2500W
- (C)** Single cooking zone - 1800W
- (D)** Power & Residual Heat Warning Lights

**DESCRIPTION OF SYMBOLS**

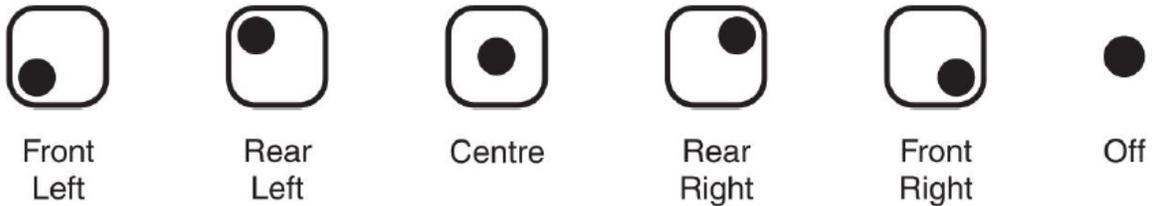

**BEFORE FIRST USE:**

- ① Before cooking for the first time the ceramic glass has to be cleaned. Remove any labels and protective sheeting.
- ② Place a saucepan of water on each of the front burners and switch them on the high for at least 30 minutes.
- ③ After 30 minutes switch the front burners off, place a saucepan of water on each of the rear and the center burners. Switch them on high for at least 30 minutes.
- ④ This procedure is necessary in order to evaporate any protective oils and humidity that may have collected during the manufacturing process and it will enable the electronic control circuits to operate properly.

<b>SETTING SURFACE CONTROLS</b>	
<b>FIGURE 11</b>	
	<p><b>1</b> Turn the control knob to the desired position (low to high). (See Figure 11)</p>
	<p><b>2</b> Adjustment is continuous so the cooking zone will operate at any intermediate setting between low and high.</p>
	<p><b>3</b> Once the cooking zone is hot, the LED corresponding to the zone illuminates.</p>
	<p><b>4</b> To switch off the cooking zone by turn the knob, in either direction to the ● "OFF" position.</p>
	<p><b>5</b> The residual heat warning light remains illuminated when the temperature of the ceramic glass surface is hot and will switch off once the surface temperature has cooled.</p>

**SURFACE COOKING UTENSILS**

**⚠ WARNING**

Do not place plastic items such as salt and pepper shakers, spoon holders or plastic wrappings on top of the appliance when it is in use. These items could melt or ignite. Potholders, towels or wood spoons could catch fire if placed too close to a heat.

**NOTE:**

Always use a utensil for its intended purpose. Follow manufacturer’s instructions. Some utensils were not made to be used in the oven or on the cooking surface.

- For best results and energy savings, only use pans suitable for electric cooking.
- The bottom of the pan must be very thick and perfectly flat.
- Before placing on the burner, make sure that the pan and burner, are perfectly clean and dry.
- To avoid scratching of the ceramic glass surface, never use cast-iron pans or pans with a rough bottom.


**POT SIZES**

- To avoid wasting energy, make sure that the diameter of the pan bottom is 20mm bigger than the circle marked on the hotplate.
- The pot sizes stated in the table below are suitable for your ceramic surface. Solids pots and pans with flat bottoms are recommended for efficient cooking. (See Figure 9)

BURNER ZONE	ZONE DIAMETER	MINIMUM DIAMETER OF PAN
COOKING ZONE A	140MM (5 1/2 INCHES)	165MM (6 1/2 INCHES)
COOKING ZONE B	225MM (8 7/8 INCHES)	250MM (9 13/16 INCHES)
COOKING ZONE C	175MM (7 INCHES)	200MM (7 7/8 INCHES)

**CLOCK AND TIMER**

**FIGURE 12**

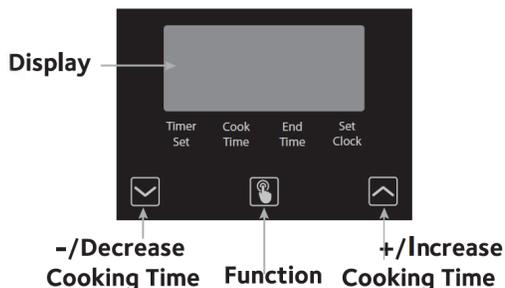

**SETTING THE CLOCK**

① When first connected to AC power or after a power outage, the display will blink "12:00" and the Clock indicator will blink. You can enter the Time Setting mode manually by pressing and releasing the Function button until the Clock indicator blinks.



② To set the correct time, press the ▲ or ▼ button to advance forward or backward until the correct time is displayed. When finished, press the Function button, or wait five seconds; the time will be then set.



Clock must be set in order for the oven functions to work.

**SETTING THE TIMER**

① Enter the Time Setting mode by pressing the Function button once; the Timer indicator will light.



② Set the desired timer time using the ▲ or ▼ button to advance forward or backward until the desired time is displayed. The timer will count down and beep when it is finished.



**⚠ WARNING**


Use caution with the timed cooking. Use only when cooking cured or frozen meats or most fruits and vegetables. Timer function should be used with caution when cooking foods that can easily spoil, such as milk, eggs, fish, meat or poultry. Eating spoiled food can result in sickness from food poisoning.

<b>OVEN COOKING</b>	
<b>OVEN TIMED COOKING - DELAYED START TIMING</b>	
To start cooking time, set the TIMER to desired amount of time BEFORE setting oven function and temperature.	
<p>① Press and release the Function button until the Start indicator blinks.</p>	
<p>② Set the amount of time desired by pressing the ▲ or ▼ button until the chosen timing is displayed, for a maximum of 10 hours.</p>	
<p>③ Set the Temperature and Cooking knobs as desired (see "Setting Oven Controls") and place the food in the oven.</p>	
<p>Oven will not operate until the programmed Start Time is reached. To operate oven before the Start Time, the Delay Start function must be cancelled.</p>	

<b>OVEN TIMED COOKING - DELAYED START TIMING</b>	
To end cooking time, set the TIMER to desired shut off time:	
<p>① Press the Function button again until the End indicator blinks.</p>	
<p>② Set the end timing by pressing the ▲ or ▼ button until the desired amount of time is displayed, for a maximum of 11 hours 59 minutes. Press the Function button again to set.</p>	
<p>③ When the end of timed cooking is reached, the unit will beep. Rotate the Temperature and Cooking knobs to their OFF positions, and then press the Function button to turn off the beeping.</p>	


**SETTING OVEN CONTROLS**

**FIGURE 11**

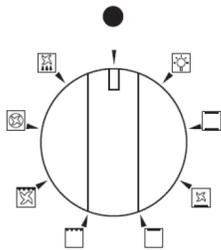

- Selection of cooking temperature is carried out by turning the knob clockwise to the required temperature.
- The warning light will illuminate during the heating process.
- Once the oven reaches desired temperature, the light will go out.
- Regular flashing means that the oven temperature is being maintained at the programmed level.

**FIGURE 14**

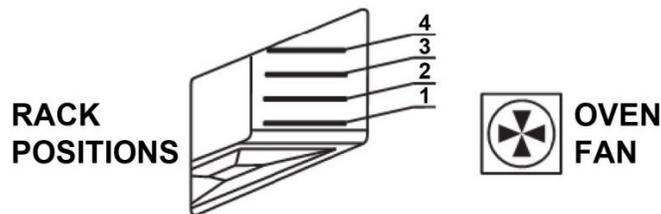

**OVEN LIGHT INDICATOR** - The lamp of the oven is on. During oven operation the lamp will always remain on.



**TRADITIONAL COOKING (Upper and Lower element)** - THERMOSTAT SELECTOR SWITCH FROM 60° C (140° F) TO MAX The heat is provided from the top and bottom elements. The oven must be preheated before the food is placed inside. Static cooking provides optimum results with: cakes, pizzas, bread and for gentle slow cooking of casseroles. Characteristics of static cooking: heat provided from above and below, cooking is possible only on middle shelf and should be centrally located in the oven.



**DELICATE COOKING (Lower element and Fan)** - THERMOSTAT SELECTOR SWITCH FROM 60° C (140° F) TO MAX Ideal for pastries and cakes with wet covering and little sugar and damp desserts in moulds. Excellent results can also be achieved in completing cooking at the bottom and with dishes requiring heat in the lower area in particular. The plate is best inserted at bottom level.



**UPPER ELEMENT COOKING** - THERMOSTAT SELECTOR SWITCH FROM 60° C (140° F) TO MAX This is best used to brown select dishes at the end of cooking.



**GRILL COOKING (Grill element)** - THERMOSTAT SELECTOR SWITCH FROM 60° C (140° F) TO MAX The use of the grill element is best reserved for: melting cheese, toasting, and browning. The cooking time should be no longer than 5 minutes. To operate, please select Full Grill Function along with the temperature.



**FAN ASSISTED GRILL COOKING (Grill element and Fan)** - THERMOSTAT SELECTOR SWITCH FROM 60° C (140° F) TO 200° C (392° F) Best used for grilling meats, vegetables, and poultry. Preheat the oven, place food on a grilling rack or backing tray and place in the middle of the oven. Other racks can be used simultaneously using this method.



**CONVECTION COOKING (Cooking element & Fan)** - THERMOSTAT SELECTOR SWITCH FROM 60° C (140° F) TO MAX This method allows even-heat multi-rack cooking for various types of foods with the appropriate cooking times for each dish. The oven must be preheated before the foods are placed inside. Use the 'Fan Forced' function to operate.



**DEFROST (Bottom fan)** - All types of food can be defrosted by circulating air at room temperature: cakes, cream, fruit, etc. For foods such as: meat, fish, and bread you will want to set the fan temperature to 175-200° C (347-392° F).

## COOKING INSTRUCTIONS

SETTING	FOOD	RACK LEVEL	TEMP (FAHRENHEIT)	TIME (MINS)
TRADITIONAL COOKING (ADD TIME FOR PRE-HEAT)	LASAGNA	2-3	410-450	30
	OVEN BAKED PASTA	2-3	410-450	40
	ROAST VEAL	2	350-400	30-40/LB
	BEEF	2	410-460	30-40/LB
	PORK	2	340-400	30-40/LB
	CHICKEN	2	340-400	45-60
	DUCK	2	340-400	45-60
	GOOSE/TURKEY	1	280-340	45-60
	LAMB	2	340-400	15/LB
	FISH	1-2	340-400	DEPENDS ON SIZE
	PIZZA	1-2	410-450	40-45
	SHORT PASTRY	1-2	340-400	15-20
	FRUIT CAKE	1-2	340-400	20-30
	BROWNING	3-4	140	5
CONVECTION COOKING (ADD TIME FOR PRE-HEAT)	LASAGNA	2-3	375-410	20-25
	OVEN BAKED PASTA	2	375-410	25-30
	ROAST VEAL	2	300-350	65-90
	BEEF	2	350-375	65-90
	PORK	2	300-325	70-100
	CHICKEN	2	350	70-90
	DUCK	2	325-350	100-160
	GOOSE/TURKEY	2	300-325	160-240
LAMB	2	300-350	100-130	

COOKING INSTRUCTIONS				
SETTING	FOOD	RACK LEVEL	TEMP (FAHRENHEIT)	TIME (MINS)
CONVECTION COOKING (ADD TIME FOR PRE-HEAT)	FISH	2-3	300-350	DEPENDS ON SIZE
	PIZZA	2-3	410-475	30-50
	SPONGE CAKE	2-3	375-425	25-35
	FRUIT CAKE	2-3	350-375	40-50
	BREAD	1-2	425-475	7
SETTING	FOOD	RACK LEVEL	1ST SIDE COOK MINS	2ND SIDE COOK MINS
GRILL COOKING	PORK CHOPS	4	7-9	5-7
	FILLET (PORK)	3	9-11	5-9
	FILLET (BEEF)	3	9-11	9-11
	LIVER	4	2-3	2-3
	VEAL	4	7-9	5-7
	CHICKEN	3	9-14	9-11
	SAUSAGES	4	7-9	5-6
	MEATBALLS	4	7-9	5-6
	FISH FILLET	4	5-6	3-4
TOAST	4	2-4	2-3	

## CARE AND CLEANING

### ⚠️ WARNING

### ⚠️ DANGER



#### ELECTRICAL SHOCK HAZARD

#### BURN HAZARD

To avoid possible burns use care when cleaning the appliance. DO NOT attempt to clean the appliance whenever the oven or burner heads are still hot.

To avoid possible burns DO NOT attempt any of the following cleaning instructions before turning OFF ALL of the surface burners and allowing them to cool.

**IMPORTANT:** Always follow label instructions on cleaning products.

#### CONTROL KNOBS

- For general cleaning, use hot, soapy water and a cloth.
- For more difficult soils and built-up grease, apply a liquid detergent directly onto the soil. Rinse with a damp cloth and dry.
- **DO NOT** use steel wool or acidic cleaners on the knobs as they can scratch.

#### STAINLESS STEEL

- Clean stainless steel with hot, soapy water and a dishcloth. Rinse with clean water and a cloth.
- Do not use cleaners with high concentrations of chlorides or chlorines. Do not use harsh scrubbing cleaners. Only use kitchen cleaners that are especially made for cleaning stainless steel.

#### INSIDE OVEN

- This appliance does NOT have a self-cleaning feature.
- **DO NOT** attempt to clean the appliance whenever the oven is still hot.
- Use an appropriate cleaning product designed specifically to clean the inside of ovens.
- **IMPORTANT:** Always follow label instructions on cleaning products.

#### STORAGE DRAWER

- Make sure drawer is cool and empty before cleaning.
- Use a mild detergent.

#### OVEN DOOR EXTERIOR

- Use a glass cleaner and a soft cloth or sponge.
- Apply glass cleaner to soft cloth or sponge, not directly on panel.

**REMOVING AND CLEANING THE OVEN DOOR**


For normal range use, it is not suggested to remove the oven door. However, if removal is necessary, make sure the oven is off and cool. The oven door is heavy. Follow these instructions.

- Open the door fully.
- Lift up and push the small levers located on the two hinges all the way back.
- While holding the door on each side, shut the door until it touches the levers.
- Then continue closing the door until it is about 4 inches (10cm) from being fully closed.
- Pull the door towards you, pulling it out of its seat. Door will gently come away from the oven. (See Figure 15)
- To replace the door, perform the reverse of the above procedure.
- **Note:** If door does not come away from oven easily, do not force it.


**FIGURE 15**



**FIGURE 16**

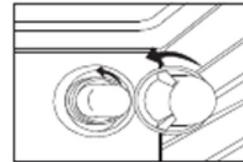

**⚠ WARNING**

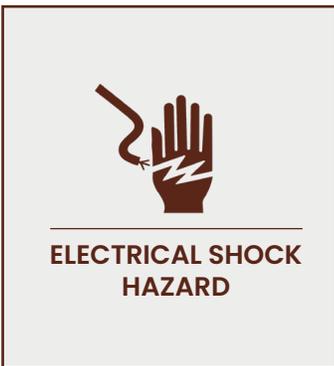

**CHANGING THE INTERIOR OVEN LIGHT BULB**

- Ensure that the appliance is switched off before replacing the lamp to avoid possible electric shock.
- Remove the glass cover by turning counter clockwise. (See Figure 16)
- Replace bulb with a high temperature bulb able to withstand 600 degrees and that meets the following criteria:
  - 240V
  - 25W
  - TYPE: E-14

**SOLUTIONS TO COMMON PROBLEMS**

**IMPORTANT**  
 Before calling for service, review this list. It may save you both time and expense. This list includes common experiences that are not the result of defective workmanship or material in your appliance.

**⚠ WARNING**

 <b>ELECTRICAL SHOCK HAZARD</b>	<ul style="list-style-type: none"> <li>• Plug into a grounded 3 prong outlet.</li> <li>• Do not remove ground prong.</li> <li>• Do not use an adapter.</li> <li>• Do not use an extension cord.</li> <li>• Failure to follow these instructions can result in death, fire, or electrical shock.</li> </ul>
---	--

**NOTHING WILL OPERATE**

- **Is the electrical supply disconnected?**  
 Verify that electrical wires are connected to the mains properly. See “Electrical Connection” section. If the problem continues, contact a qualified technician.
- **Household fuse blown or circuit breaker tripped?**  
 Replace the fuse or reset the circuit breaker. If the problem continues, contact a qualified technician.

**SURFACE BURNERS WILL NOT OPERATE**

- **Is the control knob set correctly?**  
 Push in knob before turning to a setting.

**EXCESS HEAT AROUND COOKWARE ON COOKING SURFACE**

- **Is the cookware the proper size?**  
 Use cookware about the same size as the surface cooking area, element or surface burner. Cookware should extend 20mm outside the cooking area.

**COOKTOP COOKING RESULTS NOT WHAT EXPECTED**

- **Is the proper cookware being used?**

See "Surface Cooking Utensils" section.

- **Is the control knob set to the proper heat level?**

See "Setting Surface Controls" section.

- **Is the range level?**

Level the range. See the "Unpack Range / Install Leveling Feet and Back Panel" section.

**OVEN WILL NOT OPERATE**

- **Are the oven controls set correctly?**

See "Setting Oven Controls" section.

**COOLING FAN RUNS DURING BAKING AND BROILING**

- **Is the cookware the proper size?**

It is normal for the fan to automatically run while the oven is in use and for some time after to cool.

**OVEN TEMPERATURE TOO HIGH OR TOO LOW**

- **Was the oven preheated?**

See "Cooking Instructions" section.

- **Are the racks positioned properly?**

See "Cooking Instructions" section.

- **Is there proper air circulation around bakeware?**

See "Cooking Instructions" section.

- **Is the batter evenly distributed in the pan?**

Check that batter is level in the pan.

- **Is the proper length of time being used?**

Adjust cooking time.

- **Has the oven door been opened while cooking?**

Oven peeking releases oven heat and can result in longer cooking times.

- **Are baked items too brown on the bottom?**

Move rack to higher position in the oven.

- **Are pie crust edges browning early?**

Use aluminum foil to cover the edge of the crust and/or reduce baking temperature.

**LIMITED SERVICE WARRANTY  
VALID ONLY IN THE UNITED STATES**

**1 YEAR PARTS AND LABOR WARRANTY**

Unless otherwise stated, Rangaire warrants to the original purchaser of a new Rangaire electric range oven that such equipment will be free from defects in material and workmanship for a period of 1 year from the date of delivery. Valid only in the Continental United States.

**COVERAGE LIMITATIONS**

The 1 year parts and labor warranty, Rangaire does not cover:

- Failure to install and/or use the equipment within proper operating conditions specified by Rangaire. This includes but is not limited to residential, outdoor, or mobile applications.
- Any adjustments necessitated by improper operating conditions.
- Damage caused by improper electrical connection, power failure, or generators.
- Failure to properly maintain the unit including all preventive maintenance and cleaning.
- Equipment sold or used outside of United States, equipment purchased second-hand, equipment sold by an unauthorized reseller, and equipment expressly sold without warranty coverage.
- Equipment without a valid serial number and proof of purchase, or other way to verify warranty coverage.
- Equipment that has not been used appropriately or was subject to misuse, neglect, abuse, accident, alteration, negligence, damage during transit, delivery or installation, fire, flood, or an act of God.
- Equipment that has been altered, modified, or repaired by anyone other than an authorized service agency outside of preventative maintenance and cleaning.
- Parts deemed by Rangaire to be normal wear and tear parts, including hoses and select plastic or rubber components.

**FOR WARRANTY INQUIRIES OR SERVICE:**

This warranty is only valid on equipment purchased from an authorized dealer.

Locate the model and serial number.

Next, visit [www.rangaire.com](http://www.rangaire.com) or call (877) 793-2331. You must have the model and serial number when contacting service technicians.

Failure to contact Rangaire prior to obtaining equipment service may void your warranty.

**Correct Disposal of this Product**



This marking indicates that this appliance should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.