

 
 


www.Voice.Gift

Voice-Over[®]

INSTRUCTIONS


If a picture has a thousand words, now it can have a thousand more. Add the Voice-Over to picture frames, albums, scrapbooks, posters, gift boxes, packages and cookie tins with up to 60 seconds of messages, music and sweet memories. Stick it to any surface and let it play a pick-me-up, personal messages, catchy melodies, memorable stories or whatever you want to record and share. With Voice-Over, you can make every special gift or project extra special.

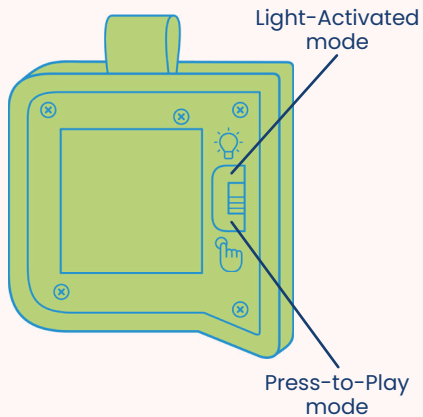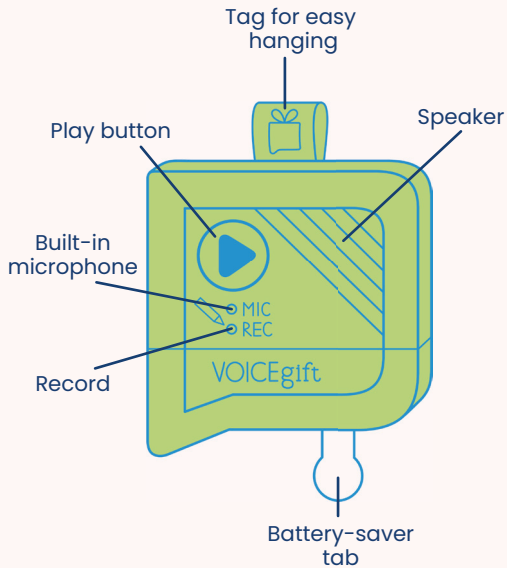

EACH UNIT INCLUDES:

- Voice-Over device
- Double-sided tape
- 3 - LR44 batteries
- Play button decal stickers

1 Record

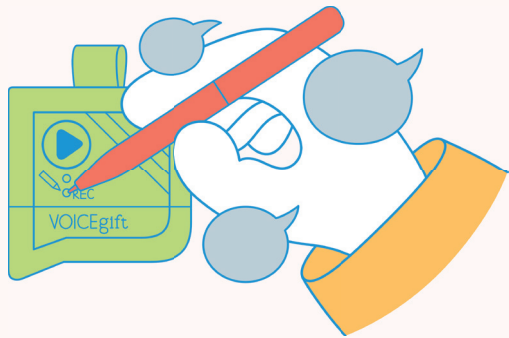


To activate the unit, pull and remove the white battery-saver tab. To record, use a pen to press and hold the recessed REC button. Recording begins when you hear the beep. Speak, sing or record music from a speaker. Release when you're finished recording. For additional messages, press and hold REC again. You can record as many messages as you like, up to 60 seconds.

2 Preview & Play




To listen back, press the PLAY button. Press it again to hear any other messages you recorded. If you're happy, you're done! Remember: You can always re-record at any time. To adjust the recording quality, try talking louder/softer or holding the device closer/further away from your mouth or speaker. Voice-Over has two modes: **Press-to-Play & Light Sensitive.** Light Sensitive mode is a fun surprise that makes your message auto-play when a gift is unboxed or a cookie tin is opened. Use the selector switch on the back to choose a mode.


3 Stick It

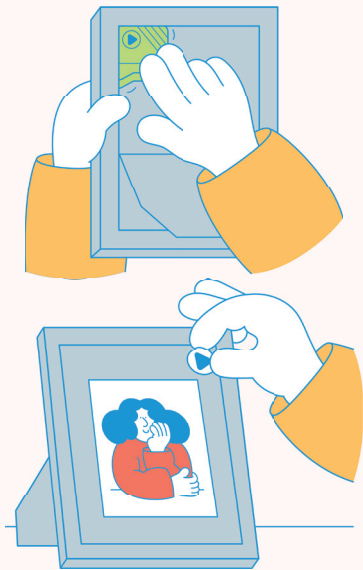

Double-sided tape is included so you can stick Voice-Over to picture frames, posters, scrapbooks or wherever you'd like. If you're attaching to a picture frame or poster, set the device to **Press-to-Play** mode on the back. Align it onto the upper-left corner of the back and place a PLAY sticker button to the upper-right corner of the front. A user can naturally press the play button using their index finger behind the frame with their thumb on the front.

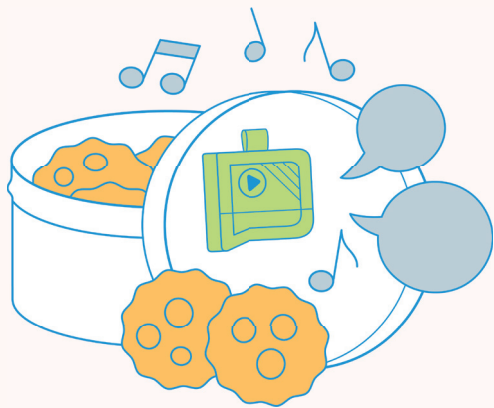

If you want to have it play automatically when a cookie tin, box or package is opened, set the device to **Light Activated** mode on the back and then stick it inside the lid or box. When the gift is opened and exposed to light, it plays.

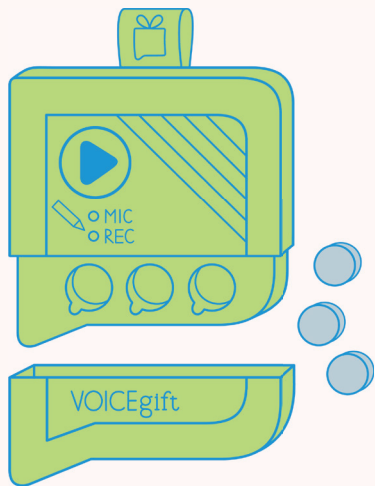

Voice-Over includes 3 LR44 batteries and will play messages over 500 times under typical usage. Don't worry, your messages will be saved even after the batteries are changed. To replace, use a small Phillips-head screwdriver to open the child-safe battery door and use a small flat-head screwdriver to pop out the batteries. Batteries must have their positive (+) side facing up.

The cloth tag can be used to hang Voice-Over as an ornament with a decorative cord through its loop.

Check out a how-to video and discover the many creative ways people are using their voice with Voice-Over by scanning the QR code below. This item is not a toy. Not for children under 3 years.



Visit us online at www.voice.gift
Send a message to hi@voice.gift
Follow us [@voicegift](https://www.instagram.com/voicegift)



Voice Express Corp.
606 Post Road East
Suite 3-706
Westport, CT 06880

VoiceGift and Voice-Over are registered
trademarks of Voice Express Corp.
©2023 Voice Express Corp. All Rights Reserved.

