



Introduction

Your new iHome Bluetooth stereo headphones are designed to link with your Bluetooth enabled smartphone or music player to allow you to wirelessly listen to music and answer phone calls within the normal 10 meter (33 feet) Bluetooth operating range.

 
What's Included

- Bluetooth Stereo Headphones

- USB Charging Cable

- Auxiliary Input Cable

- Drawstring Travel Pouch


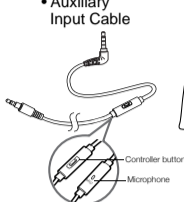


Specifications

Bluetooth specification:	Supports V5+ EDR with Handsfree Profile 1.5, Headset Profile 1.1 and A2DP profile 1.2 (Class II) and Audio/Video Remote Control Profile AVRP
Standby time (unpaired):	over 90 days (with fully charged battery)
Talk time:	up to 27 hours (with fully charged battery)
Music Playing time:	up to 27 hours at max volume/pulse to music (with fully charged battery)
Operating Distance:	up to 10 meters / 33 feet
Certifications:	CE, FCC, RoHS, BQB

PREPARATION FOR USE

  1. Controls and Indicators

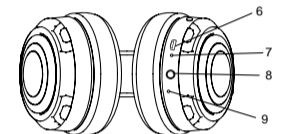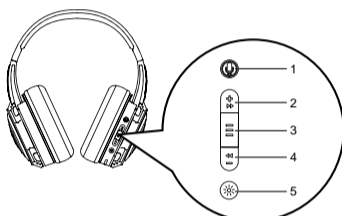


- Voice Activation Button
- Volume Up / Next Track Button
- Multi-function Button (MFB): Power On/Off, Answer/End, Pair and Play/Pause
- Volume Down / Previous Track Button
- Light Mode Button

- Micro USB Charging Port
- Power/Pairing/Charging LED Indicator
- Auxiliary Input
- Microphone

2. Charging Your Headphones

 IMPORTANT: Your headphone operates on a built-in rechargeable lithium-ion battery. We recommend that you fully charge the battery for before first time use.

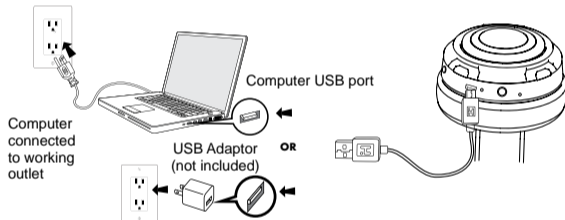

- Connect the micro USB plug on the charging cable to the micro USB port on the headphone.
- Connect the standard USB plug on the charging cable to any standard USB power port such as found on a notebook computer, or the charging adapter for an iPod, iPhone, etc.

The Power/Charging/Pairing indicator will glow RED while the headphone is charging. The indicator will turn off when the battery is fully charged.

Reminder: Allow the battery to fully charge for before first time use. Normal recharge time after first use should take about 2 hours. When fully charged the battery provides up to 27 hours of working time, or 90 days of standby time.

Because your headphones use Bluetooth version 5 the battery level indicator of the headphones may also appear on your smartphone home screen, usually adjacent to the phone's own battery level indicator, if your specific phone supports this display function.

3. Multi-Function Button (MFB)

Pressing the button turns the headphones "On", initiates pairing, answers/ends phone calls, controls Play/Pause function and turns the headphones "Off".

4. Switching the Power On and Off

- Press and hold the Multi-function button for approximately 3 seconds. The voice prompt will say "Power On" and the LED indicator turns BLUE and flashes two times per second.
- When the power is "On" press and hold the Multi-function button for approximately 3 seconds. The voice prompt will say "Power Off". The LED indicator remains on briefly and then shuts off. This indicates that the power is "Off".

5. Manually Pairing With a Bluetooth Enabled Smartphone or Music Player For The First Time

If your smartphone or music player is Bluetooth compatible (supports the A2DP Bluetooth Profile) you may pair these iHome headphones with your phone or music player to listen to music and make or receive calls as long as the two devices are within the Bluetooth operating range of approximately 33-feet of each other.

- Note: Your iHome headphones must be in the Power "Off" mode to begin the manual pairing process.
- Make sure that your headphones are switched "Off". Make sure that your smartphone or music player is "On".
 - Press and hold the Multi-function button on your headphones for about 6 seconds until you hear the "Power On" and "Pairing" voice prompts. The LED indicator begins alternately flashing blue and red to indicate it is trying to pair with a compatible device.
 - If necessary, turn on the Bluetooth function of your phone or music player so that it begins searching for a compatible device.
 - "iHome_B96" should appear on your phone or music player's compatible devices list. You may also see a message such as "Not Paired". Tap on that message to complete the pairing process. If your phone or music player asks for a "password" to complete the pairing process, enter "0000" on the keypad of your phone or music player.
 - When pairing is successful the screen on your phone should show "iHome_B96 Connected" or similar message and you will hear the voice prompt say "Your device is connected". The LED indicator on the headphones will begin flashing blue two times per 5 seconds. Your headphones are now ready for use.

NOTE: If your headphones are not able to find a Bluetooth device that is in range and "discoverable" within 3 minutes, the headphones will automatically power "Off" to preserve the battery.

6. Auto-Linking With A Previously Paired Device

If your headphones were previously paired with a Bluetooth enabled smartphone or music player they will attempt to auto-link with that device again whenever that device is within the Bluetooth operating range.

Press and hold the Multi-function button on your headphones for about 3 seconds until you hear the "Power On" voice prompt. If a previously paired device is found to be within range and turned "On" the headphones will re-link with it automatically. You will hear a beep tone and the voice prompt will say "Your device is connected."

Note: If no previously paired device is found after 3 minutes the auto-linking function stops and your headphones shut off automatically to preserve the battery life.

7. Wearing Your Headphones

Your iHome Bluetooth headphones are supplied with padded ear cushions for long wearing comfort. The headband can be extended to accommodate almost any head size. There are 'L' and 'R' markings on the inside of the headband. When the headphones are worn properly the controls will be on your right side.

8. Using Your Headphones

Note: Some of the functions described below may not be supported on your specific smartphone. Check with your smartphone owner's manual to confirm the features supported by your phone.

Function	Action Required
Turn headphones "On"	When headphones are "Off" Press and Hold the MFB inward for 3 seconds until you hear the "Power On" voice prompt.
Enter the Pairing Mode	When headphones are "Off" Press and Hold the MFB inward for 6 seconds until you hear the "Pairing" voice prompt. The LED indicator flashes blue and red rapidly.
Pairing	Make sure your Bluetooth device is "On" and in the Pairing Mode. When iHome_B96 appears on your devices menu, select it to complete pairing.
Play / Pause	Short press the MFB inward to start playback. Short press to pause playback. Short press to resume playback.
Skip to next track	Press the "+ >>" button during playback.
Skip to beginning of current track	Press the "- <<" button playback.
Increase volume	Press and hold the "+" button during playback.
Decrease volume	Press and hold the "-" button during playback.
Answer an incoming phone call	Short press the MFB when you hear the incoming ring sound. NOTE: Music will automatically pause when you are answering a call and resume when you end the call.
Decline an incoming phone call	Press and hold the MFB for 1 - 2 seconds to decline the incoming call.
End a call	Short press the MFB to end the call and "hang up".
Transfer a call between the phone and the headphones	While the call is in progress press & hold the MFB 2 seconds to transfer the call between the phone and the headphones.
Last number redial	When phone is paired with headphone but no call is in progress double press the MFB to redial the last number.
Answer second call/ call waiting	Briefly press the MFB to place current call on hold and answer an incoming 2nd call. Briefly press again as needed to switch between calls.
Turn headphones "Off"	Press and hold the MFB for 3 seconds until you hear the "Power Off" prompt and LED indicator shuts off.

9. Using Voice Activation

NOTE: The unit must be powered on and linked to an iOS or Android Bluetooth device to use Voice Activation. Press and hold the Voice Activation Button for 2 seconds and wait for beep to initiate voice activation with Siri or Google Now.

Voice activation requires an active internet connection on connected Bluetooth device with iOS 10 and Android 4.1 and later. When activated, the speaker microphone acts as an extension of the microphone in your smartphone to make/take calls, enable you to ask Siri®/Google Now™ to play music and more.

 
10. Using Light Mode

Press and hold the Light Mode Button for 1 second to turn the lighting effect ON or OFF. When your headphones are paired with a Bluetooth device, press the Light Mode Button once to select a 'slow glow', and press again for the light to pulse along to your music.

11. Auxiliary Input Jack and Cable

The auxiliary input jack allows you to use your Bluetooth headphones as normal headphones so that you can listen to music on any non-Bluetooth device that is equipped with a 3.5mm headphone jack.

Connect the included cable to the auxiliary input jack on the bottom of the "R" earpiece of your headphones, and to the headphone jack of your auxiliary music source.



Use the volume and track navigation controls on your music player as your would with any normal headphones. You may also use the one button controller and microphone on the Auxiliary Input Cable to perform some or all of the following operations, depending on your specific smartphone or music player.

Answer / End Calls

When an incoming call is received briefly press the MFB once to answer the call. To end the call, briefly press the MFB again.

Music Playback Control

If your phone or music player provides for this feature through its headphone jack press the controller button once to begin playback and once again to pause playback. Press the controller button twice to skip to the next track, or three times to restart the current track or go to the previous track.

Voice Commands (For Aux-in Only)

If your phone or music player provides for this feature through its headphone jack, press and hold the controller button on the auxiliary input cable to activate your device's voice commands menu. Once your device has launched the voice command menu you may then speak your instructions into the microphone, accessing features such as hands-free messaging, navigation, voice memo recording, and more. For the specific commands and operations accessible through your device's headphone jack, please refer to the user manual of your device.

NOTE: Not all of the hands free functions are available on all phones. You may find that some functions may not work with your phone while others do not. This is due to the design of your specific phone and is not an indication of any problem with the headphone.

TROUBLESHOOTING

- Reception is noisy or intermittent**
Make sure that the headphones and the paired device are within the Bluetooth operating range of approximately 33-feet.
- No Sound**
Make sure that your headphones are properly paired and connected with your Bluetooth enabled smartphone or music player. Refer to the "Pairing" instructions in this manual and in the manual supplied with your phone or music player if necessary.
The rechargeable battery in your headphones may be exhausted and need to be recharged. Refer to the "Charging Your Headphones" instructions in this manual.
- Unable to Pair/Connect**
The pairing settings between the headphones and your smartphone or music player may have been erased or deleted. Follow the "Pairing" instructions in this manual to re-pair and reconnect the devices.
Turn off any other Bluetooth devices that are not being used to reduce external interference.
- Some Functions Do Not Work**
Your specific model of smartphone may not support some of the functions described in this manual. Refer to the manual supplied with your phone for further information.

CARE AND MAINTENANCE

Always remember to turn your headphones off if they will not be used for a long period of time. Do not expose your headphones to extremely hot or cold temperatures for extended periods. Do not expose them to direct sunlight or leave them in places such as the dashboard of your car on a hot day. Prevent water or any other liquids from entering the cabinets of your headphones.

Protect Your Hearing

Using these, or any headphones at high volume levels for long periods can result in permanent hearing damage. Always start listening with volume controls on your headphones and your paired smartphone or music player at a low level and then gradually increase the volume controls to a comfortable listening level.

Important Notes

It is dangerous and illegal (in some jurisdictions) to use headphones when you are driving a car, riding a bike or motorcycle, or operating a watercraft. Be aware of local laws and regulations.

Do not use these headphones in situations where they might cause distractions or prevent you from hearing warning sounds.

There are no user serviceable parts in these headphones. Do not attempt any service or repairs on your own. Refer to the warranty for service, repair or replacement information.

FCC INFORMATION

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:
(1) this device may not cause interference, and
(2) this device must accept any interference, including interference that may cause undesired operation of the device.

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

FCC ID: EMOB96
IC: 986B-B96

IC Statement

This device complies with Industry Canada RSS-247. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain a Return Authorization Number and shipping instructions. A copy of the sales receipt is required to validate in-warranty coverage.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio RSS-247. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.

LIMITED 1 YEAR WARRANTY

eKids warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase. Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, eKids will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service. If service is required, please call Customer Service at 1-800-288-2792 to obtain a Return Authorization Number and shipping instructions. A copy of the sales receipt is required to validate in-warranty coverage.

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner. This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will eKids or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Your acknowledgment and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your eKids product.

© 2017 eKids, LLC
For questions or comments please call our toll-free number: 1-800-288-2792
Also visit our website: www.ekids.com
1299 Main Street Rahway, NJ 07065

Bluetooth is a registered trademarks of Bluetooth SIG Inc.
Bluetooth technology is incorporated under license from Bluetooth SIG Inc.