



HYPERGEAR Sport X2 True Wireless Earbuds User Manual

[Home](#) » [HyperGear](#) » **HYPERGEAR Sport X2 True Wireless Earbuds User Manual** 

Contents

- [1 True Wireless Earbuds User Manual](#)
- [2 IMPORTANT](#)
- [3 MULTI-FUNCTION](#)
- [4 INSTRUCTIONS](#)
- [5 HOW TO PAIR](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)



True Wireless Earbuds User Manual




IMPORTANT

Read all safety instructions and warnings prior to using this product. Improper use and failure to follow safety guidelines could result in damage, excess heat, toxic fumes, fire, explosion, electrical shock, or other hazards causing serious and/or fatal injury and/or property damage and not the manufacturer's responsibility. The user is responsible for maintaining this product with care for maximum use.

1. Do not store the device in a depleted state. Battery cells may be damaged. Charge your unit at least once every 3 months even when not in use.
2. Always store the earbuds in the case when not in use.
3. Permanent hearing loss may occur if you listen to high volumes. Set the volume to a safe level.
4. Do not store at extreme temperatures (below 40°F or above 90° F)
5. Recharge your device with the included Micro USB charging cable or a certified 3rd party cable and a 2A charging adapter. Standard cables and adapters may charge the battery too slowly and damage/overheat the battery or cause a fire hazard.
6. Do not attempt to modify, disassemble, or repair this product.
7. Avoid excessive drops, bumps, and abrasions. If the device has dents, punctures, tears, deformities, or corrosion, discontinue use and contact the manufacturer or dispose of it in an appropriate method.
8. If you find this product rapidly increasing in temperature, emitting an odor, deformed, abraded, or demonstrating an abnormal phenomenon, discontinue use immediately.

9. The unit is not waterproof. Do not submerge or expose yourself to corrosive materials. Do not clean with harsh chemicals, soaps, or detergents.
10. Disposal of the unit in the garbage is unlawful under state and federal environmental laws and regulations.

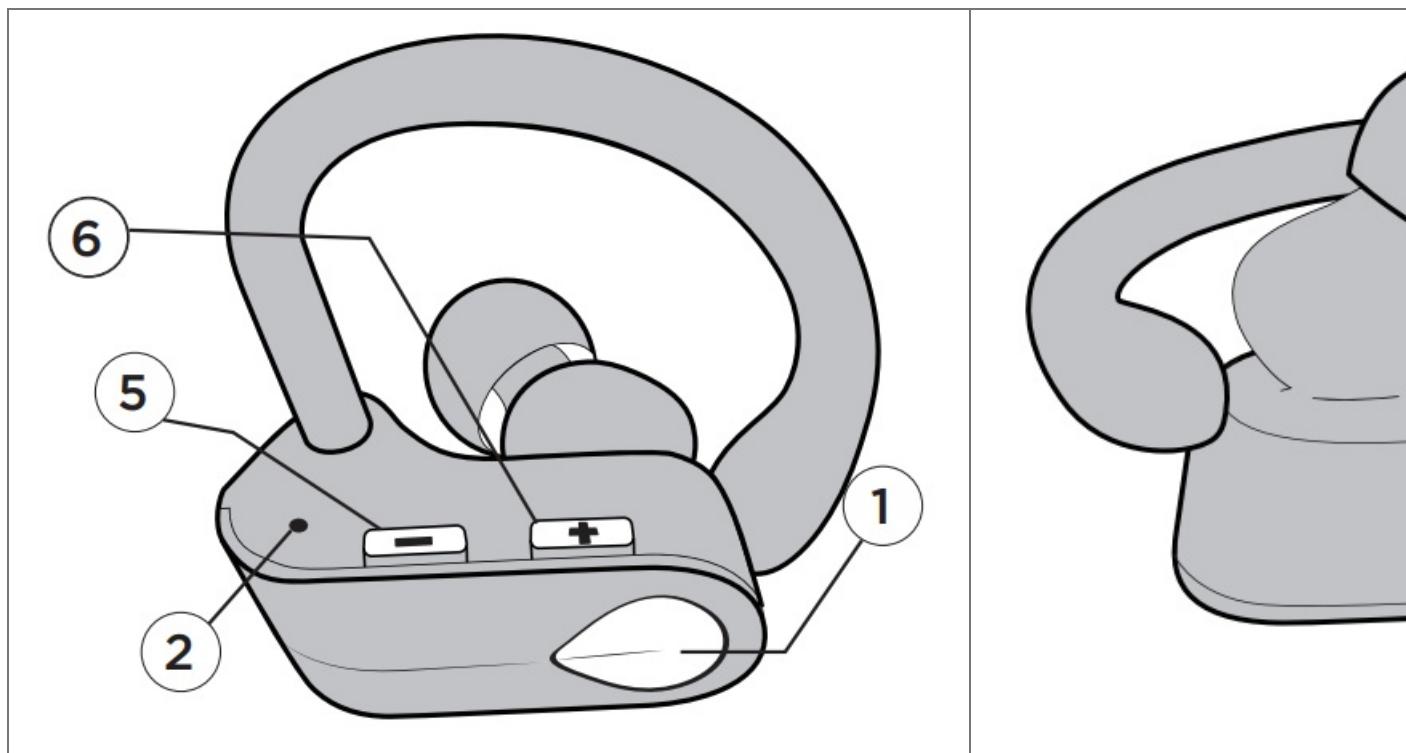

1. Multifunction (MFB)

2. LED Indicator

3. Microphone

4. Charging Port



5.

Previous Track

Press 1x

Volume Down

Long Press

6.



Next Track

Presione 1x

Volume Up

Appuyez 1x (2 sec)

MULTI-FUNCTION

Power On/Off	Long Press (3-5 sec)
Play/Pause Answer/End	Press 1x
Reject Call	Long Press (2 sec)
Redial Last Number	Press 2x
Press & Hold (2 sec)	Activate Voice Assistant (Siri. Google)

*Remote functions may vary depending on phone models

Need help? Visit www.myhypergear.com for additional product information or email info@myhypergear.com

INSTRUCTIONS

Fully charge your earphones before first use.

HOW TO CHARGE

Connect to a USB power source using the included Dual DC2.0 charging cable.

- Charging,
- Fully Charged (approximately 2 hours)


HOW TO PAIR

1. Press and Hold the MFB on BOTH earphones at the same time for 3-5 seconds. They will turn on and automatically pair with each other.
2. Wait for the RIGHT (R) earbud to flash RED & BLUE.
3. Select "HyperGear Sport X2" from the Bluetooth menu on your device to connect and pair.

NOTE: If your device prompts for a PIN code, enter "0000"

NOTE: The earphones will automatically reconnect to the last paired Bluetooth audio device when the unit is turned on.

Twist to Secure

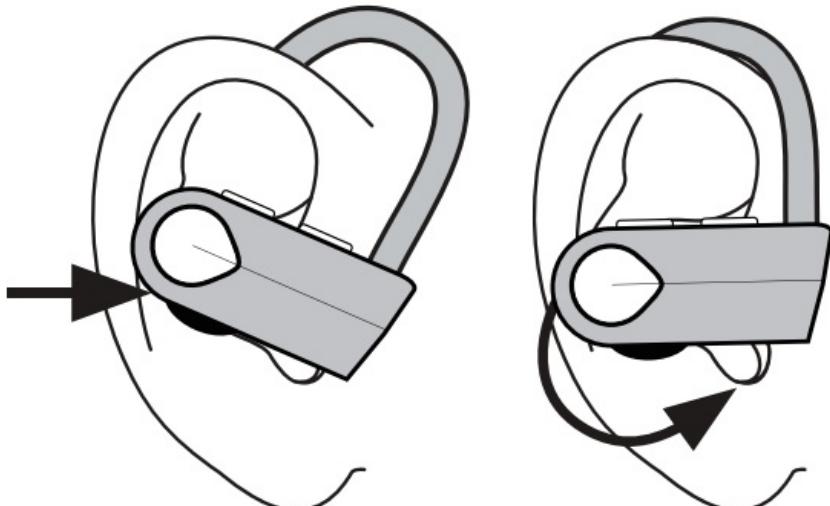



Contact info@myhypergear.com to submit a warranty claim. Proof of purchase is required.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation



www.myhypergear.com

Documents / Resources

	<p>HYPERGEAR Sport X2 True Wireless Earbuds [pdf] User Manual EBP-B027, EBPB027, 2AS5OEBP-B027, 2AS5OEBPB027, Sport X2 True Wireless Earbuds, Sport X2, True Wireless Earbuds</p>
---	--

[Manuals+](#)