

CHEFMAN®

RJ51-SERIES

FROZÜRT DESSERT MAKER



CUSTOMER SERVICE: 888.315.6553 | customerservice@chefman.com

Congratulations on your purchase!

Every Chefman product is manufactured to the highest standards of performance and safety, and we are confident that you will be so satisfied with your purchase that Chefman will be your go-to company for appliances in the future.

Customer satisfaction is a key element of our company's philosophy. The Chefman brand exists to fill a void on retail shelves and in consumer kitchens for a truly value-focused kitchen appliance. By questioning and adding value and innovation at every touch point in the manufacturer to end user journey, Chefman provides home chefs with the tools they need to achieve picture-perfect results with maximum efficiency. In addition to manufacturing appliances that are dependable, affordable, and built with intuitive features to enhance your kitchen experience, we pride ourselves on providing top-of-the line post purchase support, which includes complimentary access to ClubChefman.com for product tutorials, delicious recipes & how-to videos, and access to our team of dedicated Chefs.

Should a problem arise, each product is backed by a comprehensive manufacturer's 1-year warranty as well as outstanding after-sales service support through our dedicated customer service team. In the unlikely event that your product does not operate as described in the manual please feel free to call or email our helpline for assistance. We understand that sometimes products can malfunction, so if you feel that your appliance is not operating as it should, warranty claims can be made within one year from the date of purchase when accompanied by a dated receipt.

This guarantee is in addition to your statutory rights; your statutory rights are not affected. This limited warranty does not apply in cases of damage caused by accident, improper use, abuse or force majeure.

This warranty gives you specific legal rights. Rights may vary depending on your state or province of residence. Some locations do not allow limitations on implied warranties or special incidental, or consequential damages, so the limitations may not apply to you. This limited warranty will be invalidated if the appliance is tampered with in any way whatsoever.

Our telephone helpline (888) 315-6553 is available for questions or technical assistance-Monday-Friday 9am to 5 pm EST.

Customers can also receive support via email: customerservice@chefman.com.



READ ALL INSTRUCTIONS BEFORE USE

For your safety and continued enjoyment of this product, always read the instruction manual before using.

Contents

- 1 Safety Instructions
- 4 Features
- 5 Operating Instructions
- 8 Cleaning and Maintenance
- 9 Tips
- 10 Notes
- 11 Terms and Conditions
- 12 Warranty Card

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

WARNING: When using electrical appliances, especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised when using this appliance.
3. Do not use the appliance if it has been damaged.
4. Do not immerse any electrical parts such as the motor assembly, plug or the power cord in water or any other liquid at any time during the operation of this appliance.
5. Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the main power source. Always unplug the unit when not in use, before cleaning or when adding or removing parts.
6. Never use accessories or parts from other manufacturers. Your warranty will become invalid if such accessories have been used.
7. Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
8. Do not use the appliance on a gas, electric cooktop or over or near an open flame.
9. Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
10. The use of an extension cord with this appliance is not recommended. However if it is necessary, make sure that the appliance and extension cord have a compatible voltage. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
11. This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended use.
12. DO NOT carry the appliance by the power cord.
13. Do not leave this appliance unattended during use. Always unplug the unit when not in use or before cleaning.
14. Always operate the appliance on an even, stable surface. Do not place the unit on a hot surface.

SAFETY INSTRUCTIONS

15. Set up and store the appliance and its attachments out of reach of children.
16. Do not leave the appliance unattended while it is on. Always ensure that the device is safely set up before you start to use it.
17. Do not reach into the chute. Always use Food Pusher to avoid injury.
18. This device is not suitable for crushing ice or extremely hard foods.
19. Keep hair, clothing and jewelry away from the rotating parts.
20. Check the appliance and its components regularly for damages. Do not use the appliance if it is damaged in any way. Contact Chefman Customer Service for replacement or repair.
21. In case of technical problems, switch off the appliance and do not try to repair the unit yourself. There is danger of electrical shock.

CAUTION! HANDLE THE ATTACHMENTS WITH CARE.

22. Do not try to open the housing yourself. Do not introduce any kind of objects into the housing.
23. Do not operate the unit continuously for more than 2 minutes. Allow the unit to cool completely before using again.
24. Make sure the Chute, Grinder and Dispenser are securely locked in place before operating.
25. Failure to comply with the above mentioned precautions and instructions could affect the safe operation of this machine. Chefman does not take responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorized personnel.

SAFETY INSTRUCTIONS

WARNING: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SHORT CORD INSTRUCTIONS

A short power supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply extension cord is used:

1. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and:
2. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

LINE CORD SAFETY TIPS

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced. Please contact Chefman Customer Service.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.


DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

CAUTION: To ensure continued protection against risk of electric shock, connect to properly grounded outlets only.

IMPORTANT: During the first few minutes of initial use, you may notice smoke and/or a slight odor. This is normal and should quickly disappear. It will not recur after appliance has been used a few more times.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Features

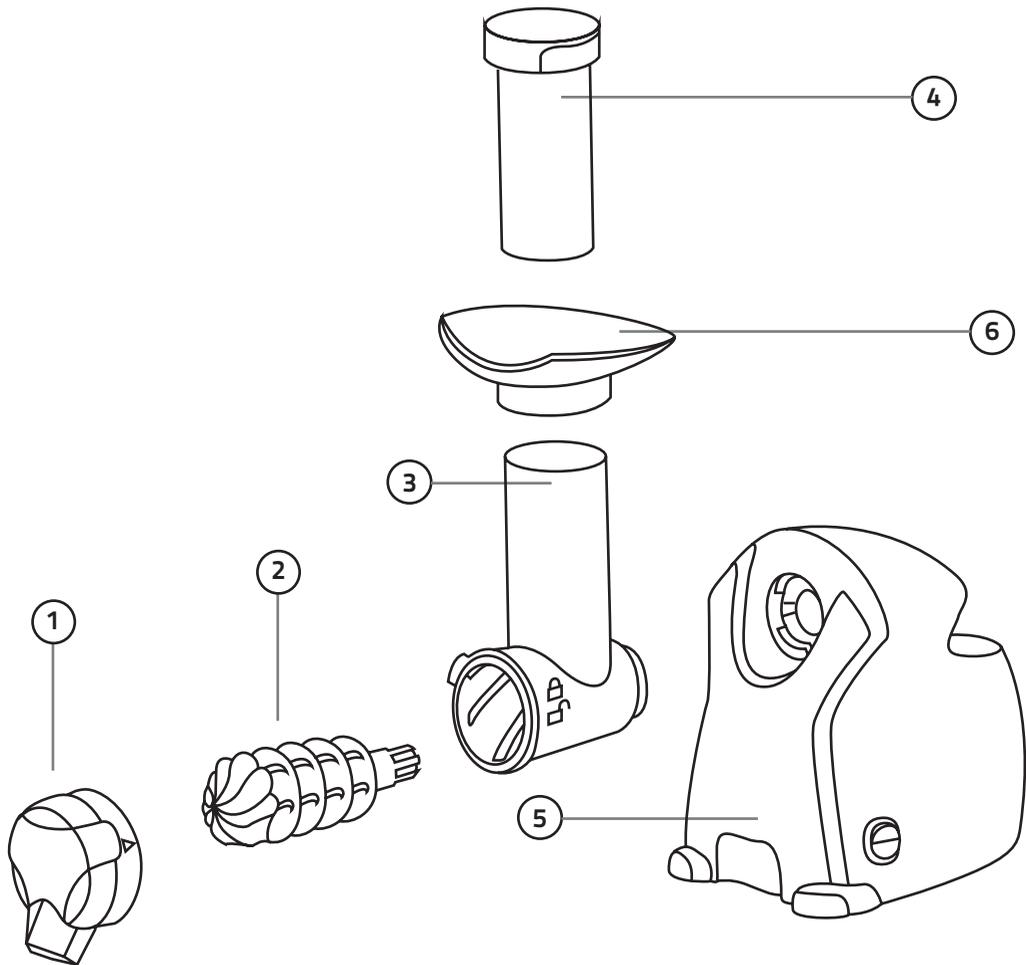

1. DISPENSER
2. GRINDER
3. CHUTE
4. FOOD PUSHER
5. ELECTRIC BASE
6. TRAY


**WARNING: CAREFULLY REMOVE ALL PACKING MATERIALS
AS THEY MAY HAVE SHIFTED DURING SHIPPING.**

Operating Instructions

HOW TO USE

This appliance is designed to make frozen fruit products into natural, delicious fruit ices, sorbet, or frozen yogurt.


ASSEMBLY INSTRUCTIONS (FOR USE)

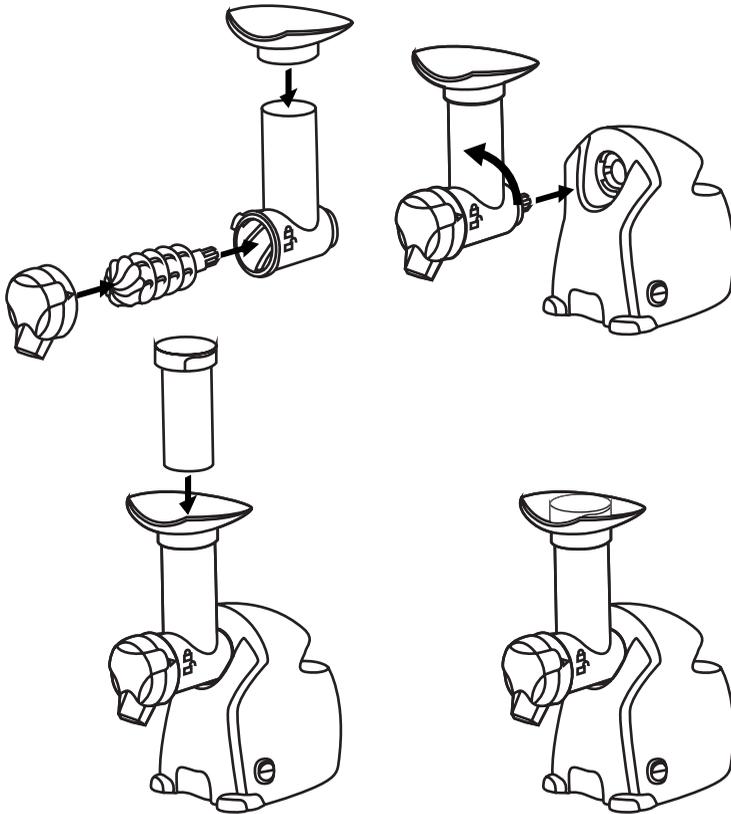

1. Take the appliance carefully out of the packaging and locate all of the separate parts. (Refer to Features diagram).
2. Place the Electric Base on a stable, flat surface.
3. Locate the part labeled Chute.
4. Insert the Grinder into the base of the Chute as shown in the diagram above.
5. Place the Dispenser on the front of the Chute and turn counter-clockwise to lock into place.
6. Insert the back end of the newly assembled Chute (including the Grinder and Dispenser) into the Electric Base and turn counter-clockwise to lock in place.
7. Place the Tray on top of the Chute tube and fit into place.

Operating Instructions

DISASSEMBLY INSTRUCTIONS (FOR CLEANING)

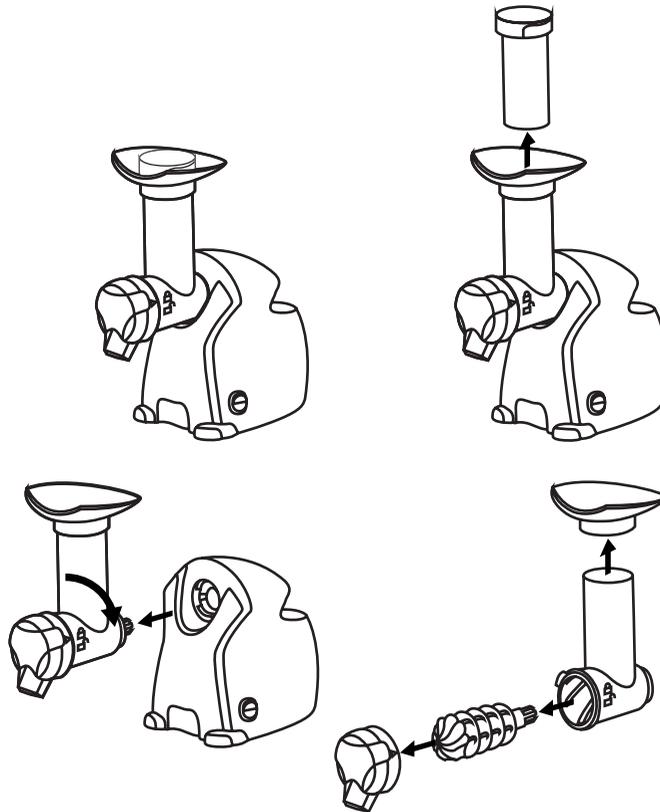

1. Switch off and unplug the appliance from the electrical outlet.
2. Remove the assembled Chute (Dispenser + Grinder installed in the Chute) by turning the Chute assembly clockwise.
3. Take the Food Pusher out.
4. Remove each part: Tray, Dispenser and Grinder.
5. The appliance is now disassembled for washing.

Operating Instructions

MAKING FROZURT


1. In order to safely operate this machine, leave your frozen foods out or in the refrigerator for 10-15 minutes before putting it into the appliance. This will soften the ingredients for best results.
2. The Frozurt machine is not meant to be used for more than two minutes at a time. Exceeding two minutes of use, the machine is likely to get warm. In this instance, stop the machine and allow it to cool down before using it again.
3. Do not keep the machine operating for too long without putting food in the Chute.
4. For optimal results, cut the ingredients into small pieces before placing them into the Chute.
5. Fill the Chute with ingredients and turn the machine ON.
6. When the Chute is full, use the Food Pusher to press the ingredients down. You can feed in more ingredients as the blended mixture comes out of the Dispenser.
NOTE: The first fruits inserted into the unit might not be immediately dispensed. Insert more fruit into the Chute and use the Food Pusher for contents to be fully dispensed.
7. Ingredients may need to be mixed together as they come out of the dispenser.
8. Enjoy your healthy and delicious frozen treats!

Cleaning & Maintenance

HOW TO CLEAN

1. Follow the disassembly instructions to take the appliance apart and wash it with warm water and mild soap after every use.
2. This product should be hand washed. It is not dishwasher safe.
3. Never immerse the Electric Base in water or any other liquid. Wipe it with a moistened sponge or soft cloth.

NOTE: Thoroughly wash and brush the grinder, shoot and dispenser crevices to prevent cross contamination in the next batch.

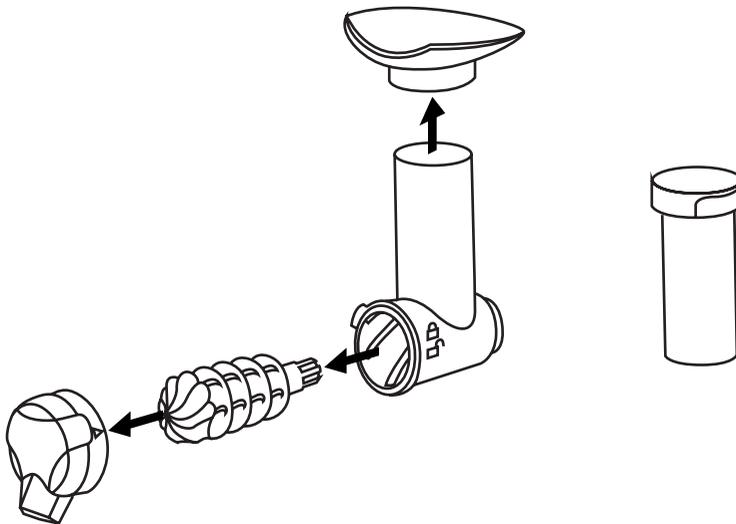

Tips

HELPFUL TIPS

1. Let fruit defrost for around 10 minutes before using. Time will vary by fruit but you will quickly find the right thawing time for every fruit.
2. Make sure the groove on the Food Pusher lines up with the notch on the Chute. If it gets misaligned it can get stuck.
3. If the fruit is too frozen it won't blend as smoothly, but you can pour it back into the Chute and blend it again if needed.
4. You can also use peanut butter, chocolate, frozen avocado, small chunks of frozen yogurt and tons more to make endless creative mixtures.
5. Do not use any extremely hard or frozen foods.
6. Always peel bananas or other fruits before freezing.
7. When using a mixture of different frozen fruits, alternate when placing in the Chute to ensure an even mixture.
8. If you are making a larger amount, dispense it all into a large freezer safe dish, mix and spread and place in the freezer for easy scooping later.

Terms & Conditions

Limited Warranty

CHEFMAN® LLC warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of ONE (1) year. CHEFMAN® LLC, at its option, will repair or replace this product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, CHEFMAN® LLC will repair or replace the same effecting all necessary parts replacements for a period of one year from the date of purchase. If product is no longer available we will replace it with a product of equal value. Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V - 60 Hz).

This warranty is available to consumers only. You are a consumer if you own a CHEFMAN® product that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners.

CONDITIONS: This warranty is valid for the original USA and Canada retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centers, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty. Warranty registration is not necessary to obtain warranty on CHEFMAN® LLC Products. Save your proof of purchase receipt.

ABOUT YOUR PRODUCT WARRANTY: Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, 3rd party warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

NORMAL WEAR: This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product; improper voltage or current; use contrary to the operation instructions; deviation from instructions regarding storage and transportation; repair or alteration by anyone other than CHEFMAN® LLC or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes. CHEFMAN® LLC shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

HOW TO OBTAIN WARRANTY SERVICE: If your CHEFMAN® product should prove to be defective within the warranty period, we will repair it, or if we think necessary, replace it. To obtain warranty service, simply email customerservice@chefman.com or call our toll-free number 1-888-315-6553 for additional information from our Customer Service Representatives, or send the defective product to Customer Service at Chefman, 200 Performance Drive Suite 207, Mahwah, NJ 07495.

This warranty is effective for the time periods listed above and subject to the conditions provided for within this policy.

CALIFORNIA RESIDENTS ONLY:

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (A) to the store where it was purchased or (B) to another retail store which sells CHEFMAN® products of the same type. The retail store shall then, at its discretion, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If the above two options do not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility if service or repair can be economically accomplished. CHEFMAN® and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund for nonconforming products under warranty.

CHEFMAN® is a registered trademark of RJ BRANDS, LLC.

Warranty



FROZÜRT DESSERT MAKER



All data fields are required in order for us to process your request:

Model Number: _____

Full Name: _____

Address: _____

Phone: _____ Email: (if applicable) _____

Date of Purchase*: _____

*We recommend you keep the receipt with this warranty card

Retail Store of Purchase: _____

Description of Malfunction:

Return your completed warranty card to:

RJ Brands
200 Performance Drive
Suite 207
Mahwah, NJ
07495

FROZÜRT
DESSERT MAKER

MODEL:
RJ51-SERIES

888.315.6553

customerservice@chefman.com

Phone lines available Monday to Friday, 9am-5pm EST

1-YEAR LIMITED WARRANTY



To log-in to ClubChefman.com follow the below steps:

1. Enter www.clubchefman.com into your web browser.
2. Click on "Sign Up Now".
3. Fill in the required information as prompted.
NOTE: "Place of Purchase" refers to the store at which you purchased your product.
4. Sign in using your User Name and Password.

CLUB CHEFMAN ACCESS CODE:
2131801

CHEFMAN®



CLUBCHEFMAN.COM | CHEFMAN.COM | @MYCHEFMAN