

Warning: Loud noises can damage your hearing.

Caution: When you have finished using your headset, store in a safe place to avoid accidental damage.

Package contents


- PS4 Chat Headset
- *Quick Setup Guide*

Features


- Traditional over-head design
- Adjustable boom microphone
- Inline microphone mute controls

Setting up your game console


1 Locate the 3.5 mm audio jack on the DUALSHOCK®4 controller.

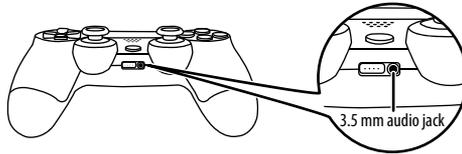


2 Plug the 3.5 mm audio cable from the headset into the DUALSHOCK® 4 audio output jack.

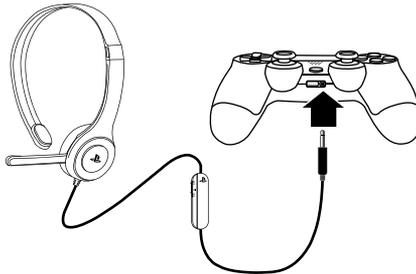


3 Adjust the headband for comfort and make sure that the speaker is on your left ear.

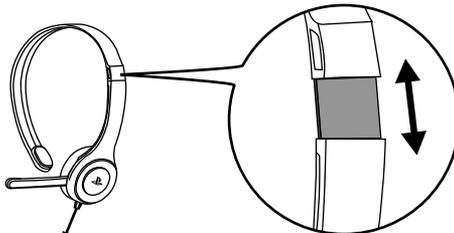

4 Adjust the microphone to a comfortable position.

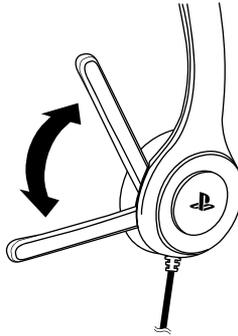

5 Use the ON/OFF switch on the headset control unit to mute or un-mute the microphone.

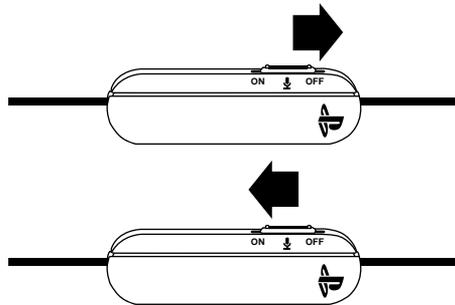

Specifications

- Nominal Impedance: $16\Omega \pm 15\%$
- Speaker Frequency Response: 100-6,000Hz
- Microphone Response: 150-4,000Hz
- Cable length: 4 ft. (1.2 m)

90-day limited warranty

Visit www.rocketfishproducts.com for details.

Contact Rocketfish:

For customer support, call 1-800-620-2790 (U.S. and Canada) or 01-800-926-3010 (Mexico)
www.rocketfishproducts.com

Manufactured and distributed under license by Sony Computer Entertainment America LLC.

"PS", "PlayStation" and "DUALSHOCK" are registered trademarks of Sony Computer Entertainment Inc.

"PS2" is a trademark of the same company.

ROCKETFISH is a registered trademark of BBY Solutions, Inc. Registered in some countries.

Distributed by Best Buy Purchasing, LLC, 7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2013 BBY Solutions, Inc. All Rights Reserved.