 


Energizer®

UE20035PQ

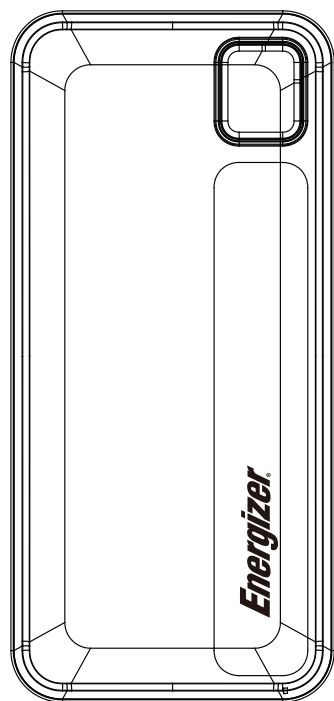

EN

Specification :

Model Name : UE20035PQ

Cell Type : Lithium Polymer

Battery Capacity : 20000mAh/74Wh(Max.)

Rated Input : USB-C PD 5V $\Rightarrow$ 2A, 9V $\Rightarrow$ 2A

Rated Output 1 : USB-A 4.5V $\Rightarrow$ 5A, 5V $\Rightarrow$ 4.5A,
5V $\Rightarrow$ 3A, 9V $\Rightarrow$ 2A, 12V $\Rightarrow$ 1.5A

Rated Output 2 : USB-A 4.5V $\Rightarrow$ 5A, 5V $\Rightarrow$ 4.5A,
5V $\Rightarrow$ 3A, 9V $\Rightarrow$ 2A, 12V $\Rightarrow$ 1.5A

 
Rated Output 3 : USB-C PD 5V $\Rightarrow$ 2A, 9V $\Rightarrow$ 2.22A, 12V $\Rightarrow$ 1.5A

Total Output : 22.5W(Max.)

Dimensions : 147.5(L) x 69(W) x 28.8(H) mm

Weight : 425g $\pm$ 10g


Package Contents

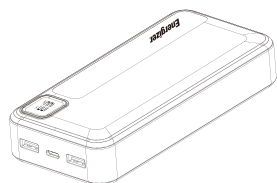

1 UE20035PQ



 2 User Manual



3 Charging Cable

Safety Instruction

- Avoid water, heat, fire, penetration of the battery, and severe drops at all times.
- Do not insert other objects into the USB ports other than the USB connectors.
- Once the product is fully charged, your power pack automatically shuts off to save power.
- During charge & recharge, battery may feel slightly warm.
- Do not clean the battery with water or other cleaning products, clean the exterior with a lightly wetted cloth or napkin.
- Normally the battery performance will decline after 2 years.
- Any intentional and physical damage to the battery will not be under the warranty conditions.
- Battery storage temperature is between -10°C~+60°C, operating temperature is 0°C~45°C.
- Fully charge the battery before first use to maximize the battery life.



PowerSafe Management

Guarantees against short circuit and over-charging for your power bank and devices.

 


Customer Service

For any question about the product, please contact us at service@energizerpowerpacks.com



How to USE

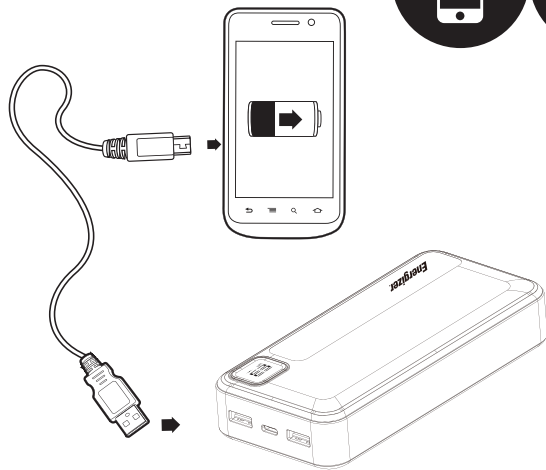

Press the power button to activate charging on your device

Low current mode: long press the power button for 3 seconds to activate, press the power button again to deactivate. Low current mode will deactivate after 2 hours of idle.

 


Recharge Mode
Blinking light indicates recharging.
Solid light indicates fully charged.

Green light indicates fast charge or fast recharge is activated

For fast charge, please charge only one device at a time.

How to Recharge

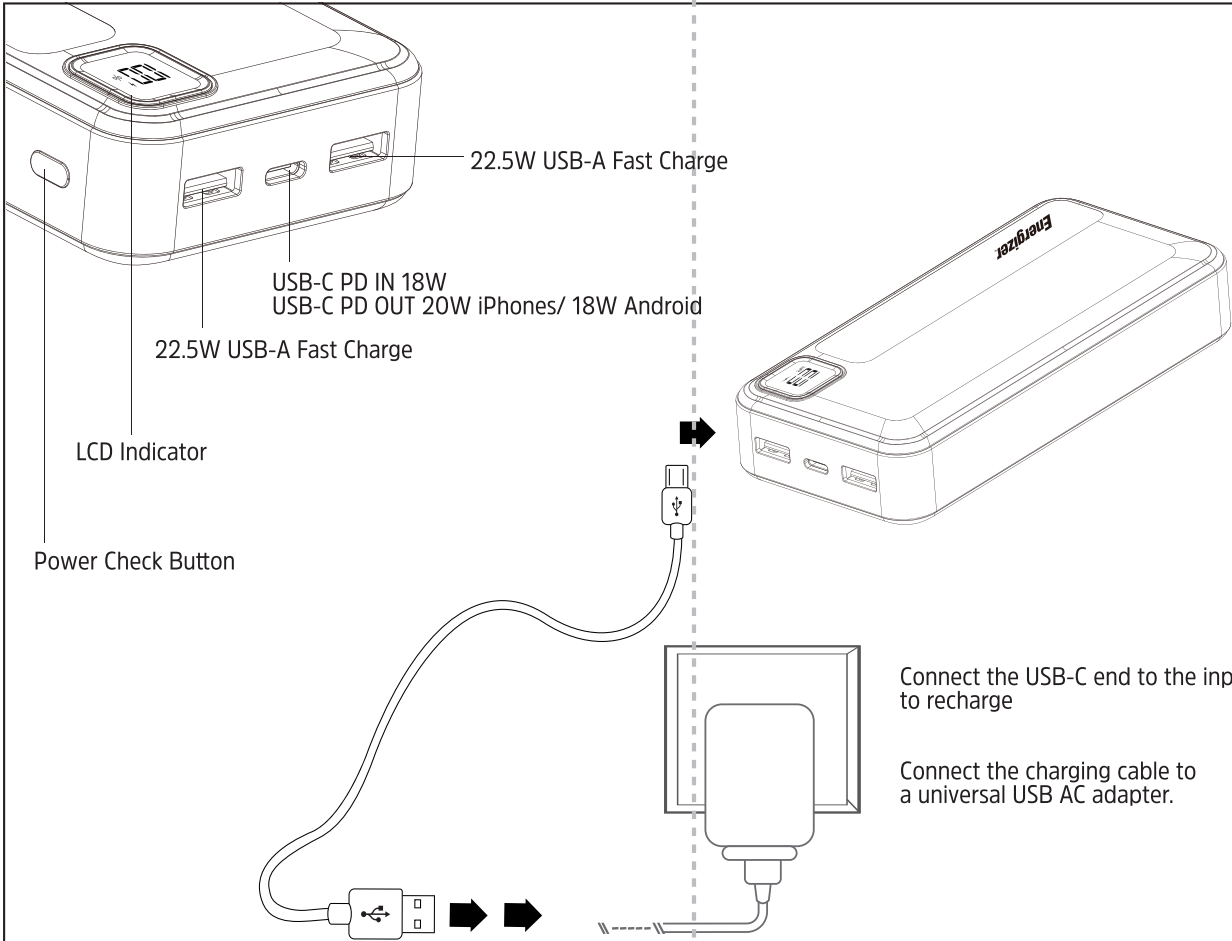

Adapter NOT included

Connect the USB-C end to the input port to recharge

Connect the charging cable to a universal USB AC adapter.