

Quick Start Guide

TC ELECTRONIC FLASHBACK 2 DELAY AND LOOPER

USB - Connects to your computer for firmware updates and TonePrint editing.

Power - Connect a 9V / >100 mA power supply.

Delay - Adjusts the delay time.

MASH LED - Indicates the intensity of MASH functionality.

Level - Adjusts the level of the delay repeats.

Outputs


Footswitch - Tap footswitch to turn effect on or off. Push down and hold to engage MASH and control the selected parameter.

Feedback - Determines the number of delay repeats.

Subdivision - Selects between quarter note, dotted eighth note, or quarter plus dotted eighth note repetitions.

Delay Type - Select delay type or TonePrint 1-3*.

Inputs

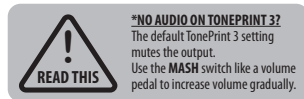

Visit tcelectronic.com to download the full manual

tc electronic