AirFly owner's guide



14 15

6

10

11

12

13

16

Pairing AirFly with AirPods

Volume Control & Mute


Turning AirFly On & Off

Battery Indicator


Charging


Pairing AirFly with Wireless Headphones


Reconnecting Headphones to iPhone

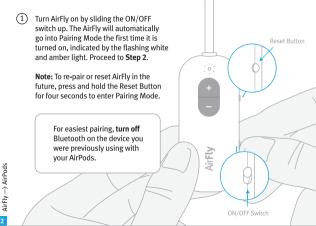

To enter Pairing Mode on AirPods, first place AirPods inside the Charging Case. With lid open, press and hold the button on the back of the Charging Case until the light flashes white.

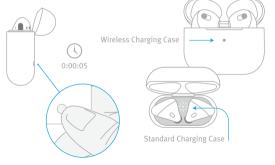


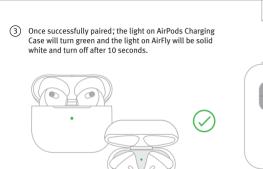

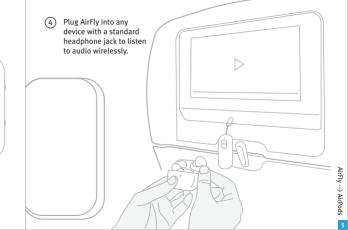


* It can take up to 90 seconds for initial pairing, but AirFly will remember your AirPods when re-connecting in the future.



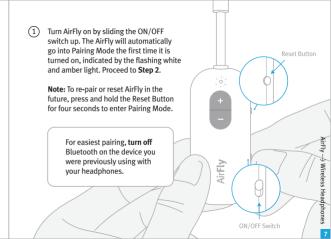



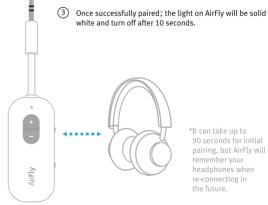

*It can take up to 90 seconds for initial pairing, but AirFly will remember your


AirFly Volume Controls & Mute

To adjust the volume of AirFly, press Volume Buttons (up "+" or down "-"). You can also press and hold Volume Button (up "+" or down "-") to gradually increase (or decrease) volume until its upper or lower limit is reached.

To MUTE AirFly audio temporarily, double-click Volume Down Button. Light will blink amber continuously to let you know Volume is MUTED.

Double-click Volume Down again to unmute audio - and return to previous volume setting.



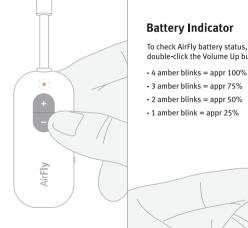

Battery Indicator

To check AirFly battery status, double-click the Volume Up button (+):

- 3 amber blinks = appr 75%
- 2 amber blinks = appr 50%
- 1 amber blink = appr 25%

Use the switch on the side of AirFly to turn it on or off.

Slide up to turn on. Slide down to turn off.

AirFly will reconnect to your headphones when turned back on.



Reconnecting Your AirPods or Headphones Back to Your Smartphone/Tablet

Once paired, AirFly will remember your AirPods / Headphones and switch to them when the unit is turned on. To switch back to using your AirPods / Headphones with your Smartphone or Tablet, first turn AirFly off.

On your device, open Bluetooth Settings, and select your headphones from the list. Status will change from Not Connected to Connected once headphones are successfully paired with your device.











 
The internal battery of AirFly lasts about 20 hours. We recommend fully charging AirFly before using it for the first time. If your AirFly is low on power, it will flash amber 3 times to alert you that it will need to be charged soon.

While charging, the AirFly will illuminate in amber and stay on. Once fully charged, the amber light will turn off. If desired, AirFly can remain plugged in and charging while in use.



Tips & Tricks

- If only one AirPod seems to be playing audio, turn AirFly off and back on. This will re-sync AirFly and should reconnect both AirPods.
- If you want to pair a new set of headphones to AirFly, or are having trouble connecting to your headphones, reset AirFly by pressing and holding the Reset button on the side of AirFly for 4 seconds. Once reset. AirFly will blink amber 4 times, and then will go into Pairing Mode.



Status Light Guide

Power On Pairing Mode

Low Power

White & Amber LED flash alternately

Unconnected Standby Mode White LED flashes twice every 5 seconds

> Connected Standby Mode Solid White LED

> > Amber LED flashes 3 times every 10 seconds

White LFD flashes twice

Solid Amber Charging

Fully Charged Amber LED turns off FCC Statement

responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against

harmful interference in a residential installation. This equipment

generates, uses and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause

harmful interference to radio communications. However, there is no

guarantee that interference will not occur in a particular installation. If

this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

which the receiver is connected.

cause undesired operation of the device.

RFD The full test of EU declaration of conformity is available at our website:

http://www.twelvesouth.com

National Telecommunications Commission

Frequency range: 2402 - 2480MHz

Hereby, Twelve South, LLC, declare that the radio equipment type,

Model number 12-1914, is in compliance with Directive 2014/53/EU.

L'émetteur exempt de licence contenu dans le présent appareil est

conforme aux CNR d'Innovation, Sciences et Développement

brouillage radioélectrique subi, même si le brouillage est susceptible

- Disposal of a battery into fire or a hot oven, or mechanically crushing or

- Leaving a battery in an extremely high temperature surrounding

environment that can result in an explosion or the leakage of flammable

- A battery subjected to extremely low air pressure that may result in an

This telecommunication equipment conforms to the requirements of the

This device complies contains license-exempt transmitter that comply with Innovation Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference; and (2) This

device must accept any interference, including interference that may



- Consult the dealer or an experienced radio/TV technician for help.



- Connect the equipment into an outlet on a circuit different from that to

- Increase the separation between the equipment and receiver.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received,

including interference that may cause undesired operation. Warning: Changes or modifications not expressly approved by the party

économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) L'appareil ne doit pas produire de brouillage; (2) L'appareil doit accepter tout

Transmission power: 4dBm(conducted)

d'en compromettre le fonctionnement.

cutting of a battery, that can result in an explosion:

Safety Statement

explosion or the leakage

NBTC Statement

liquid or gas:



.

Have questions?

Visit twelvesouth.com or contact support@twelvesouth.com

© 2022 Twelve South, LLC. All rights reserved. 1503 King St. Charleston, SC 29405 - USA