

FRIDAY @



[fridaylabs.net](http://fridaylabs.net)



[fridaylabs](https://www.facebook.com/fridaylabs)



[fridaylabs](https://twitter.com/fridaylabs)

## Base unit

Tailpiece Adaptor



Universal Baseplate™



Clip Release™

Pairing Indicator LED  
Flashes during Setup and Pairing

Reset Button

Using a paperclip, press once to re-enable Setup

## Mounting instruction

Tools you will need




Screw driver, Metal saw (if required)

## Step 1 - Uninstall old lock



Unscrew bolts and remove thumb turn.

## Step 2a - Check opening size (Normal)

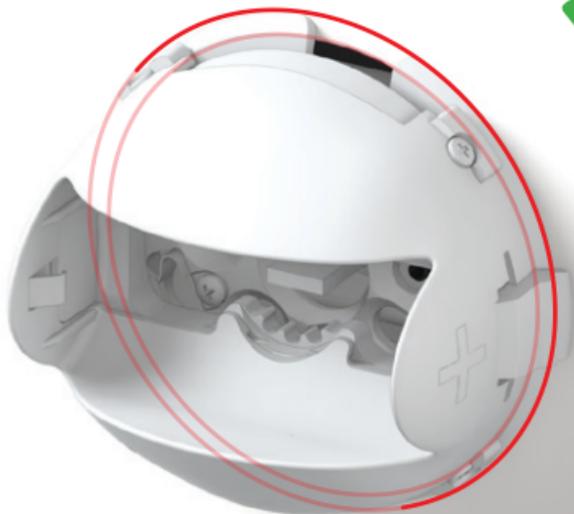

If the available opening is too large or off-center, use the adaptor plate to adjust the lock's footprint.

## Step 2b - Check opening size (Adaptor plate)



Adaptor plate

## Step 3a - Measure tailpiece

Max. tailpiece length



Measure the tailpiece to check if it exceeds the length limit.

## Step 3b - Measure tailpiece



If the tailpiece protrudes too far outwards, there are two options for adjusting the length.



## Step 4 - Shorten tailpiece



Alternatively, remove the cylinder then use a hacksaw to cut the tailpiece to the required length.

## Step 5 - Rotate Universal Baseplate™



Scandinavian



Arrow  
Assa Abloy  
Baldwin  
Defiant  
Delaney


Emtek  
Faultless  
Hager  
Kwikset  
K2 C.H.



MaxGrade  
Schlage

Align the baseplate with the screws from your existing lock. The color coding will help you identify which mounting holes you need to use based on your previous lock.

## Step 6a - Install screws

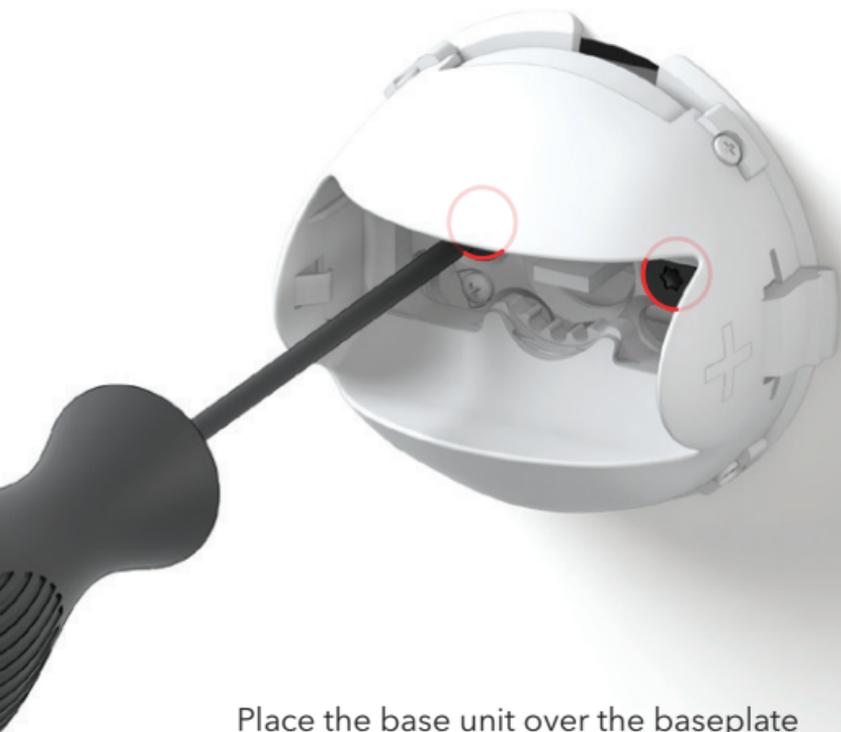

Place the base unit over the baseplate  
and insert the existing screws.

## Step 6b - Install screws



Push the base unit upwards to align it correctly as you tighten the screws.

## Step 7 - Rotation and orientation



Rotate the lock to ensure that the base unit operates smoothly, then turn it to the desired lock/unlock orientation.

## Step 8 - Install tailpiece adaptor



Secure the orientation by inserting the tailpiece adaptor.

## Step 9 - Install battery



Align the + and - on the battery with the indicators on the mechanism.

## Step 10 - App setup




Download the Friday app from the App Store or Google Play, and follow the onscreen instructions to set up your lock.

## Step 11 - Install shell



Complete the installation by fitting the shell.

# Friday app Layout

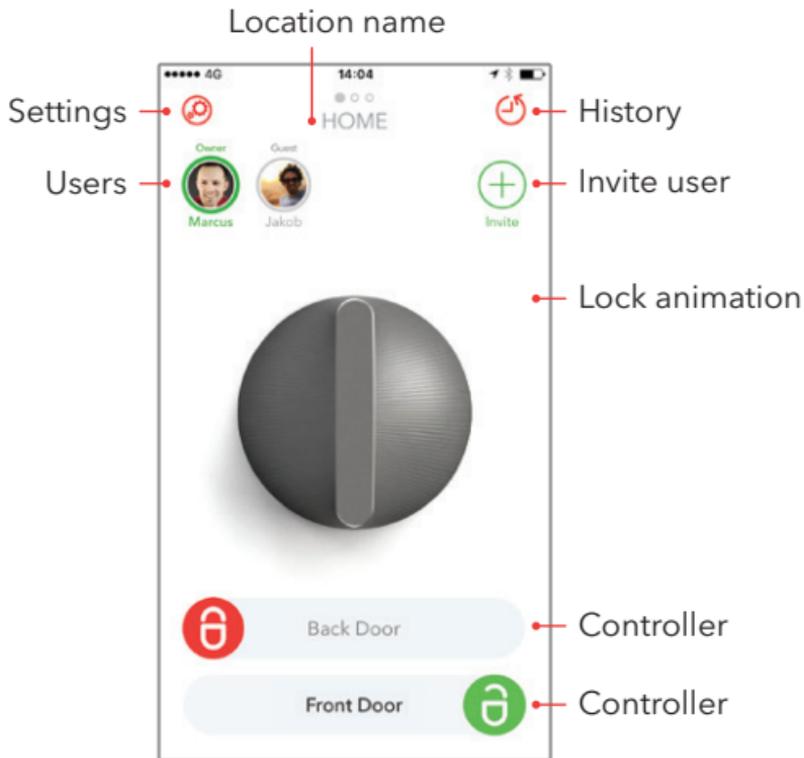

## How to remove shell



Slide a credit card under the edge of the shell to release the holding clips, then remove the shell.

## Battery charger



Always ensure that the battery charges fully.  
From the factory, it will be around 30% charged.



- ☀️ 0 - 25% charged
- ☀️ 25 - 50% charged
- ● ☀️ 50 - 75% charged
- ● ● ☀️ 75 - 99% charged
- ● ● ● Fully charged
- ☀️☀️☀️☀️ Reverse battery!
- ☀️☀️☀️☀️ Remove battery! Hot!

Insert the battery into the charging cradle in line with the + and - indicators, then plug the charger into any USB outlet.

## Caution



**Warning! Do not operate the lock if it is not mounted on a door. There is a risk of pinching.**

## Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

### **FCC Part 15C 2.4GHz Statement**

#### **IMPORTANT NOTE:**

#### **FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

#### **IC Statement**

Operation is subject to the following two conditions: 1) this device may not cause interference and 2) this device must accept any interference, including interference that may cause undesired operation of the device.



**TAILPIECE**

5/16"

8mm

Feel free to contact us whenever you need to!

See if your question is answered at:

**[www.fridaylabs.net/support](http://www.fridaylabs.net/support)**

Or email us directly at:

**[support@fridaylabs.net](mailto:support@fridaylabs.net)**