


TOP LOAD DIGITAL DIAL CYCLE & FABRIC CARE GUIDE

Go from start to finish with one quick turn or choose from more than 25 wash and dry cycles for total laundry control.

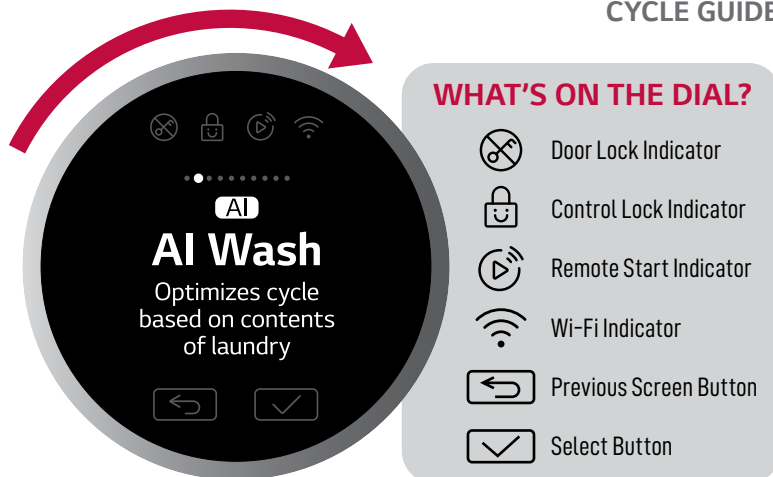

Get a fast start by choosing one of the pre-loaded wash and dry cycles.

WASH CYCLES	CYCLE DESCRIPTION
Normal	Mixed loads and cotton or linen fabrics
AI Wash	Optimizes cycle based on contents of laundry
Bedding	Bulky items, pillows, blankets or comforters
Delicates	Lingerie, sheer or easily damaged fabrics
Towels	Includes high-speed spin to remove excess water
Quick Wash	Lightly soiled clothing or small loads
Heavy Duty	Heavily soiled laundry, especially cotton fabrics
Deep Wash	Adds additional water for heavily soiled items
Waterproof	Water-resistant clothing or mattress covers
Prewash+Normal	Prewash lightly stained clothing
Rinse+Spin	Rinses and spins items only
Spin Only	Drains and spins with no wash or rinse
Perm. Press	Minimizes wrinkles in "wrinkle-free" fabrics
Tub Clean	Designed to clean the inside of the washer

DRY CYCLES	CYCLE DESCRIPTION
Normal	Mixed loads and cotton or linen fabrics
AI Dry	Optimizes cycle based on fabrics
Bedding	Bulky items, pillows, blankets or comforters
Delicates	Lingerie, sheer or easily damaged fabrics
Towels	Designed for towels
Quick Dry	Small loads
Timed Dry	Lets you manually select the drying time
Antibacterial	A high-temperature dry cycle
Perm. Press	Minimizes wrinkles in "wrinkle-free" fabrics
SteamFresh®	Reduces wrinkles and odors using steam
Heavy Duty	Extra drying for heavier fabrics
Air Dry	Tumble dries heat-sensitive items

Or, quickly and easily customize your laundry with special cycles for a wide range of load types.


WASH CYCLES	CYCLE DESCRIPTION
Baby Bibs	Soaks and cleans food-stained baby items
Baby Wear	Designed for lightly soiled baby clothing
Bright Whites™	Use with white fabrics only
Dresses	Lightly soiled, delicate dresses
Econowash	Helps reduce normal cycle energy consumption
Juice/Food Stains	Powerful wash for heavily soiled items
Kids Wear	High temperatures for heavily soiled items
Overnight Wash	Helps reduce spin noise and wrinkling
Single Item	Quickly washes a single item
Sweat Stains	Helps remove sweat stains and odors
Swimwear	Gently removes chlorine or salt from swimwear
Small Load	A small number of normally soiled items
Large Load	Washer is approximately half full
X Large Load	Washer is very full

DRY CYCLES	CYCLE DESCRIPTION
Super Dry	Thoroughly dries cotton fabrics
Jeans	Designed specifically for jeans
Blanket Refresh	Warms and fluffs up blankets
Low Temp Dry	Reduces energy consumption
Overnight Dry	Energy efficient cycle dries a small load overnight
Easy Ironing	Leaves clothes slightly damp for easy ironing
Small Load	Small or light items
Large Load Dry	Dryer is approximately half full
X Large Load Dry	Dryer is very full
SteamSanitary®	Reduces odors using steam and high temperature
Rack Dry	Dries items that should not be tumbled (install the rack)
Wrinkle Prevention	Prevents wrinkles by tumbling clothes after the cycle

Intuitive dial control gives you more of what you need with each turn, from descriptions of each setting and helpful prompts to status updates and remaining cycle time.

GET LAUNDRY DAY DIALED IN—IT'S EASY

Load, set and go—laundry day is just that easy with LG's LCD dial and touch panel.

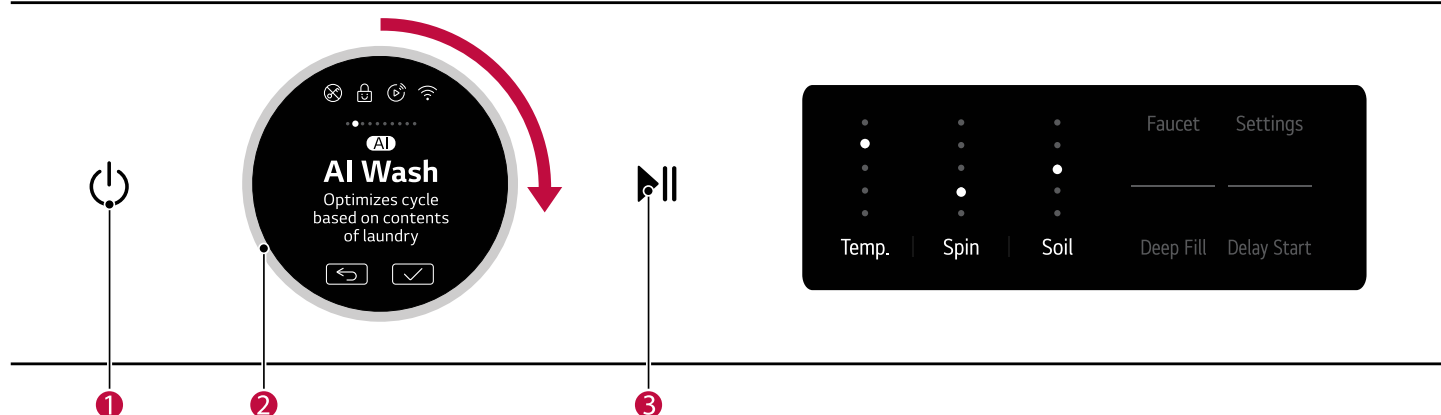

1

POWER IT ON

Touch Power to turn on your LG washer or dryer—you'll be greeted with a tune and friendly "Hello."

2

TURN THE DIAL

Rotate the dial to choose from 12 to 14 pre-loaded cycles or touch Settings to edit, remove or add cycles.

3

PRESS START

Touch and hold Start to begin the selected cycle. After sensing the load, the dial will show remaining cycle time.

COMPLETELY CUSTOMIZE YOUR CYCLE

Modify any cycle by using the touch panel to change settings like temperature, spin speed and soil level to your liking. You can delay the start of a load and even add options like Deep Fill.

MODIFY ANY CYCLE

Press pads such as Temp., Spin or Soil to make adjustments to the selected cycle before you hit Start.

ADD OTHER OPTIONS

Options for each cycle will light up on the touch panel—press the one you want and then make selections on the dial.

GO BACK OR SELECT

Press the check mark on the dial to confirm your choice or hit the back button to see the previous screen.