


Extending Tilt TV Wall Mount

RF-TVXLEXA

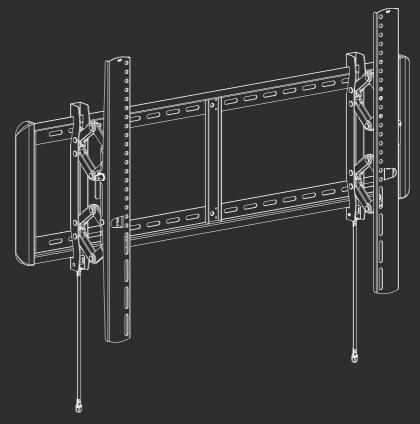

INSTALLATION GUIDE

Before using your new product, please read these instructions to prevent any damage.



Contents

Introduction	2
Important Safety Instructions	3
Specifications	3
Features	4
Dimensions	4
Tools needed	5
Package contents	6
Installation instructions	8
STEP 1: Determining whether your TV has a flat back or an irregular or obstructed back	8
STEP 2: Selecting screws, washers, and spacers	9
STEP 3: Option 1 - Attaching the mounting hardware to TVs with a flat k STEP 3: Option 2 - Attaching the mounting hardware to TVs with irregulobstructed backs	lar or
STEP 4: Determining wall-mount location	13
STEP 5: Option 1 - Installing on a wood stud wall	14
STEP 5: Option 2 - Installing on a solid concrete or concrete block wall .	17
STEP 6: Attaching the wall mount end caps	20
STEP 7: Attaching your TV to the wall plate	21
STEP 8: Adjusting the distance from the wall	22
STEP 9: Adjusting the tilt angle	23
LIEETIME LIMITED WADDANTY	24

Introduction

Congratulations on your purchase of a high-quality Rocketfish product. Your RF-TVXLEXA represents the state of the art in TV wall-mount design and is designed for reliable and trouble-free performance.

Important Safety Instructions Read all instructions before use. Keep these instructions.



Do not use this product for any purpose not explicitly specified by Rocketfish.

SAFETY WARNINGS:

- Improper installation may cause property damage or personal injury. If you do not
 understand these directions, or have doubts about the safety of the installation, contact
 Customer Service. Rocketfish is not responsible for damage or injury caused by
 incorrect installation or use.
- The weight of your TV must not exceed 220 lbs. (100 kg). The wall must be capable of supporting five times the weight of your TV and wall mount combined.
- This product contains small items that could be a choking hazard if swallowed. Keep these items away from young children!
- Never let children climb on this product or play with this product.
- Do not sit or stand on this product.
- Do not fasten a TV that is heavier than the recommended load rating to the mount.
- Use a suitable concrete block/wall or wood stud wall.
- Avoid pinching, keep fingers away from brackets when adjusting the TV position.
- Improper handling can result in cuts and lacerations.
- Pictures are for reference only, subject to available products.
- Keep this instruction for future reference.

Specifications


- Maximum TV weight: 220 lbs. (100 kg)
- Screen size: 50 to 100 in. (127 to 505.4 cm) diagonal
- Overall dimensions (H × W × D): 24.8 x 40.19 x 2.95 in. (63 x 102.1 x 7.5 cm)
- Wall-mount weight: 17.56 lbs. (7.98 kg)
- Tilt angle +3° to -10°
- Extension: 2.95 6.25 in. (75 159 mm)



Features


- Tilts Effortless adjustment of +3 to -10 degrees reduces glare and reflections
- Extends 6.25 in. (15.9 cm) extension provides optimal viewing
- Narrow 2.95 in. (7.5 cm) profile when closed against the wall
- VESA-compatible from 100×100 mm to 850×600 mm
- Includes installation hardware for quick setup

Dimensions

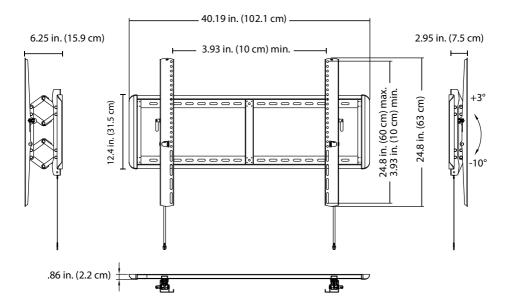


Tools needed

You will need the following tools to assemble your new TV wall mount:

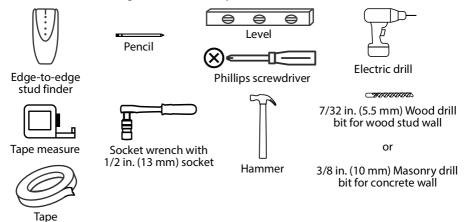



Package contents

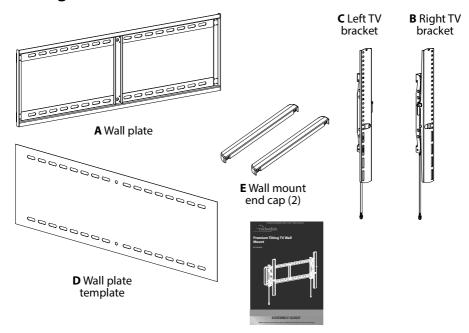

Installation Guide

TV hardware


Lbl	Hardware	Qty	Lbl	Hardware	Qty
F	M8 × 60 lag bolt	6	P	M8 × 35 mm screw	4
G	Concrete anchor Ø10 x 50 mm	6	Q	M8 × 50 mm screw	4
ı	Magnetic level	1	R	M6 x 17 spacer	4
J	M4 × 12 mm screw	4	S	M8 x 22 spacer	4
К	M6 × 12 mm screw	4	Т	M8 x 10 spacer	4
L	M6 × 20 mm screw	4	U	2.5 mm spacer	8
М	M8 × 20 mm screw	4	v	M4 washer	4
N	M4 × 35 mm screw	4	w	M6 washer	4
o	M6 × 35 mm screw	4			




Installation instructions

STEP 1: Determining whether your TV has a flat back or an irregular or obstructed back


- 1 Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.
- 2 If your TV has a table-top stand attached, remove the stand. See the documentation that came with your TV for instructions.
- **3** Temporarily lay the TV brackets (**B** and **C**) on the back of your TV in a vertical orientation.
- 4 Align the screw holes in the TV brackets (**B** and **C**) with the mounting screw holes on your TV.
- 5 Identify which type of back your TV may have:
 - Flat back: The brackets lay flush against the back of your TV and does not block any jacks. You do not need spacers when assembling the wall mount.

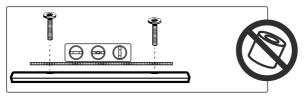

• Obstructed back: The brackets block any of the jacks on the back of your TV. You will need spacers (R, S, T, or U) when assembling the wall mount.

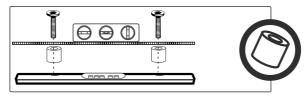

• Irregularly-shaped back: There is a gap between the brackets and some part of the back of your TV. You will need spacers (R, S, T, or U) when assembling the wall mount.

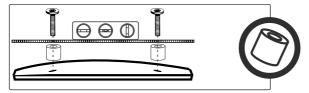

6 Remove the TV brackets (**B** and **C**).

STEP 2: Selecting screws, washers, and spacers

Select the hardware for your TV (screws, washers, and spacers). A limited number of TVs come with mounting hardware included. (If there are screws that came with the TV, they are almost always in the holes on the back of the TV.) If you don't know the correct length of the mounting screws your TV requires, test various sizes by hand threading the screws. Select one of the following types of screws:

 $\begin{array}{lll} \text{M4} \times \text{12 mm screws (\textbf{J})} & \text{M6} \times \text{35 mm screws (\textbf{O})} \\ \text{M4} \times \text{35 mm screws (\textbf{N})} & \text{M8} \times \text{20 mm screws (\textbf{M})} \\ \text{M6} \times \text{12 mm screws (\textbf{K})} & \text{M8} \times \text{35 mm screws (\textbf{P})} \\ \text{M6} \times \text{20 mm screws (\textbf{L})} & \text{M8} \times \text{50 mm screws (\textbf{Q})} \\ \end{array}$

Select M4 washers (**V**) or M6 washers (**W**).

For an irregular or obstructed TV back, use the 10 mm spacers (\mathbf{T}), 17 mm spacers (\mathbf{R}), the 22 mm spacer (\mathbf{S}), or 2.5 mm spacers (\mathbf{U}).

♠ CAUTION

To avoid potential personal injuries and property damage, make sure that there are adequate threads to secure the brackets to your TV. If you encounter resistance, stop immediately and contact customer service. Use the shortest screw and spacer combination to accommodate your TV. Using hardware that is too long may damage your TV. However, using a screw that is too short may cause your TV to fall from the mount.

Screw fits correctly









Screw is too short




- 2 Remove the screws.
- **3** For a flat back TV, go to <u>STEP 3: Option 1 Attaching the mounting hardware to TVs with a flat back on page 10.</u>

-OR-


For an obstructed back, go to <u>STEP 3: Option 2 - Attaching the mounting hardware to TVs with irregular or obstructed backs</u> on page <u>11</u>.




STEP 3: Option 1 - Attaching the mounting hardware to TVs with a flat back

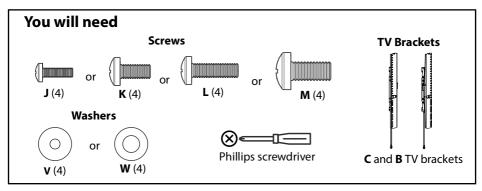

- 1 Align the holes you noted on the TV brackets (**B** and **C**) with the screw holes on the back of your TV. The TV brackets (**B** and **C**) are marked "**R**" for the right TV bracket (**B**) and "**L**" for the left TV bracket (**C**). Make sure that the TV brackets (**B** and **C**) are level.
- Place the washers (V or W) over the holes in the TV brackets (B and C) that align with the screw holes on the back of your TV, then insert the screws (J, K, L, or M) through the washers.
- 3 Tighten the screws until they are snug against the TV brackets (**B** and **C**). Do not over tighten.

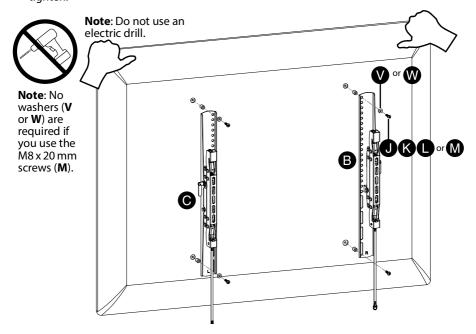


STEP 3: Option 2 - Attaching the mounting hardware to TVs with irregular or obstructed backs

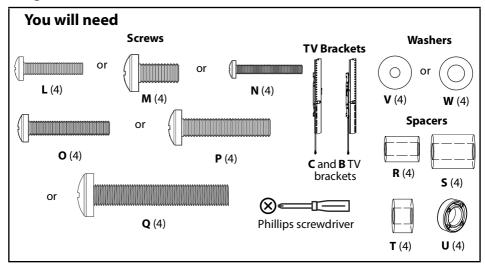


- 1 Align the TV brackets (**B** and **C**) with the screw holes on the back of your TV.
- Place spacers (R, S, T, or U) behind the TV brackets (B and C) and the washers (V or W) over the holes in the TV brackets (B and C), then insert the screws (L, M, N, O, P, or Q) through the washers (V or W), TV brackets (B and C), and spacers (R, S, T, or U). Make sure the TV brackets (B and C) are level.

rocketfish...

3 Tighten the screws until they are snug against the TV brackets (**B** and **C**). Do not over tighten.

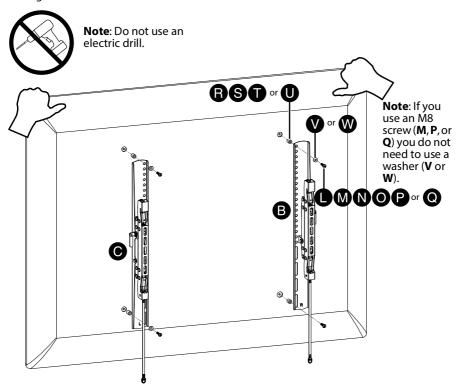

STEP 4: Determining wall-mount location

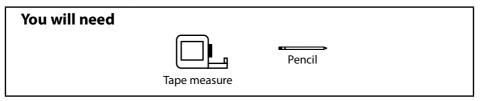


Notes:

- For more detailed information on determining where to drill your holes, visit our online height-finder at:
 - http://mf1.bestbuy.selectionassistant.com/index.php/heightfinder
- Your TV should be high enough so your eyes are level with the middle of the screen.
 Normally, 40 to 60 in. (101.6 to 152.4 cm) from the ground.


The center of your TV will match the center of the wall plate (A). Before you drill holes in the wall:

- 1 Measure the distance from the bottom of the TV to the middle (half of the height of the TV). This is measurement a.
- 2 Measure the distance from the floor to where you want the bottom of the TV to be placed on the wall. Keep in mind that the bottom of the TV should be placed above any furniture (such as entertainment centers or TV stands). The TV should also be above items placed on top of the furniture (like a Blu-ray player or cable box). This is measurement b.
- 3 Add **a** + **b**. The total measurement is the height where you want the center of the wall plate (**A**) to be on the wall.
- 4 Use a pencil to mark this spot on the wall.

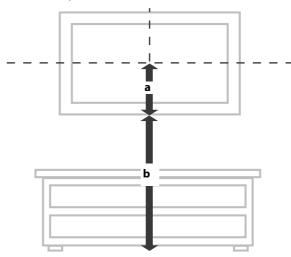




STEP 5: Option 1 - Installing on a wood stud wall

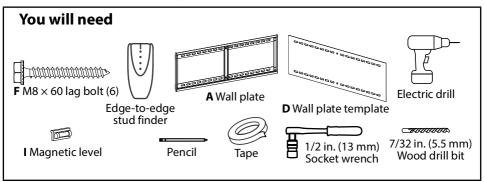


Note: Drywall covering the wall must not exceed 5/8 in. (16 mm).


1 Locate the stud with a stud finder. Verify the center of the stud with an edge-to-edge stud finder.

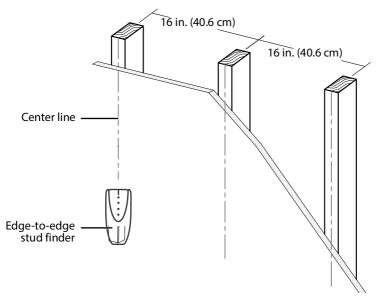

2 Align the wall plate template (**D**) at the height you determined in the previous step and make sure that it is level using the magnetic level (**I**). Tape the wall plate template (**D**) to the wall, then use a pencil to mark the lag bolt hole locations (4) on the stud centers. Remove the wall plate template (**D**).

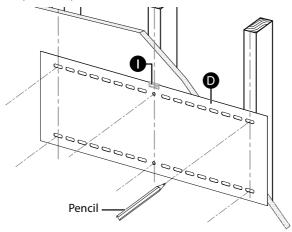

3 Using an electric drill, drill pilot holes to a depth of 2.5 in. (65 mm) using a 7/32 in. (5.5 mm) wood drill bit.

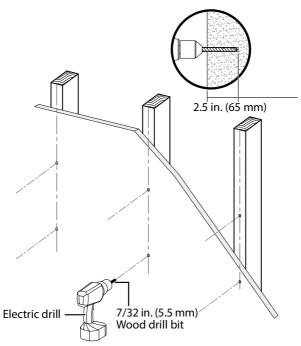




4 Align the wall plate (**A**) with the pilot holes, insert the M8 \times 60 lag bolts (**F**) through the holes in the wall plate, then tighten the M8 \times 60 lag bolts (**F**) only until they are firmly against the wall plate (**A**).


! CAUTION

- Avoid potential injuries or property damage! DO NOT over-tighten the M8 \times 60 lag bolts (**F**).
- Make sure that all six lag bolts are used and fastened to studs.

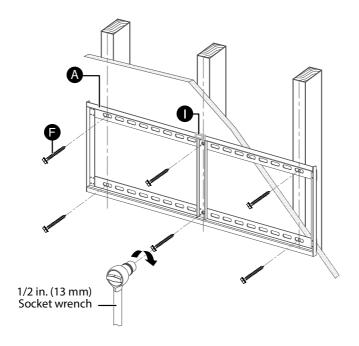

5 Go to <u>STEP 6: Attaching the wall mount end caps</u> on page <u>20</u>.


STEP 5: Option 2 - Installing on a solid concrete or concrete block wall

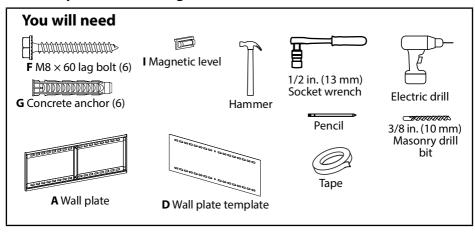

/ CAUTION


To prevent property damage or personal injury, never drill into mortar between blocks. Mount wall plate directly onto the concrete surface.

1 Align the wall plate template (**D**) at the height you determined in the previous step and make sure that it is level. Tape the wall plate template (**D**) to the wall, then use a pencil to mark the lag bolt hole locations (6). Remove the wall plate template (**D**).

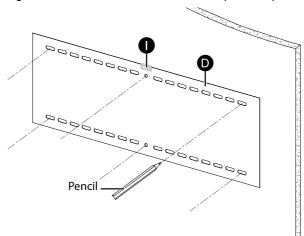


rocketfish.

2 Drill pilot holes to a depth of 2.5 in. (65 mm) using a 3/8 in. (10 mm) masonry drill bit.

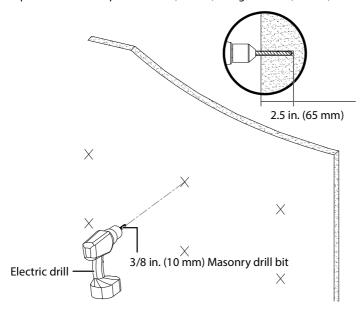


3 Insert the concrete anchors (**G**) into the pilot holes and use a hammer to make sure the concrete anchors (**G**) are flush with the concrete surface.

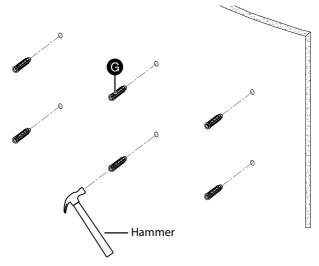

4 Align the wall plate (A) with the concrete anchors (G), insert the M8 × 60 lag bolts (F) through the holes in the wall plate (A), then tighten the M8 × 60 lag bolts (F) only until they are firm against the wall plate (A).


! CAUTION

Avoid potential injuries or property damage! DO NOT over-tighten the M8 \times 60 lag bolts (**F**).

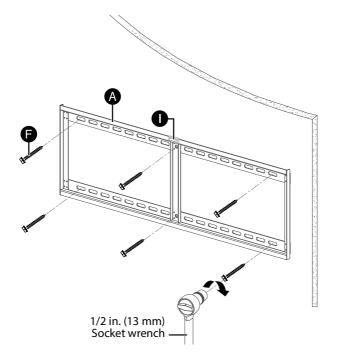




STEP 6: Attaching the wall mount end caps

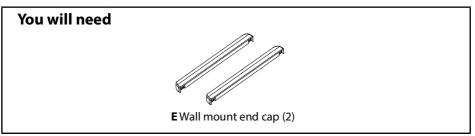


• Attach the wall mount end caps (**E**) to the wall plate (**A**) by fitting the covers over each end of the wall plate (**A**).

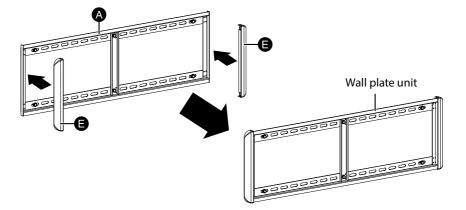

STEP 7: Attaching your TV to the wall plate

Holding the TV with the top of the screen tilted toward the wall, slide the upper notches
of the right and left TV brackets (**B** and **C**) over the upper lip of the wall plate (**A**). Then,
gently lower the TV until the lock engages the lower lip of the wall plate (**A**). You will
hear a click when the TV locks into place.

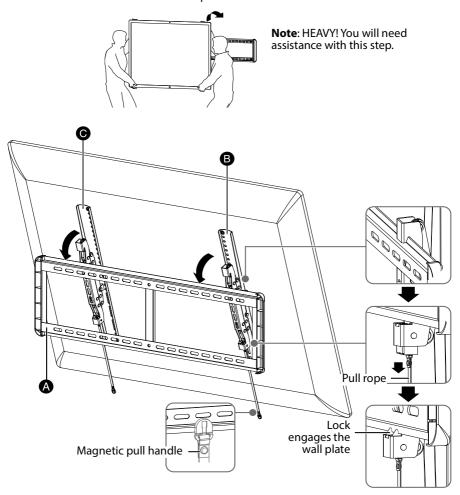


Tip: If you are mounting a very large TV (over 65 in. [165.1 cm]), you may want to consider connecting the cables to the TV before mounting it on the wall, as the ports might be difficult to reach after it is mounted.



STEP 8: Adjusting the distance from the wall


 To adjust your TV's distance from the wall, grasp the TV on both sides and gently pull it out from the wall.

Note: Make sure that there are no cords or cables that could be pinched between the extensions of the TV brackets.

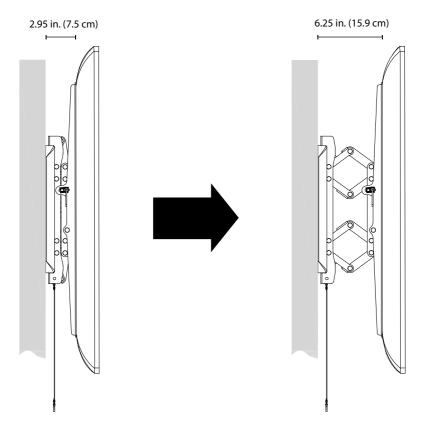

STEP 9: Adjusting the tilt angle

- 1 Loosen the adjustment knobs on the sides of the TV brackets.
- 2 Adjust for the best viewing angle.
- 3 Tighten the adjustment knobs.

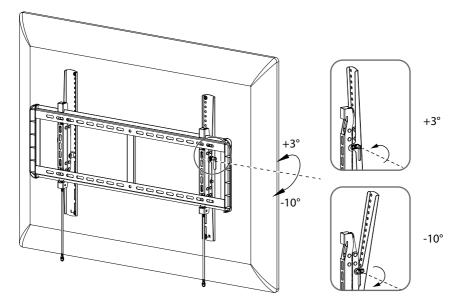

Removing the TV from the wall mount

• Pull the latches down to unlock the TV from the wall mount, then pull the bottom of the TV out from the wall and lift it up and off the wall plate.

For customer service, call: 1-800-620-2790 (U.S. and Canada)



LIFETIME LIMITED WARRANTY

Best Buy, or its Authorized Partner of Rocketfish-branded products, warrants to you, the original purchaser of this new Rocketfish-branded product ("Product"), that the Product shall be free of defects in the original manufacture of the material or workmanship for the Warranty Period.

For this warranty to apply, your Product must be (i) purchased in the United States or Canada from a Best Buy branded retail store, online at www.bestbuy.com or www.bestbuy.ca, or from Best Buy's Authorized Partner, and (ii) packaged or sold with this warranty statement.

The term "Best Buy", as used in this warranty, refers to Best Buy branded retail stores, www.bestbuy.com and www.bestbuy.ca, and Best Buy's Authorized Partner.

Because Rocketfish cannot control the quality of products sold by unauthorized sellers, this warranty applies only to Products that were purchased from Best Buy, or a Rocketfish Authorized Partner, unless otherwise prohibited by law. Rocketfish reserves the right to reject warranty claims for Products purchased from unauthorized sellers, including unauthorized websites.

REPAIR OR REPLACEMENT, AS PROVIDED UNDER THIS WARRANTY, IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. ROCKETFISH SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESSED OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS, OR LOST PROFITS. ROCKETFISH PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT. ALL EXPRESSED AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES, AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON (i) HOW LONG AN IMPLIED WARRANTY LASTS, (ii) EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR (iii) LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OT HE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

How long does the coverage last?

The Warranty Period lasts for the useful life of the Product beginning on the date you purchased the Product or the date of delivery (if later than the date of purchase). Your purchase date is printed on the receipt you received with the Product. In the event the Authorized Partner ceases to sell the covered Rocketfish-branded product, this Limited Lifetime Warranty shall terminate for that product and there shall be no repair or replacement of the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Rocketfish repair center or store personnel, Rocketfish will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Rocketfish and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Rocketfish Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location or from a Best Buy online website (www.bestbuy.com or www.bestbuy.ca), please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased your Product from an Authorized Partner, call Rocketfish at 1-800-620-2790.

To obtain warranty service in the United States and Canada, call 1-800-620-2790. Call agents may diagnose and correct the issue over the phone.

If you purchased the Product from an Authorized Partner other than Best Buy, please call 1-888-BESTBUY in the United States or 1-866-BESTBUY in Canada. You will be asked to provide proof of purchase and to return your Product to Best Buy. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

Where is the warranty valid?

This warranty is valid only in the United States and Canada to the original purchaser of the product from an Authorized Partner, in the country where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Food, beverage, and/or medicine loss/spoilage.
- Damage to other products caused by a power surge or other similar issue while connected to the Product.
- Customer instruction/education.
- · Installation.
- Setup adjustments.
- Cosmetic damage.
- Damage due to weather, lightning, and other acts of God, such as power surges.
- · Accidental damage.
- Misuse.
- Abuse.
- Negligence.
- Commercial purposes/use, including but not limited to use in a place of business or in communal
 areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place
 other than a private home.
- Modification of any part of the Product, including the antenna.
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance.
- Connection to an incorrect voltage or power supply.
- Damage due to attempted repair by any person not authorized by Rocketfish to service the Product.
- Products sold "as is" or "with all faults".
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.).
- Products where the factory applied serial number has been altered or removed.
- Loss or theft of this product or any part of the product.

rocketfish...

- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

Contact Rocketfish:

1-800-620-2790

Rocketfish is a trademark of Best Buy and its affiliated companies.

*Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2025 Best Buy. All rights reserved.



www.rocketfishproducts.com 1-800-620-2790 (U.S. and Canada)

ROCKETFISH is a trademark of Best Buy and its affiliated companies. Registered in some countries. Distributed by Best Buy Purchasing, LLC 7601 Penn Ave South, Richfield, MN 55423 U.S.A. ©2025 Best Buy. All rights reserved.