

PBX-61081BT

# **QFX**

WHERE THE PARTY BEGINS™



**INSTRUCTION MANUAL**

**WARNING!**

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth. Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.

**¡ADVERTENCIA!**

PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO RETIRE LA CUBIERTA DE ESTE ALTAVOZ. NO HAY PARTES REPARABLES POR EL USUARIO ADENTRO. REFIERA TODAS LAS REPARACIONES A UN TÉCNICO CALIFICADO

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni utilice este producto cerca de líquidos, fuentes de calor como radiadores, rejillas de calefacción o bajo condiciones climáticas extremas. Limpie solamente con un paño seco. Los usuarios deben exhibir una seguridad adicional cuando aparezca el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones indicadas.

**ATTENTION**

POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE COUVERCLE DE CET HAUT-PARLEUR. IL N'Y A AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. RÉFÉREZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ

Pour éviter tout incendie ou choc électrique, n'exposez pas cet équipement à la pluie ou à l'humidité. Ne stockez pas et n'utilisez pas ce produit à proximité de liquides, de sources de chaleur telles que radiateurs, bouches de chaleur ou dans des conditions météorologiques extrêmes. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve d'une sécurité supplémentaire lorsque le symbole AVERTISSEMENT ou ATTENTION apparaît dans ce manuel d'instructions et suivre toutes les précautions telles qu'elles sont énoncées.

**DISPLAY SYSTEM SETTINGS**

1. Input Mode: The LED display screen will display the information of input mode for USB/TF/BT/ AUX /FM. When a USB flash drive / TF Card is inserted into the USB/TF input, the unit will automatically switch to USB/TF mode and begin playing Mp3 audio files from the USB flash drive / TF Card.
2. Track Number: The track number currently playing from the USB/TF will display.
3. FM Mode: All FM channels display here. Press "play/pause" button for auto scan all channels.

**AJUSTES DEL SISTEMA DE PANTALLA**

1. Modo de entrada: La pantalla LED mostrará la información del modo de entrada para USB / TF / BT / AUX / FM. Cuando se inserta una unidad flash USB / tarjeta TF en la entrada USB / TF, la unidad cambiará automáticamente al modo USB / TF y comenzará a reproducir archivos de audio MP3 desde la unidad flash USB / tarjeta TF.
2. Número de pista: Se mostrará el número de pista que se está reproduciendo actualmente desde el USB / TF.
3. Modo FM: aquí se muestran todos los canales FM. Presione el botón "reproducir / pausa" para escanear automáticamente todos los canales.

**PARAMÈTRES DU SYSTÈME D'AFFICHAGE**

1. Mode d'entrée: L'écran d'affichage LED affichera les informations du mode d'entrée pour USB / TF / BT / AUX / FM. Lorsqu'une clé USB / carte TF est insérée dans l'entrée USB / TF, l'appareil bascule automatiquement en mode USB / TF et commence à lire des fichiers audio MP3 à partir de la clé USB / carte TF.
2. Numéro de piste: Le numéro de piste en cours de lecture à partir de l'USB / TF s'affiche.
3. Mode FM: Tous les canaux FM s'affichent ici. Appuyez sur le bouton "lecture / pause" pour rechercher automatiquement toutes les chaînes

**CHARGING THE SPEAKER**

•To protect the lifespan of the built-in battery, be sure to fully charge the PBX-61081BT before use. Not charging your unit right away can affect the performance of the battery. A full recharge takes approximately 8-12 hours. Plug it in to use it while its charging.

•Para proteger la vida útil de la batería incorporada, asegúrese de cargar completamente la PBX-61081BT antes de usarla. No cargar su unidad de inmediato puede afectar el rendimiento de la batería. Una recarga completa tarda aproximadamente de 8 a 12 horas. Conéctelo para usarlo mientras se carga.

•Pour protéger la durée de vie de la batterie intégrée, assurez-vous de charger complètement le PBX-61081BT avant de l'utiliser. Le fait de ne pas charger votre appareil tout de suite peut affecter les performances de la batterie. Une recharge complète prend environ 8 à 12 heures. Branchez-le pour l'utiliser pendant sa charge.

Questions? Comments? Contact Us Anytime  
Preguntas? Comentarios? Contáctenos en cualquier momento  
Des questions? Commentaires? Contactez-nous à tout moment



1-800-864-CLUB (2582)  
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com  
Mon-Fri 9AM - 5PM (PST)



Follow Us

**QFXUSA.COM**

## CONTROL PANEL FUNCTIONS

### 1. GLOBAL CONTROLS:

MODE/LED.SW: Press to change between BT/AUX/USB/FM. Press and hold to disable the party lights.

REC: Press and hold to start recording to the USB or TF card (Mic only). Press to playback recording.

REPEAT: Press to repeat one or all tracks.

PREV: Press to select the previous track or FM station.

PLAY/PAUSE: Press to Play/Pause the current audio track. In FM mode press to begin auto scan.

NEXT/TWS: Press for the NEXT track or FM Station. Press and hold to play the recorded files. In bluetooth mode press and hold for TWS sync.

2. AUX INPUT: Connect and external audio device with a 3.5mm TRS audio cable.

3. USB/TF Port: Insert a USB/TF card for (.mp3 format) audio playback. Record microphone to the USB or TF card.

4. MIC.VOL: Adjust the microphone volume level.

5. MIC.ECHO: Adjust the microphone echo level.

6. BASS: Adjust to boost the bass volume.

7. Treble: Adjust to boost the treble volume.

8. VOLUME: Increase or decrease the master volume of the unit.

9. CHARGING INDICATOR: Charging is full.

10. MIC. INPUT: Insert 6.35mm TRS mic cable to use mic.

11. ANT: Extend the telescoping antenna for better radio reception.

12. POWER: Turn the unit ON/OFF. AC 100-240V 50/60hz.

## FUNCIONES DEL PANEL DE CONTROL

### 1. CONTROLES GLOBALES:

MODE / LED.SW: Presione para cambiar entre BT / AUX / USB / FM.

Mantenga pulsado para desactivar las luces de la fiesta.

REC: presione y mantenga presionado para comenzar a grabar en la tarjeta USB o TF (solo micrófono). Presione para reproducir la grabación.

REPETIR: presione para repetir una o todas las pistas.

PREV: Presione para seleccionar la pista o estación FM anterior.

REPRODUCIR / PAUSAR: presione para reproducir / pausar la pista de audio actual. En el modo FM, presione para comenzar la búsqueda automática.

SIGUIENTE / TWS: presione para la pista SIGUIENTE o la estación FM. Mantenga pulsado para reproducir los archivos grabados. En el modo bluetooth, mantenga presionado para sincronizar TWS.

2. ENTRADA AUX: Conecte un dispositivo de audio externo con un cable de audio TRS de 3,5 mm.

3. Puerto USB / TF: Inserte una tarjeta USB / TF para la reproducción de audio (formato .mp3). Grabe el micrófono en la tarjeta USB o TF.

4. MIC.VOL: Ajusta el nivel de volumen del micrófono.

5. MIC.ECHO: Ajusta el nivel de eco del micrófono.

6. BASS: ajuste para aumentar el volumen de los graves.

7. Agudos: ajuste para aumentar el volumen de los agudos.

8. VOLUMEN: sube o baja el volumen principal de la unidad.

9. INDICADOR DE CARGA: La carga está completa.

10. MIC. ENTRADA: Inserte el cable de micrófono TRS de 6,35 mm para usar el micrófono.

11. ANT: extienda la antena telescópica para una mejor recepción de radio.

12. ENCENDIDO: Enciende / apaga la unidad. CA 100-240V 50 / 60hz.

## FUNCTIONS DU PANNEAU DE COMMANDE

### 1. CONTROLES GLOBAUX:

MODE / LED.SW: Appuyez pour basculer entre BT / AUX / USB / FM.

Appuyez et maintenez pour désactiver les lumières de fête.

REC: Appuyez et maintenez pour démarrer l'enregistrement sur la carte USB ou TF (micro uniquement). Appuyez pour lire l'enregistrement.

REPEAT: Appuyez pour répéter une ou toutes les pistes.

PREV: Appuyez pour sélectionner la piste ou la station FM précédente.

LECTURE / PAUSE: Appuyez pour lire / mettre en pause la piste audio actuelle. En mode FM, appuyez sur pour lancer le balayage automatique.

NEXT / TWS: Appuyez pour la piste SUIVANTE ou la station FM. Appuyez et maintenez pour lire les fichiers enregistrés. En mode Bluetooth, maintenez la touche enfoncée pour la synchronisation TWS.

2. ENTRÉE AUX: connectez un périphérique audio externe avec un câble audio TRS de 3,5 mm.

3. Port USB / TF: Insérez une carte USB / TF pour la lecture audio (format .mp3). Enregistrez le microphone sur la carte USB ou TF.

4. MIC.VOL: Ajustez le niveau de volume du microphone.

5. MIC.ECHO: Ajustez le niveau d'écho du microphone.

6. BASS: Ajustez pour augmenter le volume des basses.

7. Treble: Ajustez pour augmenter le volume des aigus.


8. VOLUME: Augmentez ou diminuez le volume principal de l'unité.

9. INDICATEUR DE CHARGE: La charge est pleine.

10. MIC. INPUT: Insérez un câble micro TRS 6,35 mm pour utiliser le micro.

11. ANT: Déployez l'antenne télescopique pour une meilleure réception radio.

12. POWER: Allume / éteint l'appareil. AC 100-240V 50 / 60hz.

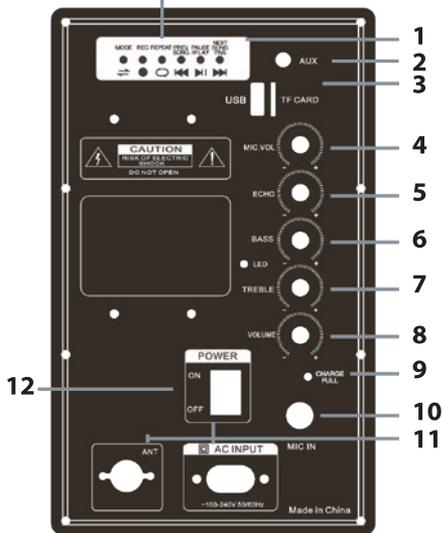

**RECORDING:** Insert the USB/TF Card and connect the microphone, Turn ON the mic, adjust the mic volume, and press and hold the REC button to BEGIN/END recording. Press REC to playback the recording.

**GRABACIÓN:** Inserte la tarjeta USB / TF y conecte el micrófono. Encienda el micrófono, ajuste el volumen del micrófono y mantenga presionado el botón REC para COMENZAR / FINALIZAR la grabación. Presione REC para reproducir la grabación.

**ENREGISTREMENT:** Insérez la carte USB / TF et connectez le microphone. Allumez le micro, ajustez le volume du micro et maintenez le bouton REC enfoncé pour BEGIN / END enregistrement. Appuyez sur REC pour lire l'enregistrement.

Follow Us



QFXUSA.COM



# TWS: BLUETOOTH: FM RADIO



## CONNEXION TWS

Connexion TWS: La connexion TWS est uniquement pour deux enceintes de la même marque et du même modèle.

1. Mettez les appareils sous tension et activez le mode Bluetooth sur les deux haut-parleurs. Ils devraient lire BLUE.
2. Appuyez sur le bouton NEXT/TWS pendant 3 secondes sur l'un des haut-parleurs pour synchroniser les deux appareils ensemble (ils doivent être de la même marque et du même modèle pour fonctionner).
3. Sur votre appareil mobile dans le menu Bluetooth, recherchez QFX PBX-61081BT et connectez-vous.
4. Ouvrez votre application musicale préférée et profitez de True Wireless Stereo.
5. Pour quitter TWS, maintenez le bouton NEXT/TWS enfoncé.

## TWS CONNECTION

*TWS connection: TWS Connection is only for two speakers of the same make and model.*

1. Turn ON the units and enable Bluetooth mode on both speakers. They should read BLUE.
2. Press the NEXT/TWS button for 3 seconds on one of the speakers to sync both units together (they must be the same make and model to function).
3. On your mobile device under the Bluetooth menu, search for QFX PBX-61081BT and connect.
4. Open your favorite music app and enjoy True Wireless Stereo.
5. To Exit TWS press and hold the NEXT/TWS button.

## CONEXIÓN TWS

*Conexión TWS: La conexión TWS es solo para dos altavoces de la misma marca y modelo.*

1. Encienda las unidades y habilite el modo Bluetooth en ambos altavoces. Deben leer BLUE.
2. Pulse el botón NEXT/TWS durante 3 segundos en uno de los altavoces para sincronizar ambas unidades (deben ser de la misma marca y modelo para funcionar).
3. En su dispositivo móvil en el menú de Bluetooth, busque QFX PBX-61081BT y conéctese.
4. Abra su aplicación de música favorita y disfrute de True Wireless Stereo.
5. Para salir de NEXT/TWS, presione y mantenga presionado el botón TWS.

## BLUETOOTH:

•Bluetooth mode: use the MODE button to enable Bluetooth on the PBX-61081BT. Open the Bluetooth settings on your mobile device and search for QFX PBX-61081BT Select the option to pair both devices. Now you can sit back and enjoy the music from your favorite app. You will not need to reconnect Bluetooth when changing modes.

•Modo Bluetooth: use el botón MODE para habilitar Bluetooth en el PBX-61081BT. Abra la configuración de Bluetooth en su dispositivo móvil y busque QFX PBX-61081BT. Seleccione la opción para emparejar ambos dispositivos. Ahora puede sentarse y disfrutar de la música de su aplicación favorita. No necesitará volver a conectar el Bluetooth al cambiar de modo.

•Mode Bluetooth: utilisez le bouton MODE pour activer Bluetooth sur le PBX-61081BT. Ouvrez les paramètres Bluetooth sur votre appareil mobile et recherchez QFX PBX-61081BT. Sélectionnez l'option pour coupler les deux appareils. Vous pouvez maintenant vous asseoir et profiter de la musique de votre application préférée. Vous n'aurez pas besoin de reconnecter Bluetooth lors du changement de mode.

## FM RADIO:

• Frequency-Modulated stations operate in a frequency band extending from 87.5 MHz to 108 MHz. Use the MODE button to select the FM mode. In FM mode, press the Play/Pause button to scan available frequencies in the area.

• Las estaciones de frecuencia modulada operan en una banda de frecuencia que se extiende desde 87.5 MHz a 108 MHz. Utilice el botón MODE para seleccionar el modo FM. En el modo FM, presione el botón Reproducir / Pausa para buscar las frecuencias disponibles en el área.

• Les stations à modulation de fréquence fonctionnent dans une bande de fréquences allant de 87.5 MHz à 108 MHz. Utilisez le bouton MODE pour sélectionner le mode FM. En mode FM, appuyez sur le bouton Lecture / Pausa pour balayer les fréquences disponibles dans la

## \*CHARGE AND PLAY


When the battery power is completely empty, the unit to cannot charge and perform at 100% of the volume when immediately connected to a power source. It is suggested to charge the unit for a while before using it at 100% volume. The unit will perform and charge at low volume levels. The volume output will increase as the unit continues to charge.

## \*CARGAR Y JUGAR

Cuando la energía de la batería está completamente vacía, la unidad no puede cargarse y funcionar al 100% del volumen cuando se conecta inmediatamente a una fuente de alimentación. Se sugiere cargar la unidad por un tiempo antes de usarla al 100% del volumen. La unidad funcionará y se cargará a niveles de volumen bajos. La salida de volumen aumentará a medida que la unidad continúe cargándose.

## \*CHARGER ET JOUER

Lorsque la batterie est complètement vide, l'appareil ne peut pas se charger et fonctionner à 100% du volume lorsqu'il est immédiatement connecté à une source d'alimentation. Il est suggéré de charger l'appareil pendant un certain temps avant de l'utiliser à 100% du volume. L'unité fonctionnera et se chargera à de faibles niveaux de volume. Le volume de sortie augmentera à mesure que l'unité continue de se charger.

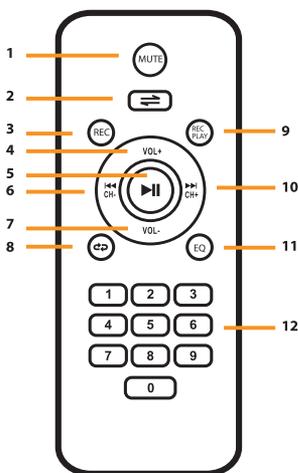


1. MUTE: Press button to mute the unit.
2. Press this button to toggle between functions: AUX/USB/SD/FM/Bluetooth). Press and hold this button to turn ON/OFF the voice prompt.
3. Press this button to start recording.
4. Press this button to increase the master volume for the unit.
5. Press this button to pause or play the current USB/TF audio track. In FM mode, press this button to auto scan all local channels.
6. Press this button to select the previous song/channel.
7. Press this button to reduce the master volume for the unit.
8. Press this button to repeat one song or all songs.
9. Press this button to play back the recording.
10. Press this button to select the next song/channel.
11. Press this button to select the EQ mode: Normal, Jazz, Roe, Pop, Classical.
12. 0-9 Key number for selecting the audio tracks in the USB/TF Card.

1. MUTE: presione el botón para silenciar la unidad.
2. Presione este botón para alternar entre las funciones: AUX / USB / SD / FM / Bluetooth). Mantenga presionado este botón para ENCENDER / APAGAR el mensaje de voz.
3. Presione este botón para comenzar a grabar.
4. Presione este botón para aumentar el volumen principal de la unidad.
5. Presione este botón para pausar o reproducir la pista de audio USB / TF actual. En el modo FM, presione este botón para buscar automáticamente todos los canales locales.
6. Presione este botón para seleccionar la canción / canal anterior.
7. Presione este botón para reducir el volumen principal de la unidad.
8. Presione este botón para repetir una canción o todas las canciones.
9. Presione este botón para reproducir la grabación.
10. Presione este botón para seleccionar la siguiente canción / canal.
11. Presione este botón para seleccionar el modo EQ: Normal, Jazz, Roe, Pop, Classical.
12. 0-9 Número de clave para seleccionar las pistas de audio en la tarjeta USB / TF.


1. MUTE: Appuyez sur le bouton pour couper le son de l'unité.
2. Appuyez sur ce bouton pour basculer entre les fonctions: AUX / USB / SD / FM / Bluetooth). Appuyez sur ce bouton et maintenez-le enfoncé pour activer / désactiver l'invite vocale.
3. Appuyez sur ce bouton pour démarrer l'enregistrement.
4. Appuyez sur ce bouton pour augmenter le volume principal de l'unité.
5. Appuyez sur ce bouton pour mettre en pause ou lire la piste audio USB / TF actuelle. En mode FM, appuyez sur ce bouton pour rechercher automatiquement toutes les chaînes locales.
6. Appuyez sur ce bouton pour sélectionner le morceau / canal précédent.
7. Appuyez sur ce bouton pour réduire le volume principal de l'unité.
8. Appuyez sur ce bouton pour répéter une chanson ou toutes les chansons.
9. Appuyez sur ce bouton pour lire l'enregistrement.
10. Appuyez sur ce bouton pour sélectionner le morceau / canal suivant.
- Onze. Appuyez sur ce bouton pour sélectionner le mode EQ: Normal, Jazz, Roe, Pop, Classique.
12. 0-9 Numéro de touche pour sélectionner les pistes audio dans la carte USB / TF.

## CHECK OUT THESE OTHER QFX MODELS!


BT-65

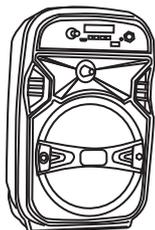

BT-60

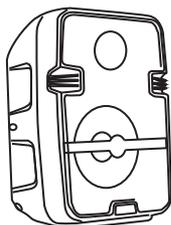

KAR-927

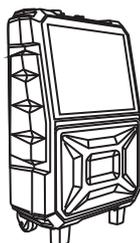

Follow Us



QFXUSA.COM



WHERE THE PARTY BEGINS™



## LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at [www.qfxusa.com](http://www.qfxusa.com) for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of **misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX.** In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

**QFX USA**, Inc.  
RMA Processing  
Customer Support Department  
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com  
(800) 864-CLUB (2582) or (323) 864-6900  
qfxusa.com  
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2021 ©



www.qfxusa.com

# THANK YOU.

Enjoy your speaker and make many memories with it because  
**QFX is Where the Party Begins!**

We would love to hear about your PBX-61081BT Journey!  
Tag us **@QFXUSA** to share your stories.