

Instant Pot® Smart-60 Quick Reference Guide

Please Read the User Manual Before Use

Install the “Instant Pot Smart Cooker” App


There are three ways to install the Smart Cooker app.

1. Scan the QR code on the right. It takes you directly to iTunes App Store or Google Play store depending on the type of your mobile device.
2. Type in the URL: <http://instantpot.com/smartcooker/> on the Internet browser on your smartphone/tablet.
3. Launch the “App Store” app on Apple devices or Google Play app on Android devices, and search for “Smart Cooker”.




Pairing Your Mobile Device with the Cooker


1. In “Settings” tab, tap “Add a Smartcooker”

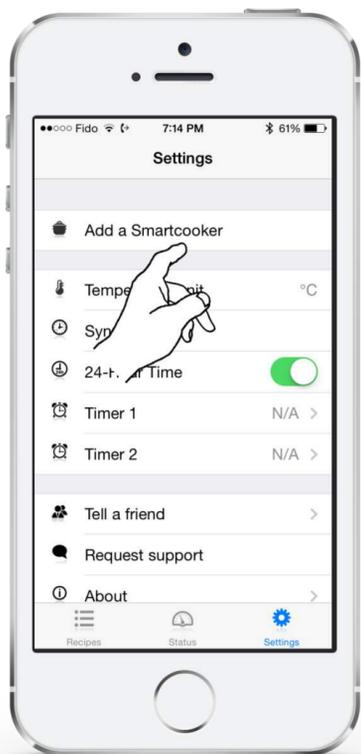


2. Searching for a cooker

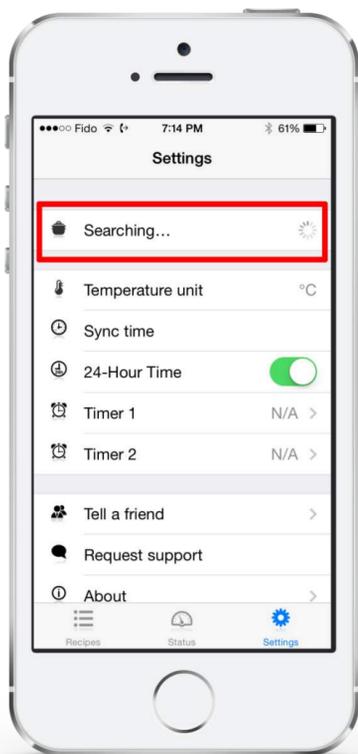

3. Press the “Adjust” button on the cooker for 3 seconds

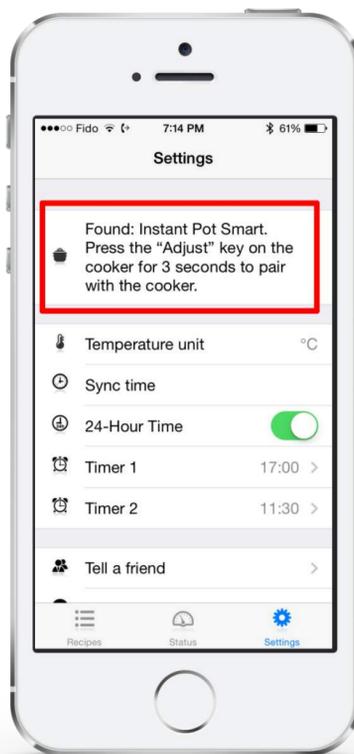

4. Tap “Pair” to grant the pairing request

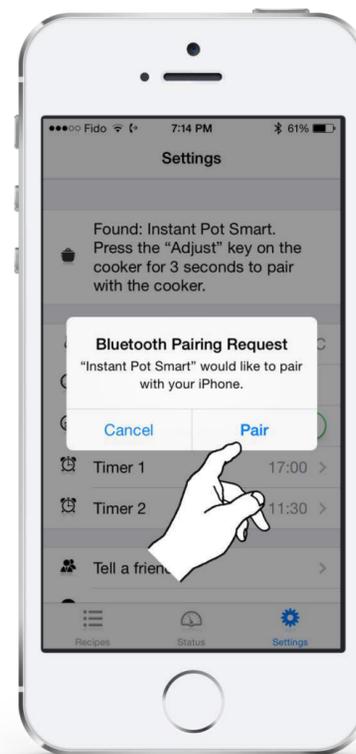

5. Connected




Run the Recipe Script in a Recipe and Control the Cooker Remotely

1. Choose a recipe. Follow the instructions in the recipe to add all ingredients into the cooker. When ready, tap the symbol on the top right corner.



2. Tap “Start” to start the recipe script.

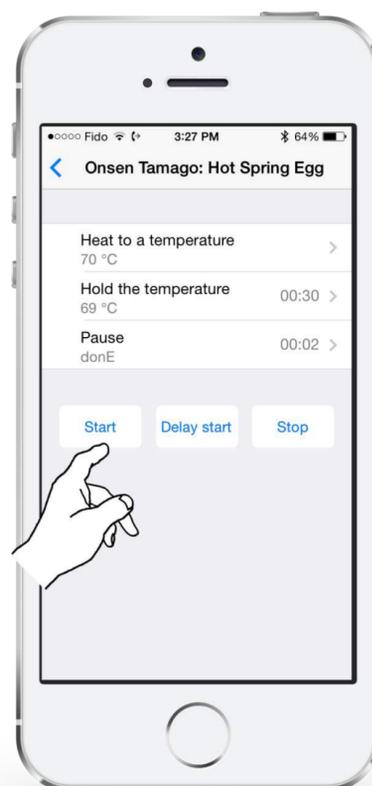

In the Status tab, you can run all built-in programs remotely.



Instant Pot® Smart-60 Quick Reference Guide

Please Read the User Manual Before Use



-  Smartphone indicator lights up when a mobile device is connected and flashes if the cooker needs to display messages on the mobile device.
 -  Bluetooth indicator turns on if Bluetooth radio is on.
 -  Heating indicator turns on if the heating element is turned on.
 -  Pressure indicator shows the current pressure level as none, low or high.
 -  Program indicator lights up when there is a recipe script running.
- Timer1 and Timer2 are timer presets.

Press this to Cancel a Program at Any Time

When the cooker is not operational, the LCD displays **OFF** or the backlight is off. When it's working or the timer is set, the LCD backlight turns on.

Cooking Process Flow Description with LCD Display

Soup, Poultry, Meat/Stew, Rice, Multigrain, Porridge, Bean/Chili, Steam, Manual

Note: Programs automatically start 10 seconds after selection.

