




INSTALLATION MANUAL

FOR BAHROOM FAUCET

Before Installation:




When you open the product packaging, please check the product and accessories at first. If there is any discrepancy, please contact the company or our distributor immediately.

Packing List		
Item No.	Product Name	QTY
1	Faucet	1 Pcs
2	handle lever	2 Pcs
3	Hose	3 Pcs
4	Drain	1 Pcs
5	Secure Nuts	3 Set
6	Accessories	1 Bag

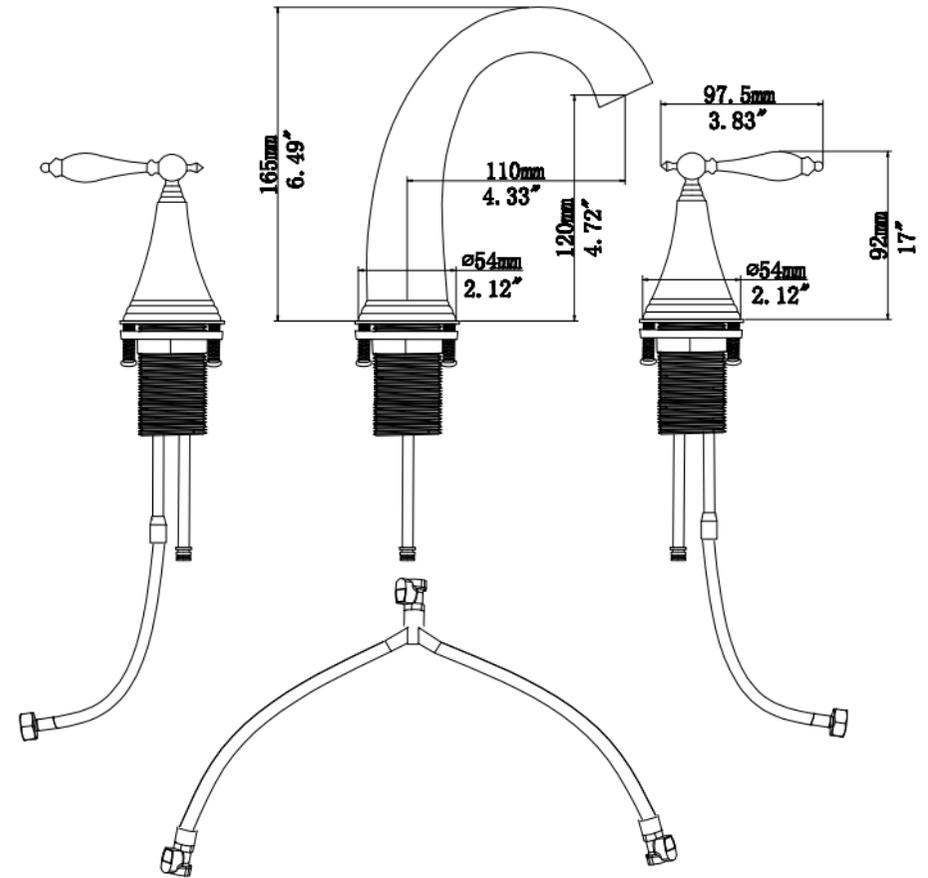

* Drawing maybe a little different for the item you have.

INSTRUCTIONS FOR MODELS

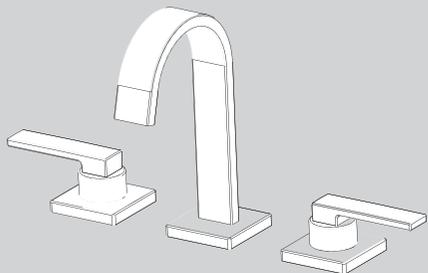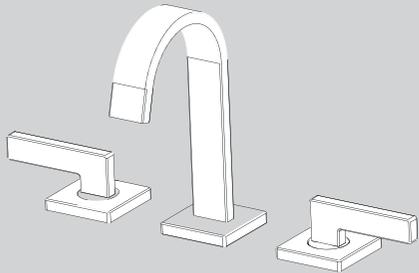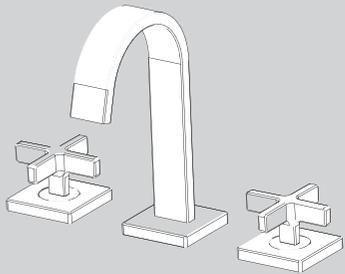

Need Help?

For additional assistance or service please contact:


LORDEAR®

303-397-6818

lordear.guo@gmail.com

www.lordear.com

TOOLS AND SUPPLIES

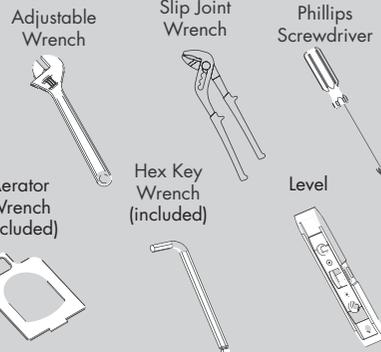

HELPFUL TOOLS & SUPPLIES:



IMPORTANT

- Do not over-tighten any connections or damage may occur.
- Be sure to read instructions thoroughly before beginning installation.
- This faucet has an operating range of 20-80 psi.

SAFETY TIPS

Cover your drain to prevent loss of parts. Be sure to wear eye protection while cutting pipe.

 

MAINTENANCE

Your new Lordear Product is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. The use of harsh chemicals and abrasives on any of the Lordear custom finish products may damage the finish and void the product warranty. Please be sure to only use approved cleaners. Please contact Lordear for any clarification of acceptable cleaners.


WARRANTY

Limited Lifetime Warranty



1 Remove Inlet Hose Assembly (1), Mounting Nut (2), Metal Washer (3), and Rubber Washer (4) from Spout.

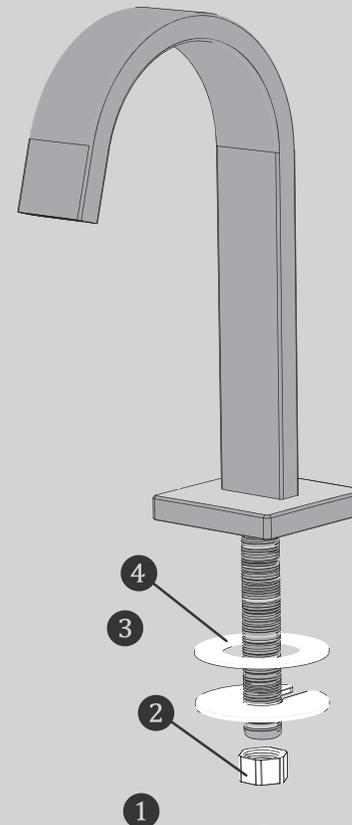

2 Remove Mounting Nut (1), Metal Washer (2) and Rubber Washer (3) from Cold Endbody Assembly. Repeat process for Hot Endbody Assembly


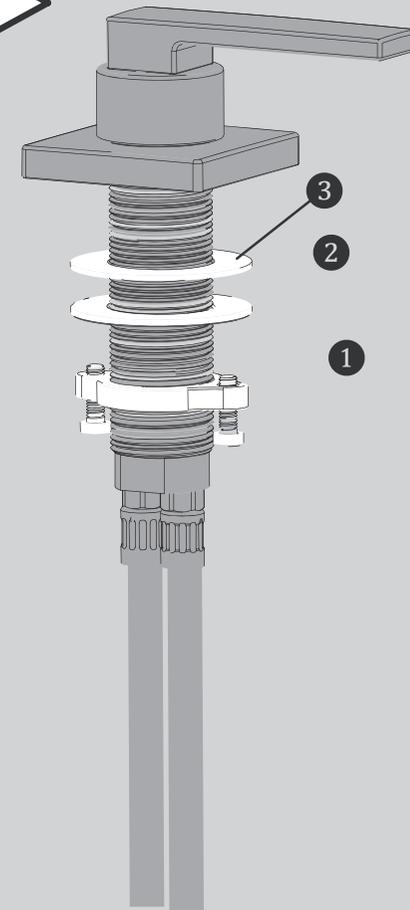


3 The "COLD" and "HOT" Endbody Assemblies are clearly marked. Place COLD Endbody Assembly through the appropriate hole in the counter top. Align Endbody Assembly so the Rubber Access Plug (1) is facing the rear. Repeat process for the HOT Endbody Assembly.

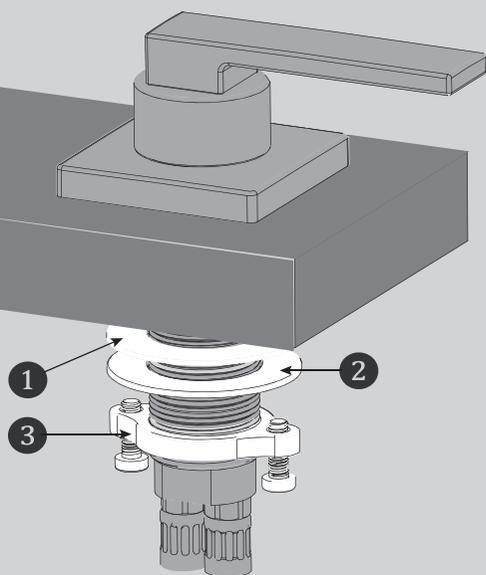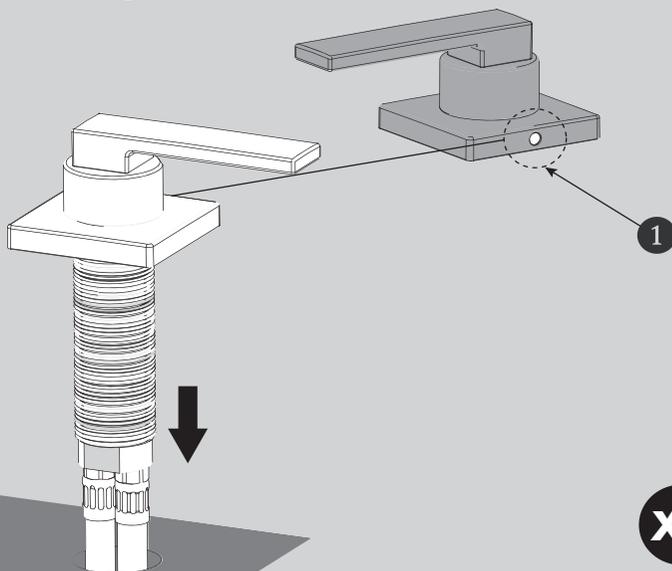

5/10


5 Place Spout Assembly through the center hole of counter top. From below, reinstall the Spout Rubber Washer (1), Metal Washer (2), and Mounting Nut (3). Loosely assemble at this time. Reinstall Inlet Hose Assembly (4)

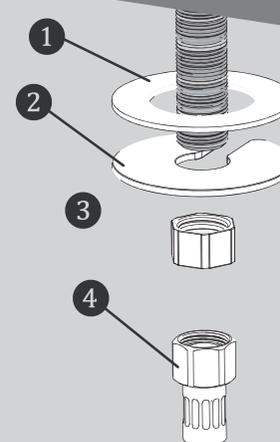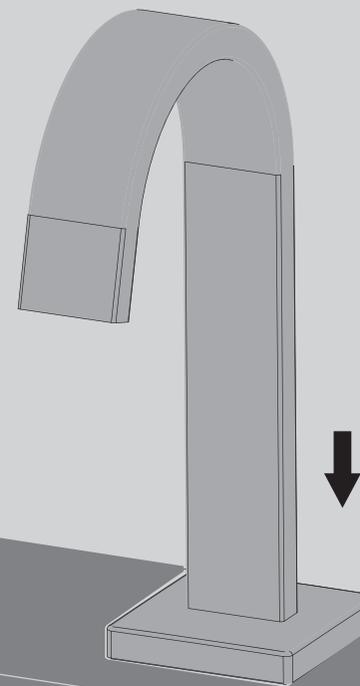


NOTE:
Opening within the Metal Washer (2) should face towards the rear.

6/10


6 From above, align Spout and Handle bases so that they are aligned horizontally.

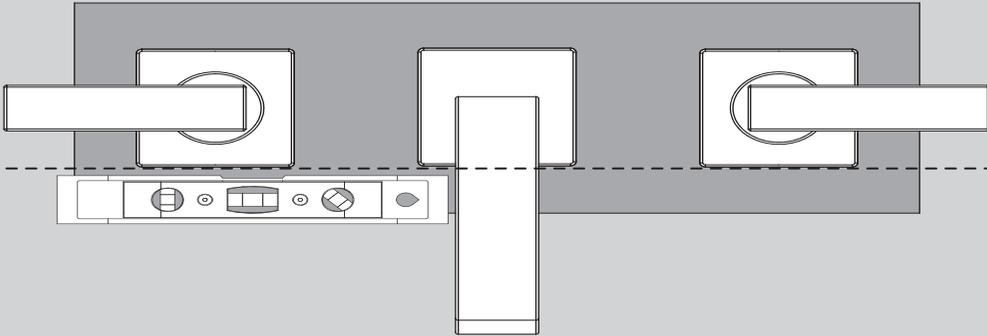

7 While maintaining the proper alignment, Wrench Tighten Spout Mounting Nut (1). Then snug Endbody Mounting Nuts (2). Final tightening of Endbody mounting is accomplished by Tightening the Mounting Screws (3) while using a Phillips Screwdriver. Wrench tighten Spout Inlet Hose (4).

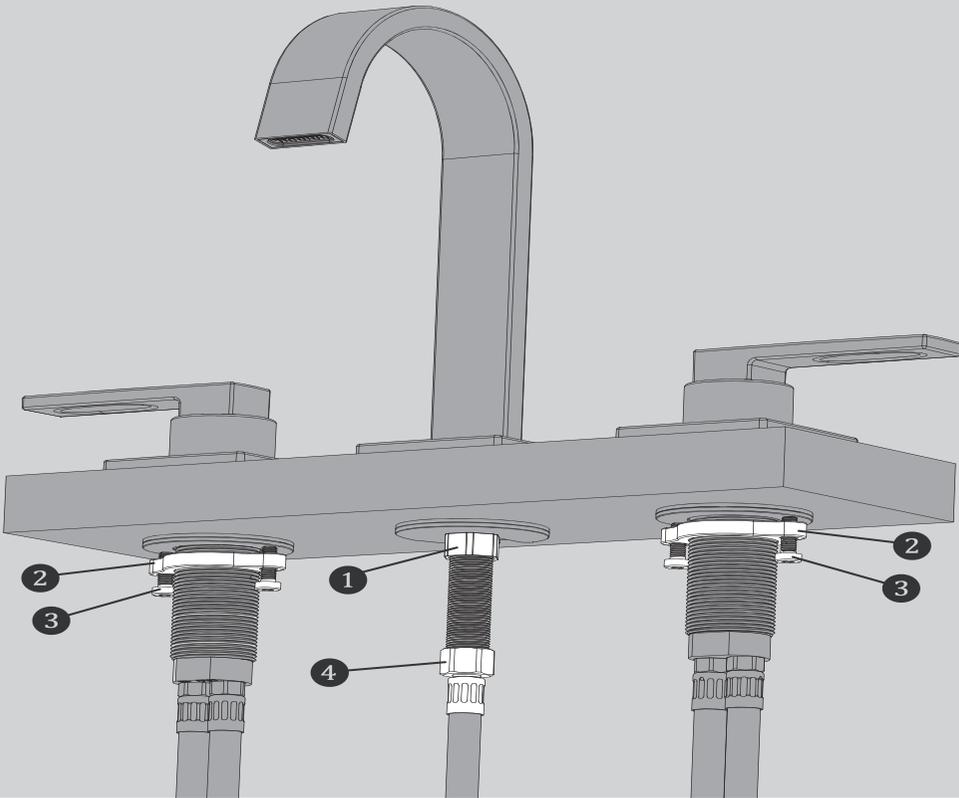


8 From below, install the Endbody Outlet Hoses (1) (shorter hose) to the Inlet Tee of the Spout (2). Wrench Tighten. Wrench tighten Spout Inlet Hose (3) to Inlet Tee (2)

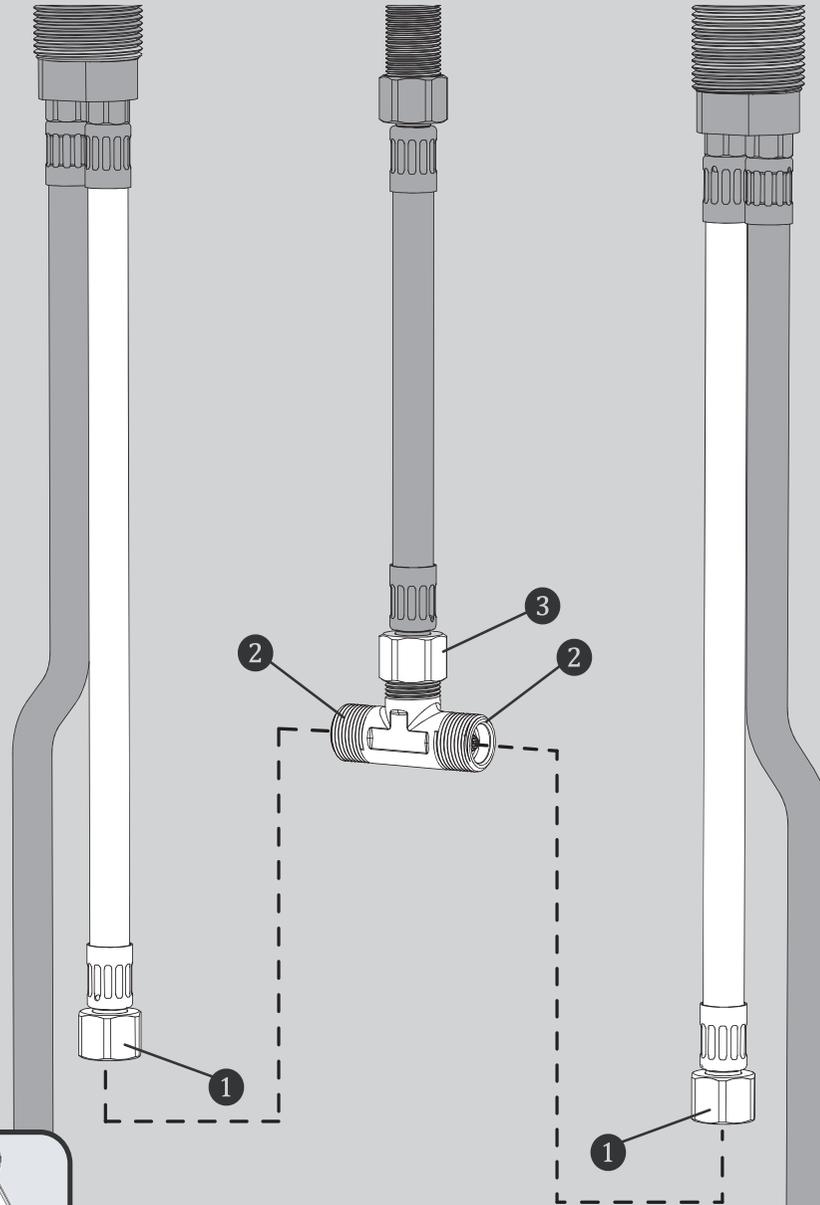

9

Make connections to water supplies. The inlet threads of the faucet are 9/16"-24 UNEF and will accept a 3/8" Compression Fitting. Wrench Tighten.

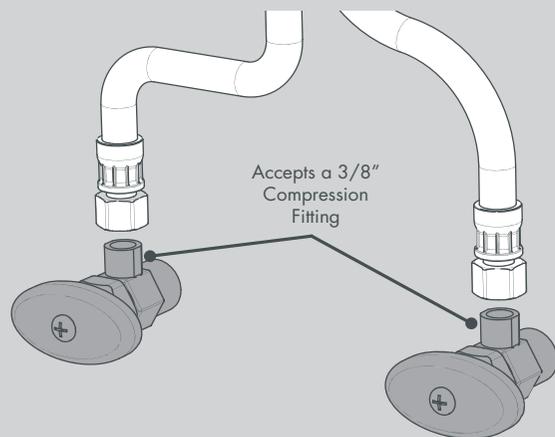


SUPPLY STOPS NOT INCLUDED



10

Turn on water supplies and flush both COLD and HOT cartridges for one minute, while checking for leaks. Return Handles to closed position when complete.

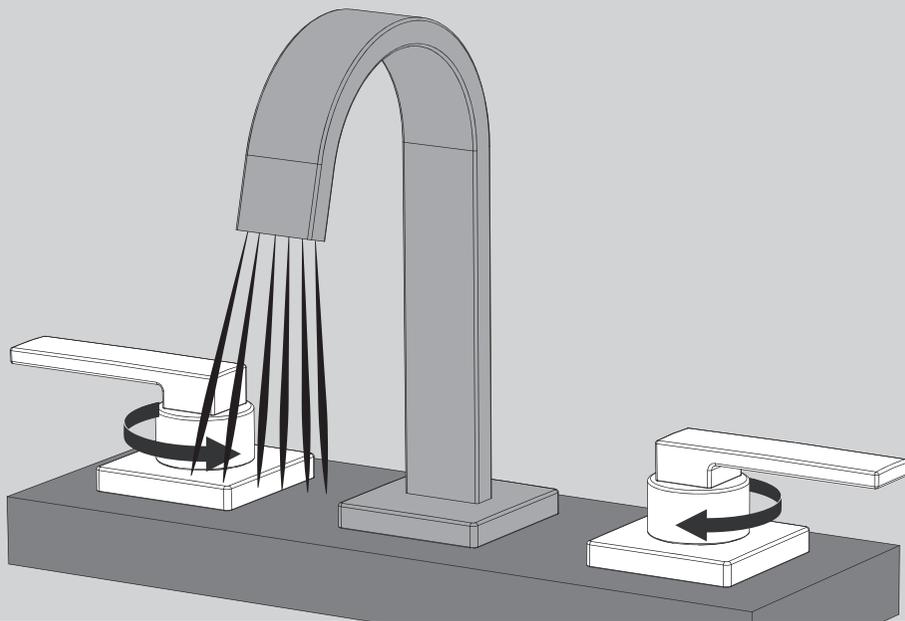

9/10

Guarantee Repairs Claims

1. Within warranty period, LORDEAR is responsible for repairing any defective product for free.
2. Please contact seller by email with this warranty and purchase invoice when the product needs guarantee repairs within warranty period.
3. Within warranty period, the listed situations below need to pay for replacement.
 - 3.1 The malfunction and damage caused by improper use and repair or reconstruct unauthorized. (forbid any throw, beat behavior)
 - 3.2 The malfunction and damage caused by not refer to instruction during installation.(forbid any unprofessional plumber install this product)
 - 3.3 The malfunction and damage caused by removing after installation or other factors.
 - 3.4 The malfunction and damage caused by application beyond the scope of usage.
 - 3.5 The damage caused by sands or dirty hands.
 - 3.6 The damage caused by daily improper maintenance and rust on finished and so on.
 - 3.7 The malfunction and damage caused by fires, earthquakes, floods, lightning and natural disasters, pollution, harmful gas, salt and abnormal voltage and other reasons.
 - 3.8 The occasions which purchase invoices are not presented.
4. The recommend water temperature of hand shower and rain shower head is $\leq 42^{\circ}\text{C}$ with water pressure 0.1-0.3 Mpa. The highest temperature not suggest beyond 70°C with water pressure 0.05-0.5 Mpa. So any product equipped with shower, please keep it away from the heater to avoid potential risk.
5. This limited warranty applies only to the original purchaser and hotel business. It expressly excludes labor charges, removal charges, installation, or other incidental or consequential costs. Any inappropriate application will void the warranty.
6. This warranty can no be replaced if missed, please keep safe.

10/10