
# WINDOW ROOM AIR CONDITIONERS



#### How to Choose The Right Window Air Conditioner For Your Room Size

# 1 MEASURE YOUR ROOM

Length x Width = Square Footage

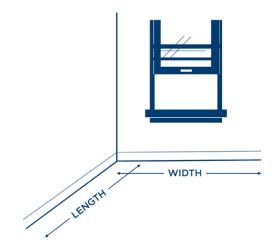


### 2 MATCH ROOM SIZE

Find the corresponding AC box that matches your desired cooling area.

	Cooling Area	Room Size	BTU
SMALL ROOM	150 SQ. FT.	10′ X 15′	5,000
	UP TO 250 SQ. FT.	10' X 25'	6,000
MEDIUM ROOM	UP TO 350 SQ. FT.	10′ X 15′	8,000
	UP TO 450 SQ. FT.	17' X 20′	10,000
LARGE ROOM	UP TO 550 SQ. FT.	15' X 30′	12,000
	UP TO 700 SQ. FT.	20' X 35'	14,000

## 3 VERIFY

Match size of window opening to range indicated on package or on spec sheet.

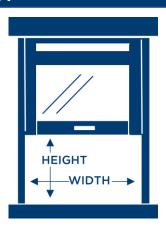

# 4 CHECK ELECTRICAL

Verify your outlet type.



115V 15 Amp



230V 15 Amp



230V 20 Amp

Oversizing or undersizing air conditioners is not recommended.