


INSTRUCTION

When you open the packing for the first time, the key box is on the unlocked status and without batteries installed.

You can start from Step 2 for programming . If it is locked ,please follow Step 1.

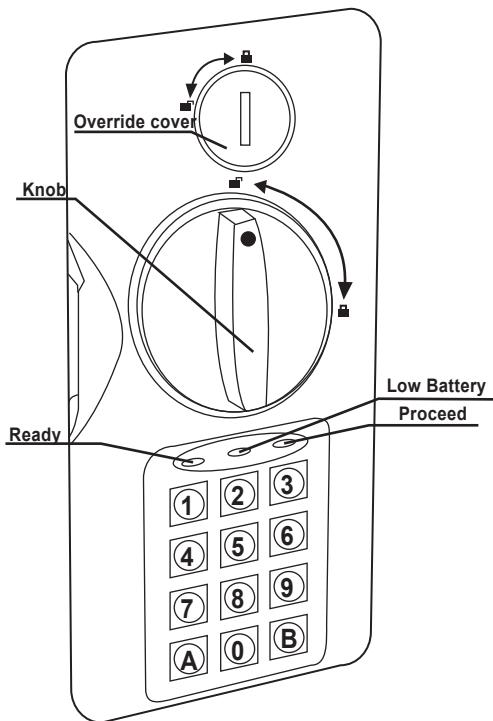

① Open your key box with your override key:

Insert override key into the lock and turn it counter clockwise one quarter, to the unlocked position. Turn the knob counter clockwise one quarter, to the unlocked position .

② Installing batteries:

Slide the cover off the battery compartment .Properly load the batteries with correct direction, Replace cover. Return the override key and the knob to the locked position .

③ Programming your personal code:

Press the red button at the bottom edge of battery compartment at the back of the door. When the Yellow light turns on, you have 30 seconds to enter your new code (3-8 digits) followed by pressing A or B to finish.

In case of incorrect code entry, the yellow light will keep on flashing with beeps. If an incorrect code is entered 3 times in a row, the security system will automatically shut it down for 20 seconds before you can try and enter the correct code again. Another 3 times of incorrect code entry, & the system will shut for 5 minutes before you are able to enter it again. The override key will still be working during the delay time.



--DO NOT FORCE THE KNOB .


Forcing can result in the breakage of the knob and damage of key box. The knob should be turned easily into position when operated correctly .

--IMMEDIATELY SET YOUR

OWN PERSONAL COMBAINATION CODE

--DON'T LEAVE THE OVERRIDE KEY IN THE

KEY BOX, KEEP IT AWAY FROM THE KEY BOX.

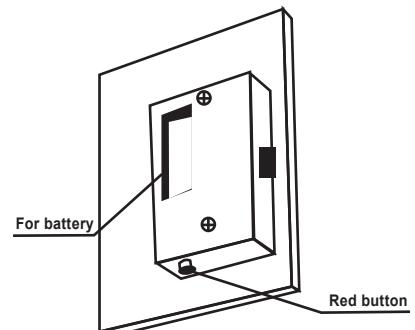

YOUR KEY BOX INCLUDES:

4 AA size batteries
Numbered key tag accordingly
2 override keys
Override lock cover

④ Opening the key box with personal code:

Enter the personal code on the keypad. The green light will turn on indicating readiness. It will stay like that for 5 seconds. Turn the knob from the locked position to the unlocked position while the green light is flashing, and open the door.

⑤ Closing your key box:

Make sure the knob and override key are turned in the locked position.

★ **Attention:** Red button flashing means "Low Battery". Change the battery and re-set your personal code. Use override key to open the door if there is no LED light.