

Just wait until you hear this

# **Roku® Streambar® & Wireless Bass**

Quick Start Guide

# What's included




Roku Streambar



Remote



Two AAA batteries

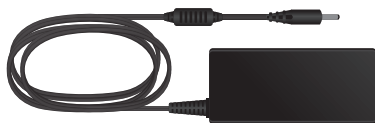


Power adaptor



Power cable x2



Premium High Speed HDMI® Cable

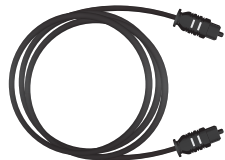


Optical cable (optional)  
Only use if your TV does not have an HDMI-ARC port.




# Details

Remote

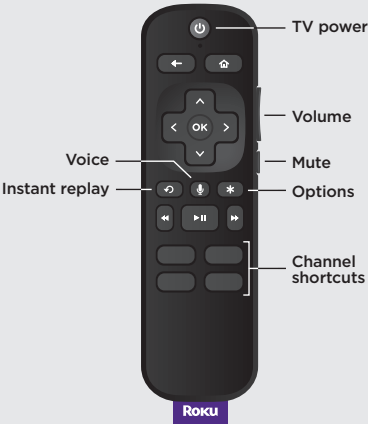


Back of Roku Streambar

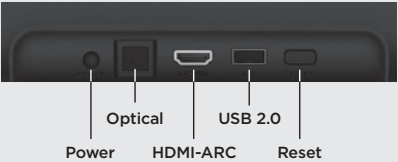

Back of Roku Wireless Bass



# Let's start with your Roku Streambar

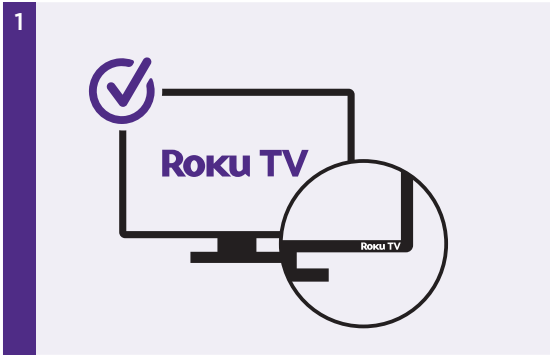

## STEP 1: Adjust TV settings

### Have a Roku TV™?

Just use the remote that came with your Roku TV and follow **steps 2 and 3**. The rest is automatic, even linking your Roku account.

OR




## STEP 1: Adjust TV settings

### All other TVs

You may need to enable your TV's HDMI-CEC and ARC settings.

TV manufacturers use different names for these settings. For help, visit [go.roku.com/streambar](https://www.roku.com/streambar)

2

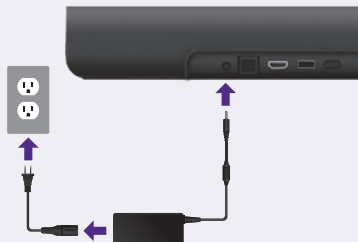


## STEP 2: Connect to power

Use the included power adaptor and cable to connect your Streambar to a wall outlet.

### TIP:


Place your Streambar at the front edge of your TV stand for the best sound experience.

3

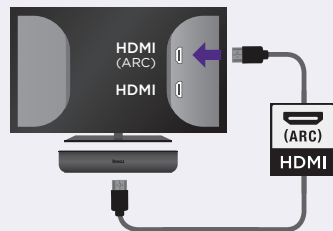


## STEP 3: Connect to TV

Connect your Streambar to the HDMI port on your TV labeled “ARC” with the included cable.

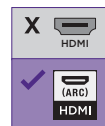

**Don't see an HDMI-ARC port?** Use the included optical cable along with the HDMI Cable to connect.  
**Remember to remove the plastic caps before use!**


4

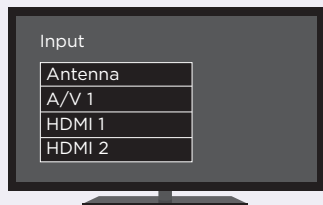

#### STEP 4: Select input

Use your TV's remote to select the HDMI input (source) you used to connect your Streambar.


5

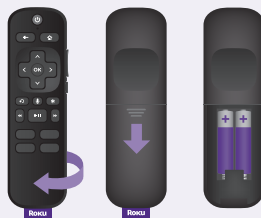

#### STEP 5: Insert batteries

Slide open the cover on the back of your remote and insert the included batteries. Your remote will pair automatically.

6

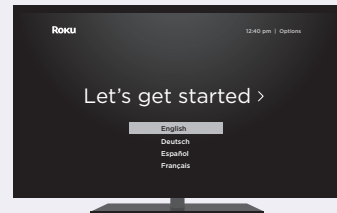

#### STEP 6: Follow on-screen setup


Follow the instructions on your TV screen. Activate your Streambar by using your computer or smartphone to link a Roku account.

#### IMPORTANT:

Roku never charges for activation support.

## Next, your Roku Wireless Bass

1

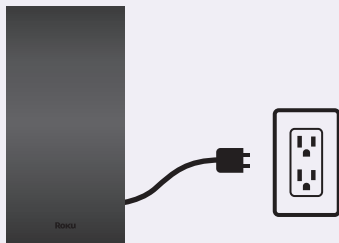

### STEP 1: Connect to power


Place your subwoofer anywhere within 30 feet of your TV and plug it into a power outlet.

The status LED on the back of your subwoofer should begin to blink. If it doesn't, press and hold the Reset button for 10 seconds.

2




### STEP 2: Prepare to connect

Press and  hold on your Roku remote for 5 seconds to open the setup menu.

Select **Subwoofer**.

3

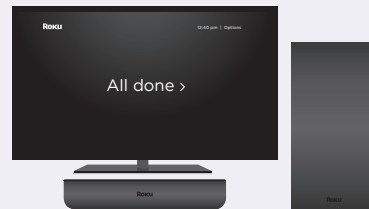

### STEP 3: Follow on-screen setup

Your subwoofer will begin pairing automatically. A test sound will play once pairing is complete.

Visit [go.roku.com/subwoofer](https://go.roku.com/subwoofer) for more information

## Common questions

### Why do I need to enable HDMI-CEC and ARC on my TV?

HDMI-CEC lets you control your TV's power with the Roku remote while ARC makes sure all of your TV inputs send sound through your Streambar. TV manufacturers may use different names for these settings and some, including Roku TV, automatically enable them. Refer to your TV manual or visit the link below for help.

### How do I use my Streambar and voice remote with my Roku TV?

By default, your Streambar will work as a soundbar when connected to a Roku TV, so you only need to use your Roku TV remote. To use your Streambar as a streaming player, visit "TV inputs" in your Roku TV's settings menu. There, you can choose to show your Streambar's HDMI input tile on your Roku TV home screen. Refer to Step 5 in this guide to pair your voice remote with your Streambar.

### Why do I need to create a Roku account?

You'll need a Roku account to stream, add channels, easily manage subscriptions, rent movies, and more.


### Why should I enter a credit card?

Saving a payment method makes it easy to rent or buy movies, subscribe to popular channels, and start free trials in just a click. No charges will be made without your authorization.

**Visit [support.roku.com](https://support.roku.com) for more information**

## Complete your Roku home theater

### Roku Wireless Speakers

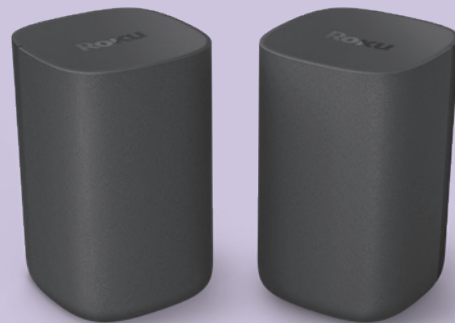


**Add one or two sets for  
immersive surround sound.**

Sold separately.

# Tips and tricks

## Using sound settings

While streaming, press  to view sound settings, like:

- **Sound mode**

Perfect your sound with settings like Music, Movie, Night, and Dialogue.

- **Volume mode**

Automatically lower loud commercials and boost quiet scenes.

- **Speech clarity**

Intelligently isolate and improve clarity of voices.

## Pairing a Bluetooth® device

- From the home screen, go to **Settings** and select **Remotes & devices**.
- Then choose **Pair Bluetooth device** and follow the instructions.

## Using voice commands

Press and hold the voice button and say things like:  
“Play classic rock”  
“Set volume to 30”  
“Launch The Roku Channel”

## Need more help?

[support.roku.com](https://support.roku.com)



**Video  
tutorials**



**Wi-Fi®  
help**

## Cut cable. Save money. Stream big.

[streamandsave.com](https://streamandsave.com)



**Free  
TV**



**Live  
TV**

## See what's streaming for free, tips, and more

[roku.com/blog](https://roku.com/blog)

Follow us



© 2022 Roku, Inc. All rights reserved. Roku, Roku TV, the Roku logo, and Streambar are the trademarks of Roku, Inc. All other logos and trademarks herein not owned by Roku, Inc. are the property of their respective owners.



4100000819\_01