

MS9917A0TX/ MS9917B0TX
65" W Remington TV/Media Stand-
Mission Oak Finish


Assembly Instructions



Southern
ENTERPRISES










For assistance with assembly contact:
Southern Enterprises Inc.
Customer Service 1-800-633-5096
service@seidal.com
www.seifurniturestore.com

PO:

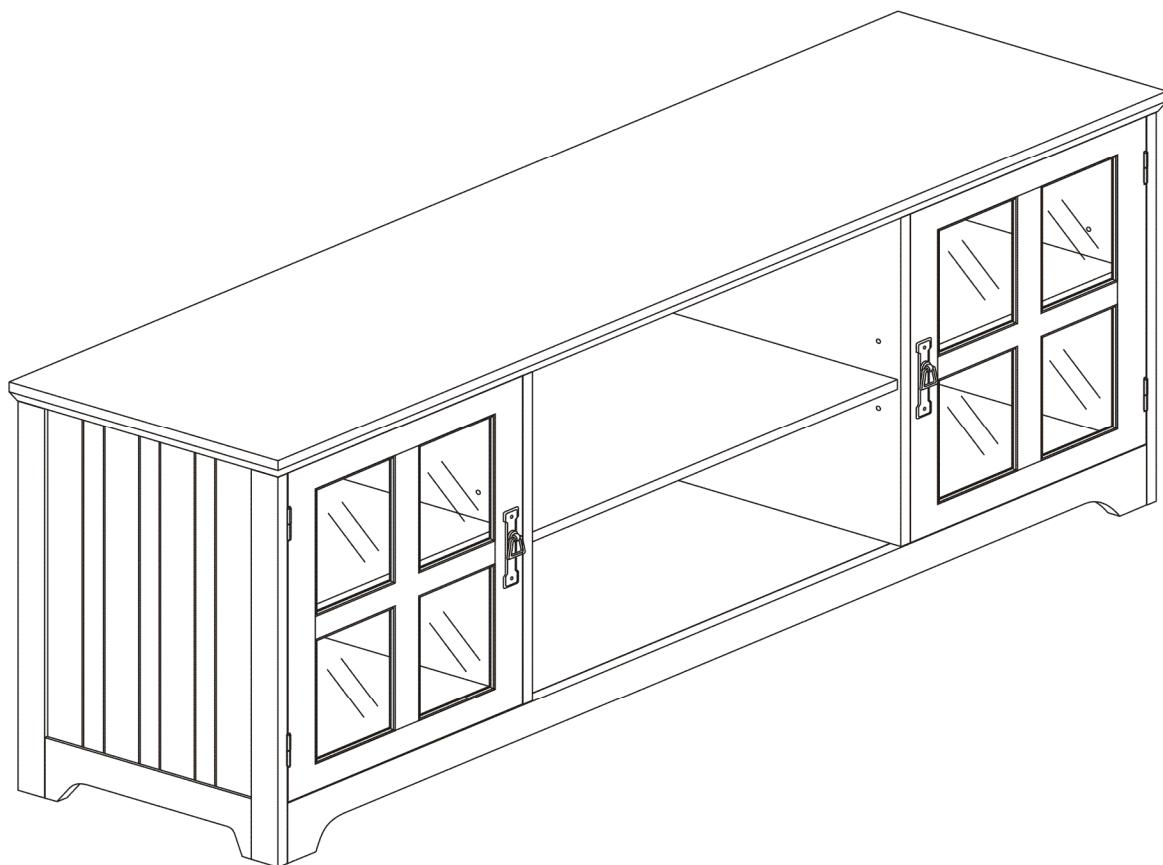


65" W Remington TV/Media Stand Parts List

Please check packaging for all parts and hardware before discarding. Unpack and lay parts on clean, padded surface like carpet or a blanket. Check that you have all parts indicated. Call customer service if any hardware is missing. Before beginning assembly, carefully study the diagrams below and sort your hardware according to the pictures. Using the incorrect hardware will cause damage.

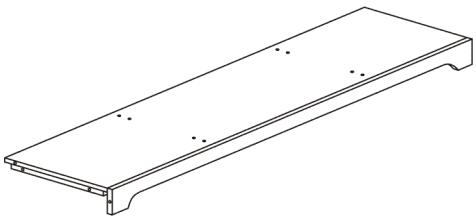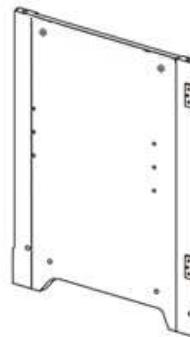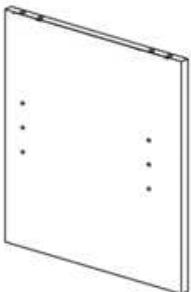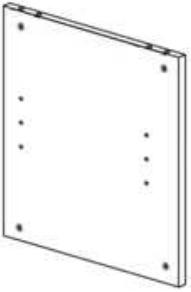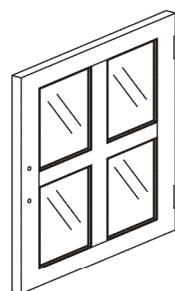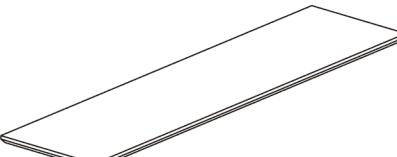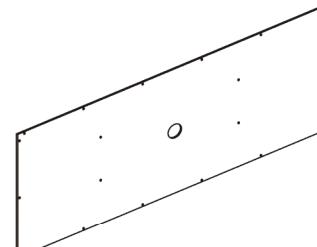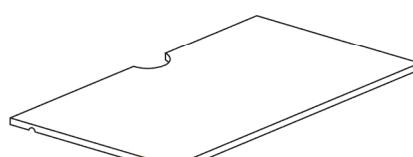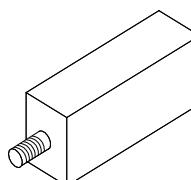A	Quantity of 1	B	Quantity of 1	C	Quantity of 1
					
Bottom Panel		Left Side Panel		Right Side Panel	
D	Quantity of 1	E	Quantity of 1	F	Quantity of 1
					
Left Middle Panel		Right Middle Panel		Left Door	
G	Quantity of 1	H	Quantity of 1	I	Quantity of 1
					
Right Door		Top Panel		Back Panel	
J	Quantity of 2	K	Quantity of 1	L	Quantity of 2
					
Side Adjustable Shelf		Middle Adjustable Shelf		Support leg	

65" W Remington TV/Media Stand Parts List

 Please check packaging for all parts and hardware before discarding. Unpack and lay parts on clean, padded surface like carpet or blanket. Check that you have all parts indicated. Call customer service if hardware is missing. Before beginning assembly, carefully study the diagrams below and sort your hardware according to the pictures. Using the incorrect hardware will cause damage.

(1)	Quantity of 16	(2)	Quantity of 4	(3)	Quantity of 2
					
8mm x 30 mm Wood Dowel		1/4" x 1-1/4" Bolt		Handle	
(4)	Quantity of 4	(5)	Quantity of 2	(6)	Quantity of 4
					
5/32" x 15mm Bolt For Handle		Magnet		3.5mm x 15 mm Screw For Magnet	
(7)	Quantity of 26	(8)	Quantity of 12	(9)	Quantity of 4
					
3.5mm x 12 mm Screw For Back		Metal Pin		Bracket	
(10)	Quantity of 4	(11)	Quantity of 4	(12)	Quantity of 4
					
3.5mm x 15 mm Screw For Bracket		Plastic Anchor		7mm x 38mm Screw For Wall	
(13)	Quantity of 2	(14)	Quantity of 4	(15)	Quantity of 12
					
Plastic Chain		Flat washer 1/4"x3/4"		Cam Bolt	
(16)	Quantity of 12				
					
Plastic Chain		Flat washer 1/4"x3/4"		Cam Bolt	
				Cam Lock	

Care and Cleaning Instructions:

Before using, wipe with a clean, dry cloth. Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects.

(17)

 


Quantity of 12


Cotton Mat

Call SEI customer service at 1-800-633-5096 for assistance, questions, or parts.

Assembly Tools Required: No. 2 Phillips Screwdriver, Hammer (Not Included)



65" W Remington TV/Media Stand Assembly Instructions

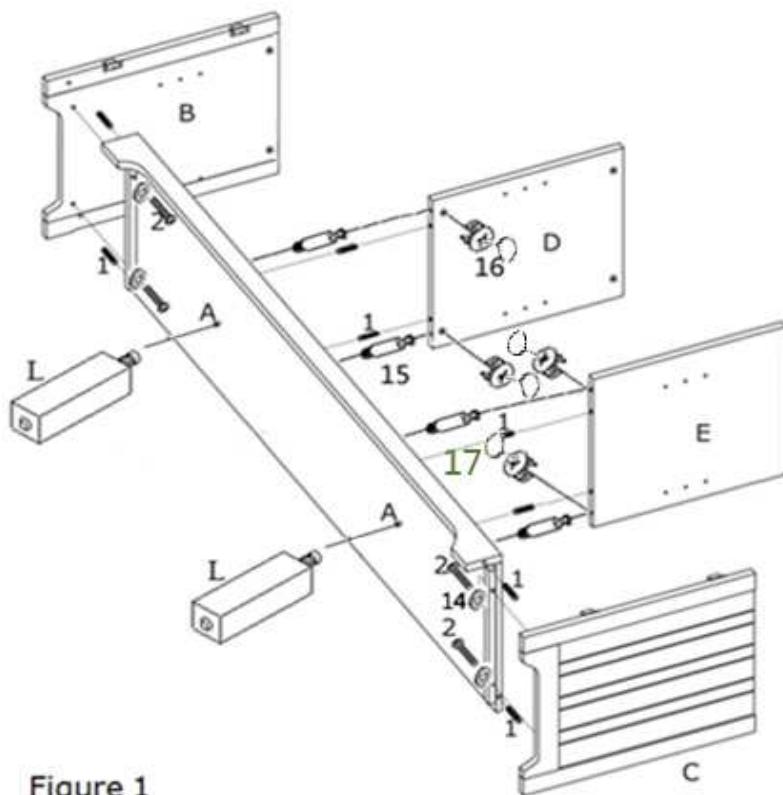

Insert Cam Locks (16) into holes on Middle Panels (D/E).

Screw Cam Bolts (15) into holes on Bottom Panel (A).

Attach Middle Panels (D/E) to Bottom Panel (A) by inserting Wood Dowels (1) and Cam Bolts (15) into corresponding holes until panels meet.


Tighten by rotating Cam Locks (16) clockwise with Phillips screwdriver (not included).

Cover Cam Lock holes with Covers (17). Attach Side Panels (B/C) to Bottom Panel (A) with Bolts (2), Flat Washers (14) and Wood Dowels (1).

Tighten with Phillips screwdriver (not included)

Attach support leg (L) to Bottom Panel (A) by hand.

Figure 1

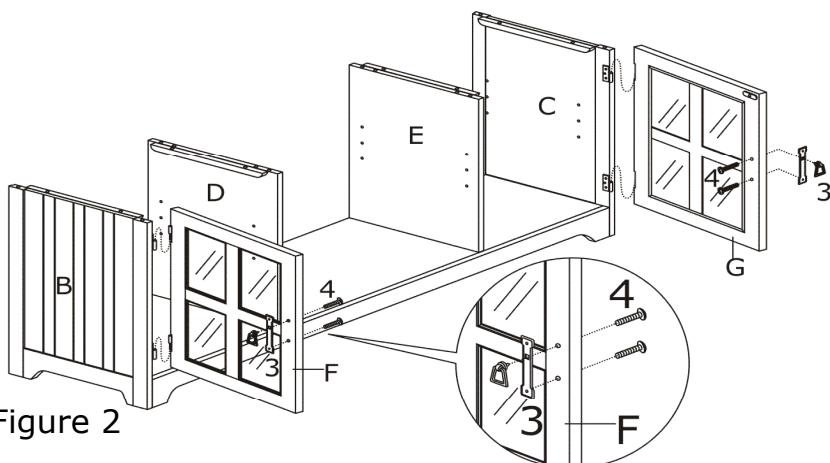


Attach the Left Door (F) to the Left Side Panel (B) and Right Door (G) to the Right Side Panel (C) by hand.

Attach Handles (3) to Doors (F/G) with Bolt For Handles (4).

Tighten bolts with Phillips screwdriver (not included).

Figure 2

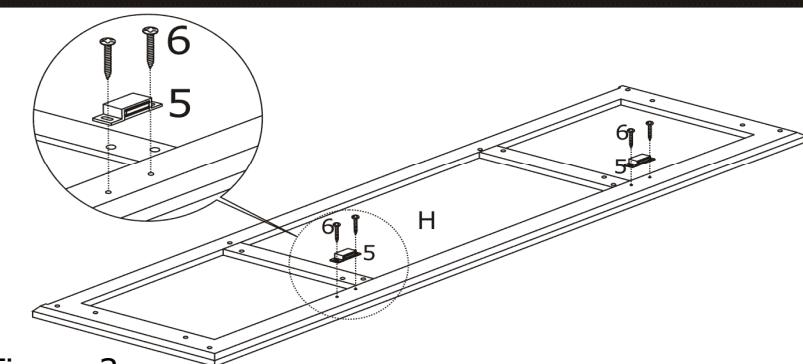

Attach Magnets (5) to the Top Panel (H) with Screws for Magnets (6).

Tighten screws with Phillips screwdriver (not included).

Figure 3

65" W Remington TV/Media Stand Assembly Instructions

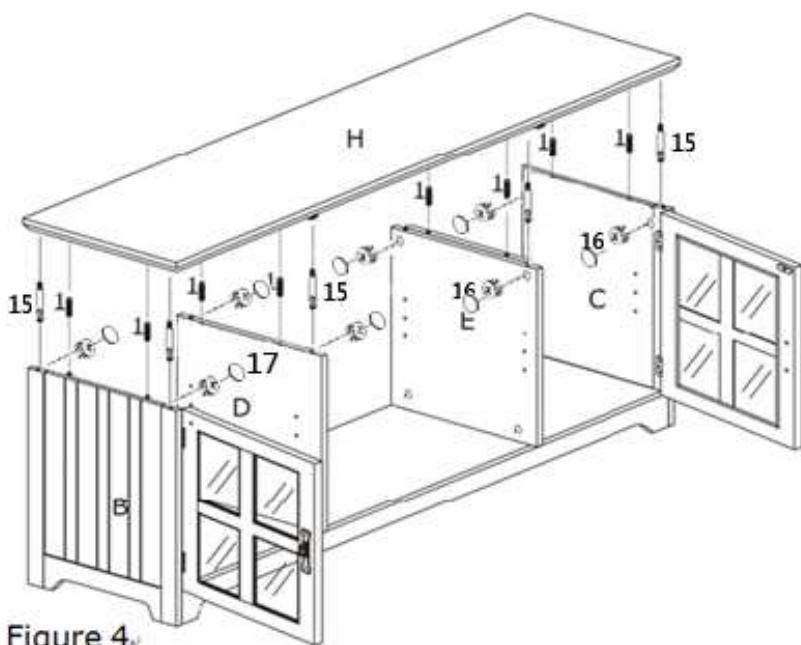


Figure 4

Insert Cam Locks (16) into holes on pre-assembled unit from Figure 2.

Screw Cam Bolts (A) into holes on Top Panel (H).

Attach Top Panel (H) to pre-assembled unit from Figure 3 by inserting Wood Dowels (1) and Cam Bolts (15) into corresponding holes until panels meet.

Tighten by rotating cam locks (16) clockwise with Phillips screwdriver (not included).

Cover cam lock holes with covers (17).

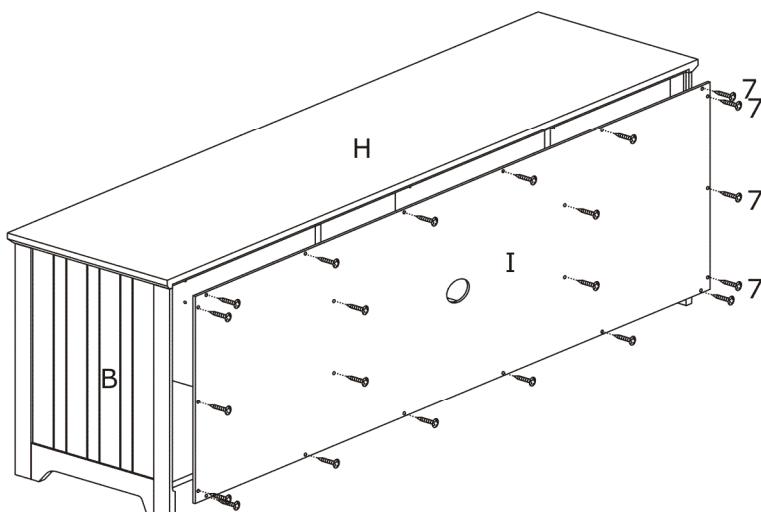


Figure 5

Attach Back Panel (I) to pre-assembled unit from Figure 4 with Screws For Back (7).

Tighten screws with Phillips screwdriver (not included).

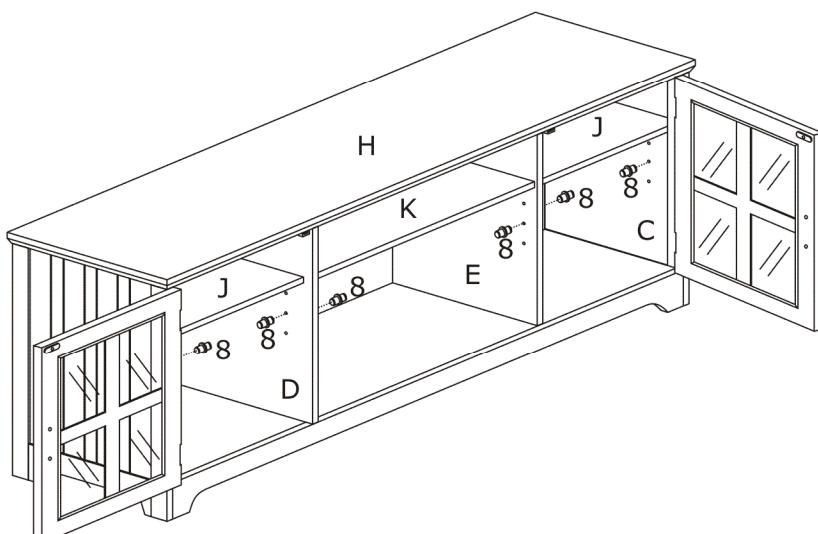


Figure 6

Insert Metal Pins (8) into desired holes of inner Side Panels (B/C) and Middle Panels (D/E).

Place Adjustable Shelves (J/K) on the Metal Pins (8).

65" W Remington TV/Media Stand Assembly Instructions

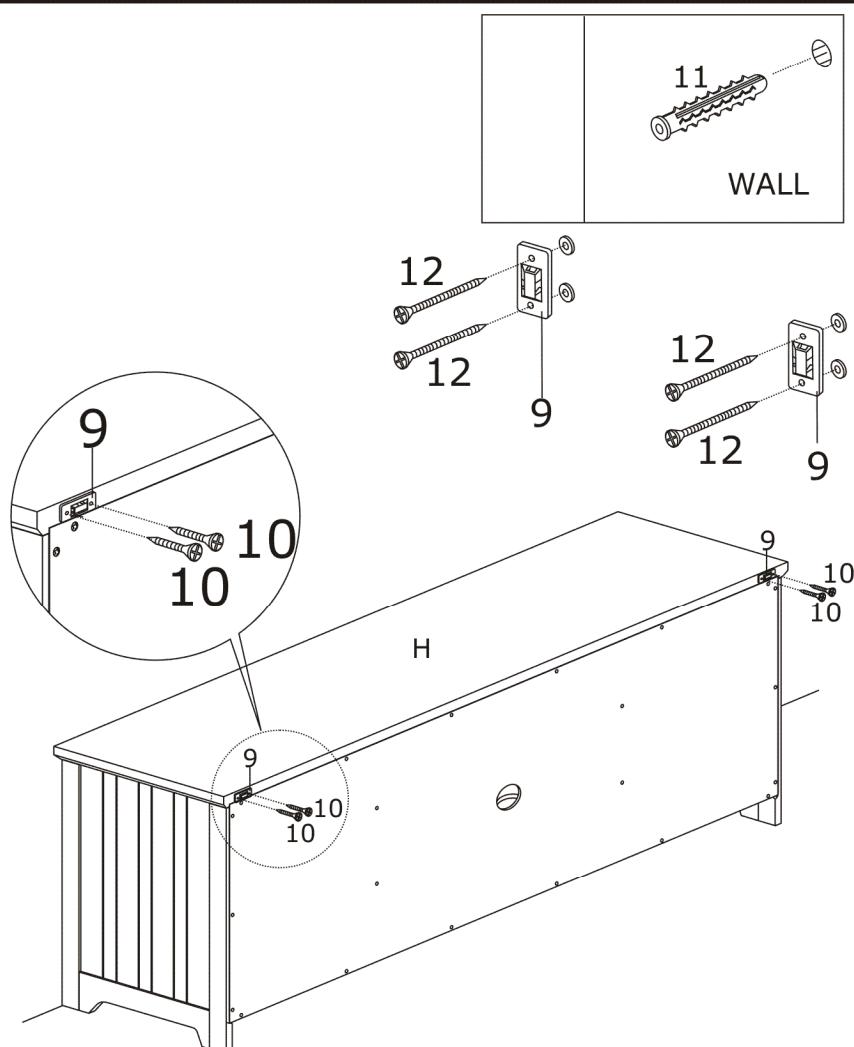


Figure 7

Attach Brackets (9) to Back Panel (A) using Screws (10). Tighten screws (10) using Philips screwdriver (not included).

Mark two desired locations on wall.

Drill two 3/16" holes.

Insert Plastic anchors (11) into the 2 holes on wall, tap with hammer (not included) as needed.

Attach the Brackets (9) to wall using Screws (12).

Tighten Screws (12) using Philips screw driver (not included).

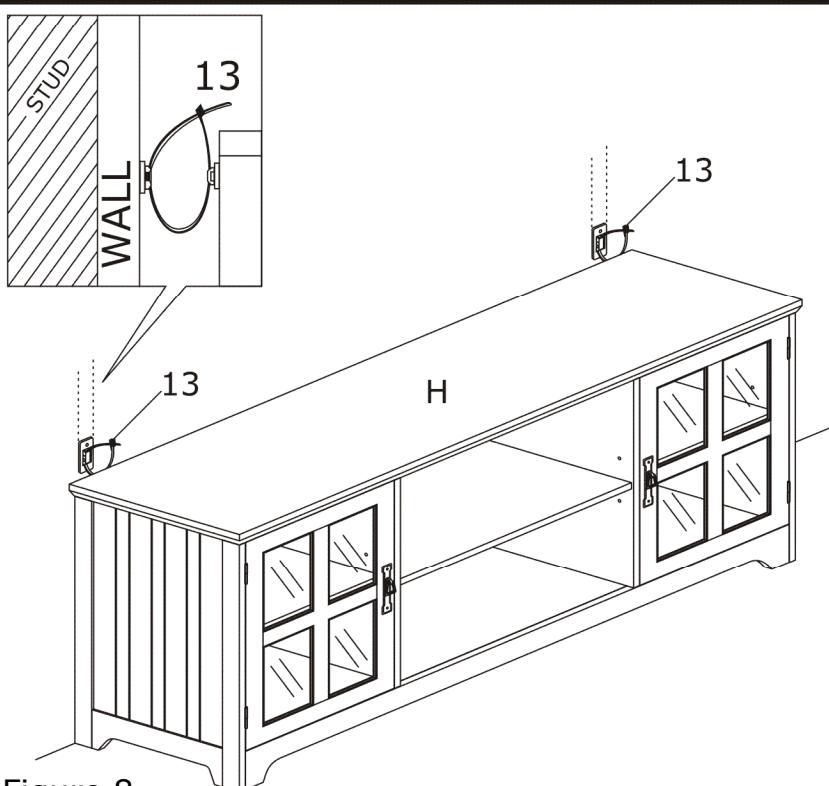


Figure 8

Move unit to the fastened wall Brackets (9).

Tie both Brackets (9) with Plastic Chains (13).

Now your Remington 65" W TV stand is ready for use!

Parts Replacement Form

Customer Information

Name _____

Address _____

City/State/Zip Code _____

Phone Number _____

Please indicate where you purchased this item: Store/Website/Catalog

Please indicate color/size/style number:

Style No	Parts Letter	Parts Description	Quantity Needed

Please immediately examine this product carefully. Any request for missing parts or damage replacement must be received within 90 days of your receipt of the product. Replacement, if available, will be honored within this time frame. Parts will not be available for items arriving fully assembled. We do not recommend modifying product(s) and we are not responsible for any damages due to product modification(s). If damages or missing parts are not reported within 90 days of your receipt, we are under no obligation to provide parts or replacement merchandise.

Please contact Southern Enterprises at 800-633-5096 or in Dallas 972-869-0111/ 9am - 4pm Mon-Fri Central time if you have product issues or email us at service@seidal.com. Please ask for customer service representative for issues involving damages or replacement parts. Please ask for technical assistance representative for any issues with product and assembly/construction.

Please contact the retailer that you purchased from for returns.



Southern
ENTERPRISES

Customer Service 1-800-633-5096
service@seidal.com
Southern Enterprises, Inc.
600 Freeport Parkway, Suite 200
Coppell, Texas, 75019



CAUTION

The top shelf is intended for a flat screen television with a maximum overall width of 50" and supports up to 85 lb.

The top shelf is NOT INTENDED for tube televisions.

Each center shelf should not be loaded with more than 20 lb. Each side shelf should not be loaded with more than 15 lb.

DO NOT EXCEED RECOMMENDED LOAD. Use with products heavier than the maximum sizes and weights indicated may result in instability causing possible injury.

This unit contains a permanent warning sticker located on under side of top shelf or inside drawer.

Do not allow children under 16 years to move the cart.

Model: MS9917A0TX/ MS9917B0TX
65"W Remington TV/Media Stand
Southern Enterprises, Inc
600 Freeport Parkway,
Suite 200 Coppell, Texas, 75019
Manufacture Date: 10/3/2015