 



RV938

RAVEL DESK

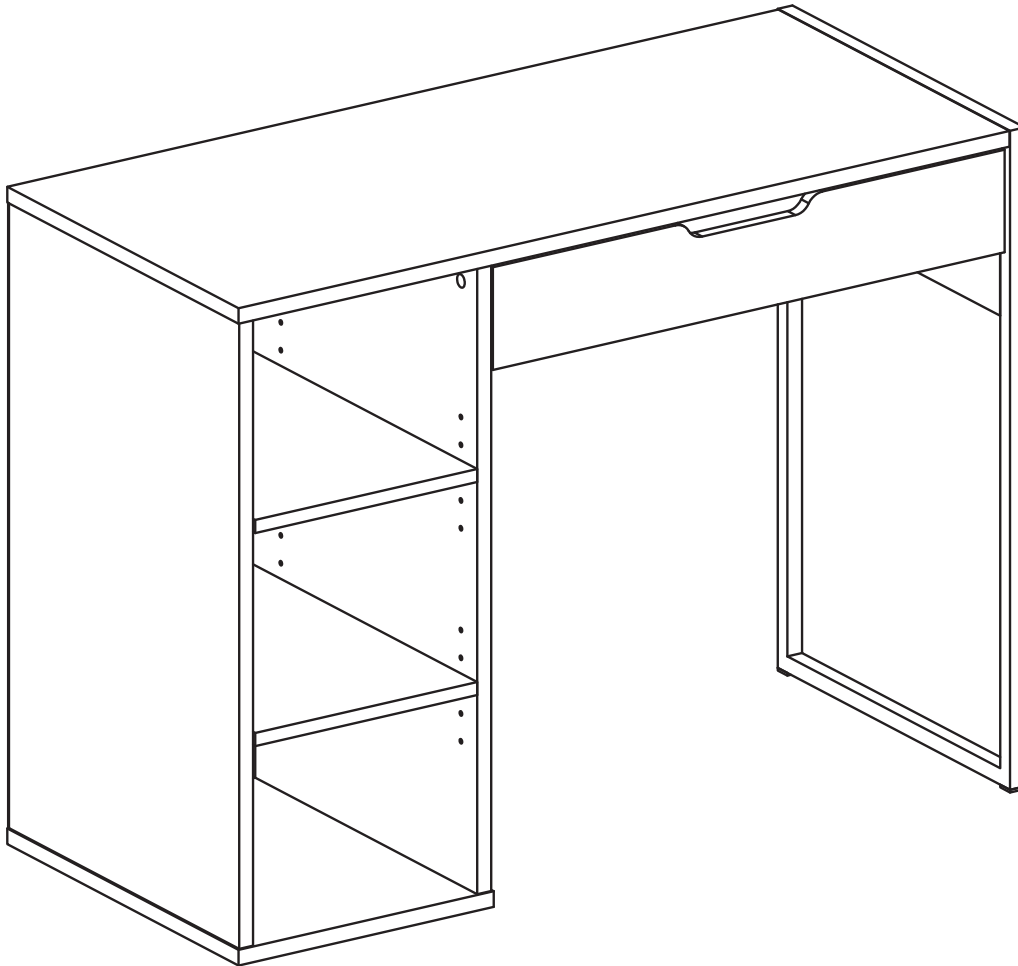

Assembly Instructions - Important:

 Carefully unpack and identify each component before attempting to assemble. Refer to parts list. Please take care when assembling the unit and always set the parts on a clean, soft surface. If you require any assistance with assembly, parts or information on other products, please visit our website: www.officestar.net or call or write us.

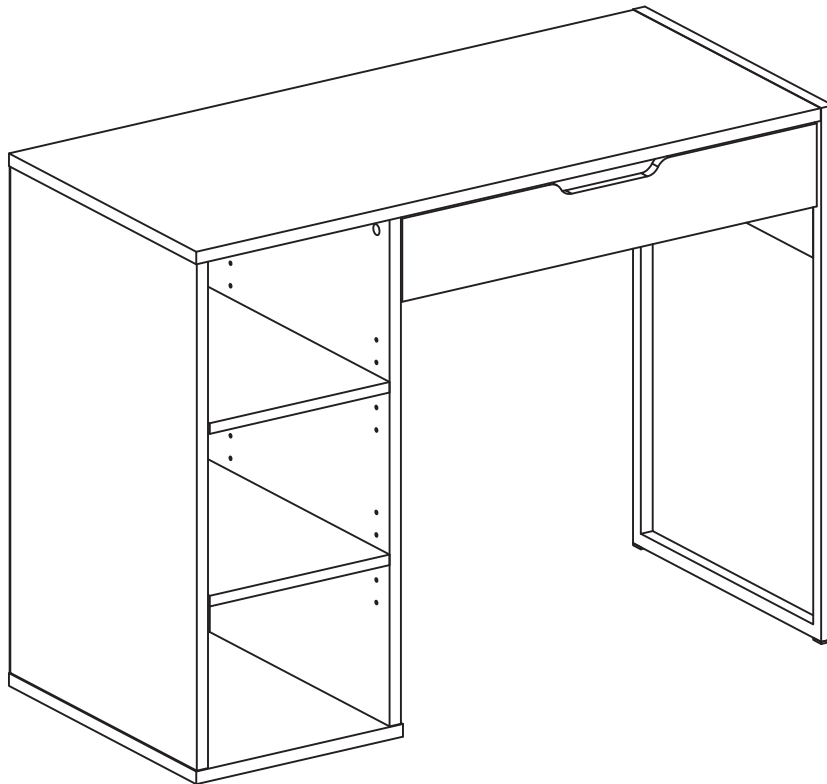


1. Do not use this product unless all screws and bolts are securely tightened.
2. Check that all screws and bolts are tight every three months or as needed.
3. Dispose of packing material properly. Do not use plastic cover as head covering. It may cause suffocation.
4. Do not use this product as a stepladder.
5. Use this product for its intended purpose only.
6. **FOR INDOOR RESIDENTIAL USE ONLY.**


LIMITED WARRANTY

OSP Home Furnishings™ warrants to the original purchaser that this product will be free from defects in material and workmanship as described below. OSP Home Furnishings™ will repair or replace, at its option, without charge to the original purchaser only, defective products or parts for one (1) year from the date of purchase. Replacement parts can only be supplied if parts are available. Items out of production may be unavailable. This warranty shall be effective for the applicable time period beginning from the date of purchase as shown on your original sales receipt. This warranty is your sole remedy for product defects and excludes defects due to or arising in connection with product abuse or misuse, use modification of, or attachments to the product, and products or parts not used, maintained, or installed in accordance with the company's installation, maintenance and/or applicable guidelines. There are no other warranties, express or implied, other than those specifically described, including without limitation any implied warranty of merchantability or of fitness for a particular purpose. OSP Home Furnishings™ will not be responsible for incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. Our quality standards are among the highest in the industry. Sometimes, no matter how hard we try, there are times when parts are damaged or missing. Our Parts Department will do everything possible to promptly remedy the problem. Contact us via e-mail parts@officestar.net, by Fax 1-909-930-5629, or toll free parts number 1-800-950-7262, Monday through Friday 8:00 a.m. - 5:00 p.m. Pacific Time. To make a warranty claim, contact Parts Department. Provide model number, proof of purchase, description of the problem and obtain return authorization. At its option OSP Home Furnishings™ will: (a) Supply compatible components of current manufacture. (b) Repair the customer's component. The customer must prepay freight on any components returned to the factory. Return freight on components still in warranty will be paid by OSP Home Furnishings™.

 
PARTS

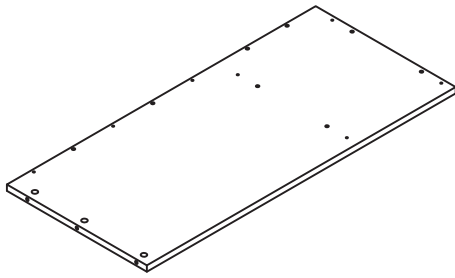

 
(A) Top Panel (1 PC)

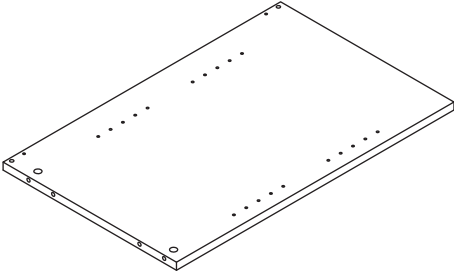

 
(B) Left Side Panel (1 PC)

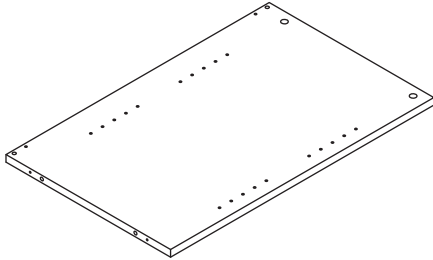

 
(C) Divider Panel (1 PC)

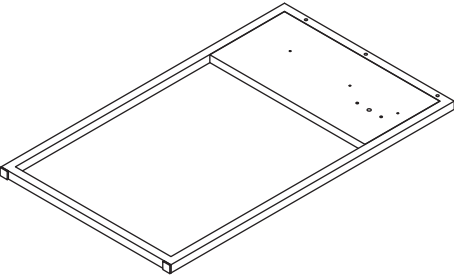

 
(D) Right Frame (1 PC)

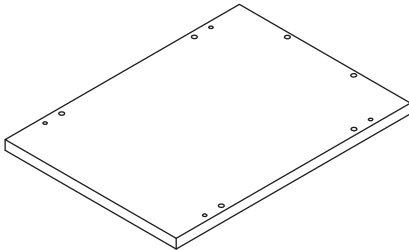

 
(E) Bottom Panel (1 PC)

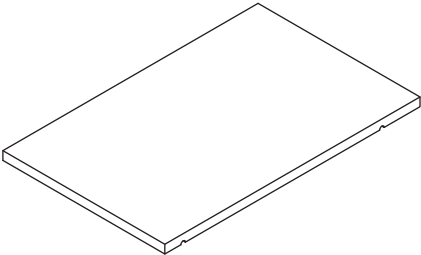

 
(F) Shelf (2 PCS)

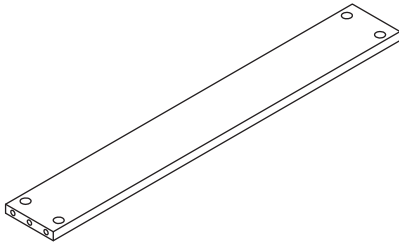

 
(G) Right Cross Rail (1 PC)

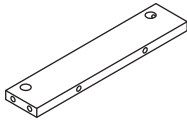

 (H) Left Back Rail (2 PCS)

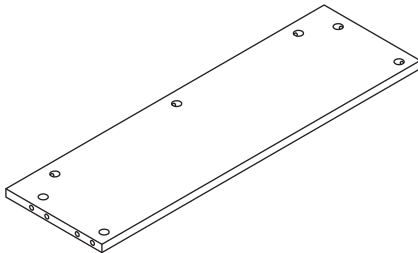


 (I) Right Back Panel (1 PC)

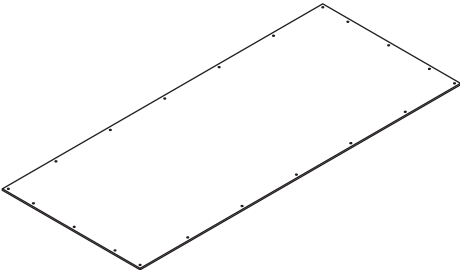


(J) Left Back Panel (1 PC)

 
PARTS

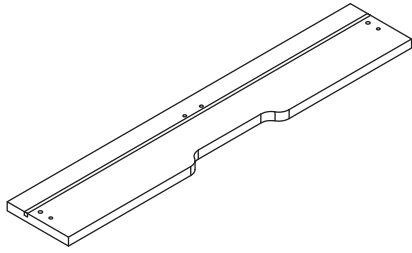

 
(K) Front Drawer Panel (1 PC)

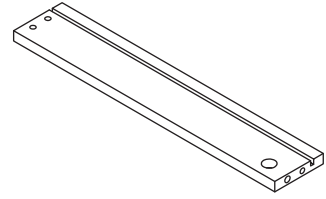

 
(L) Drawer Left Side Panel (1 PC)

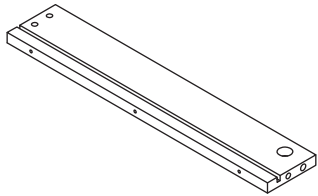

 
(M) Drawer Right Side Panel (1 PC)

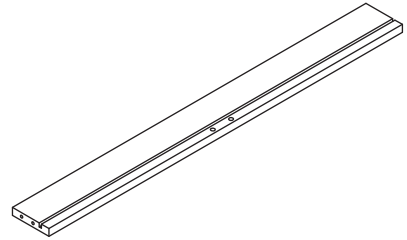

 (N) Drawer Back Panel (1 PC)

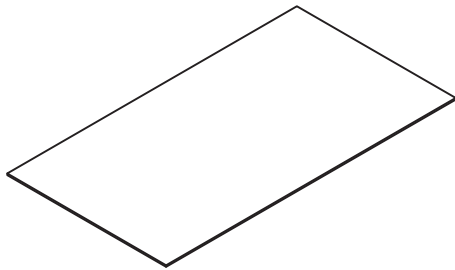

 (O) Drawer Bottom Panel (1 PC)

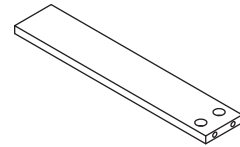

(P) Drawer Support (1 PC)

 
 
 
IMPORTANT NOTE:

Use hand tools only for assembly as power tools may cause damage.




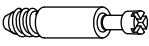
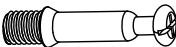
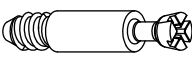


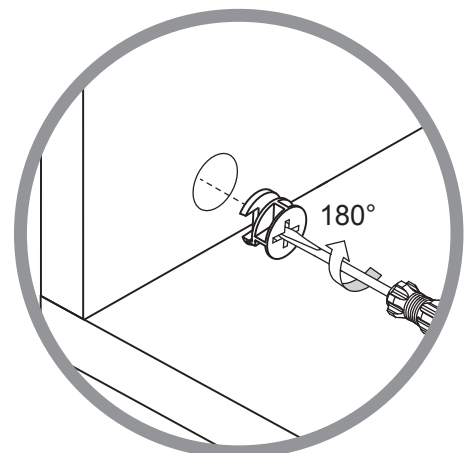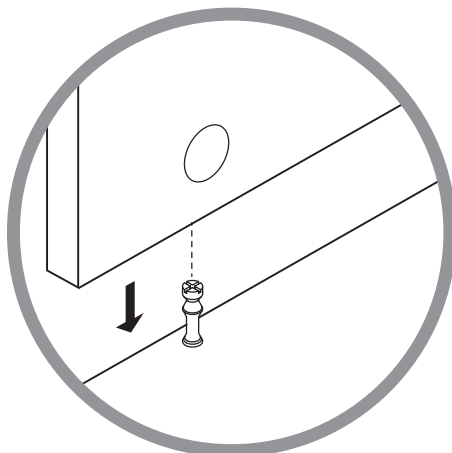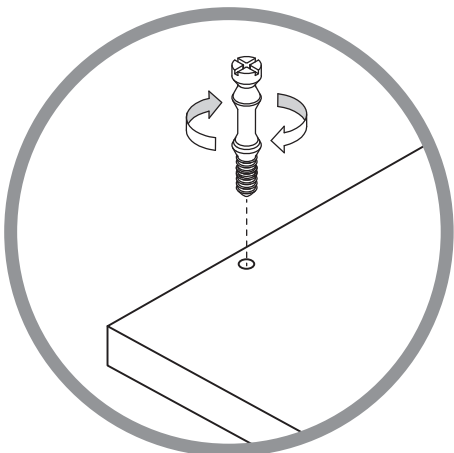


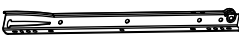

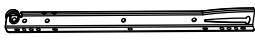

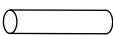
Rubber mallet also needed for assembly (not provided).

Phillips Screwdriver also needed for assembly (not provided).


CAM LOCK INSTALLATION



HARDWARE LIST


NO	DRAWING	DESCRIPTION	QUANTITY
1		Screw	12 PCS + 2 EXTRA
2		Screw	20 PCS + 2 EXTRA
3		Screw	10 PCS + 2 EXTRA
4		Cam Screw	4 PCS + 1 EXTRA
5		Cam Screw	5 PCS + 1 EXTRA
6		Cam Screw	17 PCS + 2 EXTRA
7		Cam Nut	4 PCS +1 EXTRA
8		Cam Nut	22 PCS + 2 EXTRA
9		Wooden Dowel	2 PCS
10		Wooden Dowel	22 PCS + 2 EXTRA
11		Drawer Rail	1 PC
12		Drawer Rail	1 PC
13		Drawer Rail	1 PC
14		Drawer Rail	1 PC
15		Plastic Cap	12 PCS + 2 EXTRA
16		Shelf Pin	8 PCS + 1 EXTRA

 STEP 1

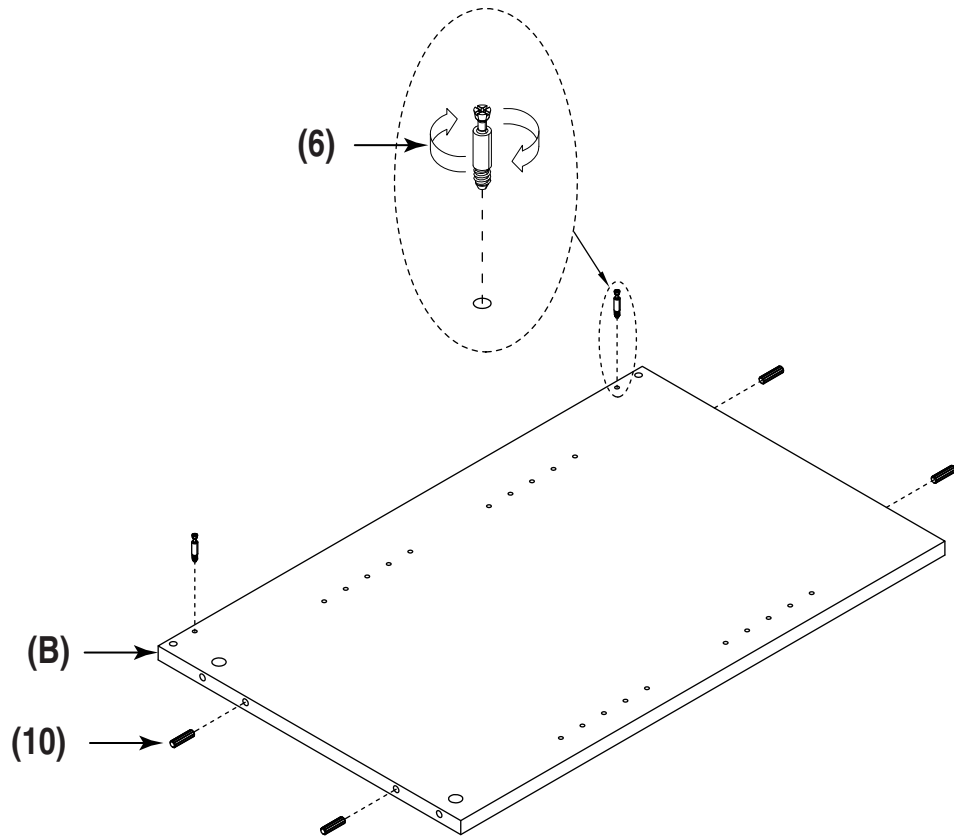


FULLY TIGHTEN CAM SCREWS (6).

 STEP 2

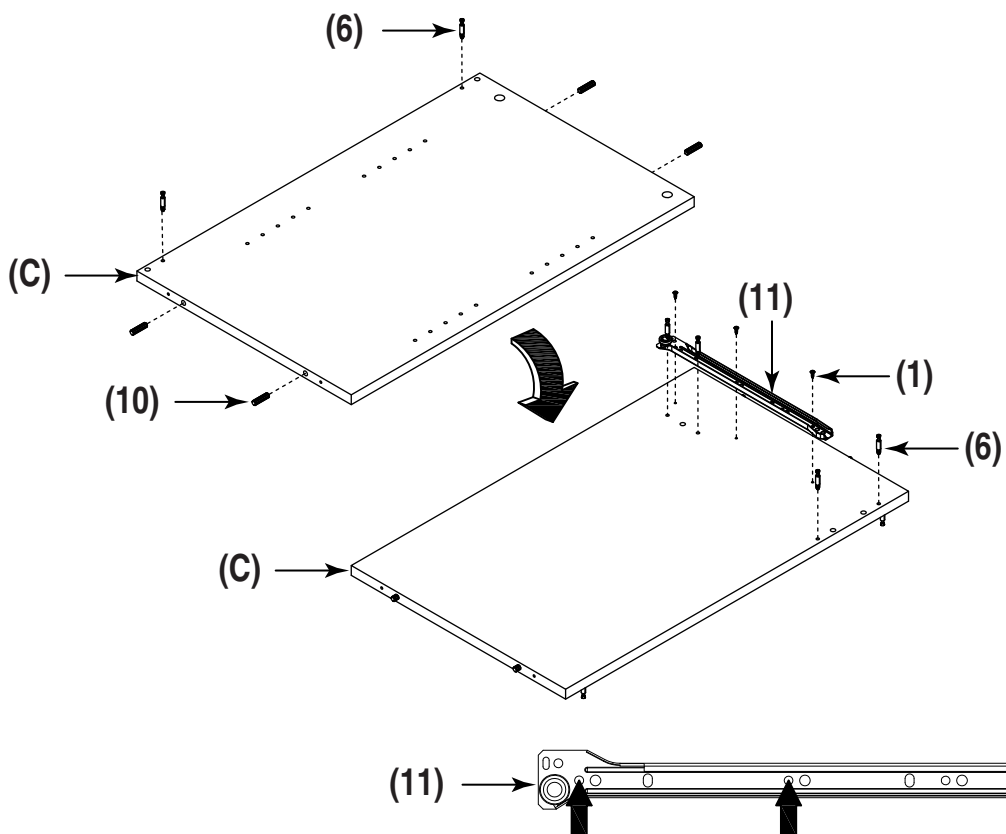


FULLY TIGHTEN CAM SCREWS (6) & SCREWS (1).

 STEP 3

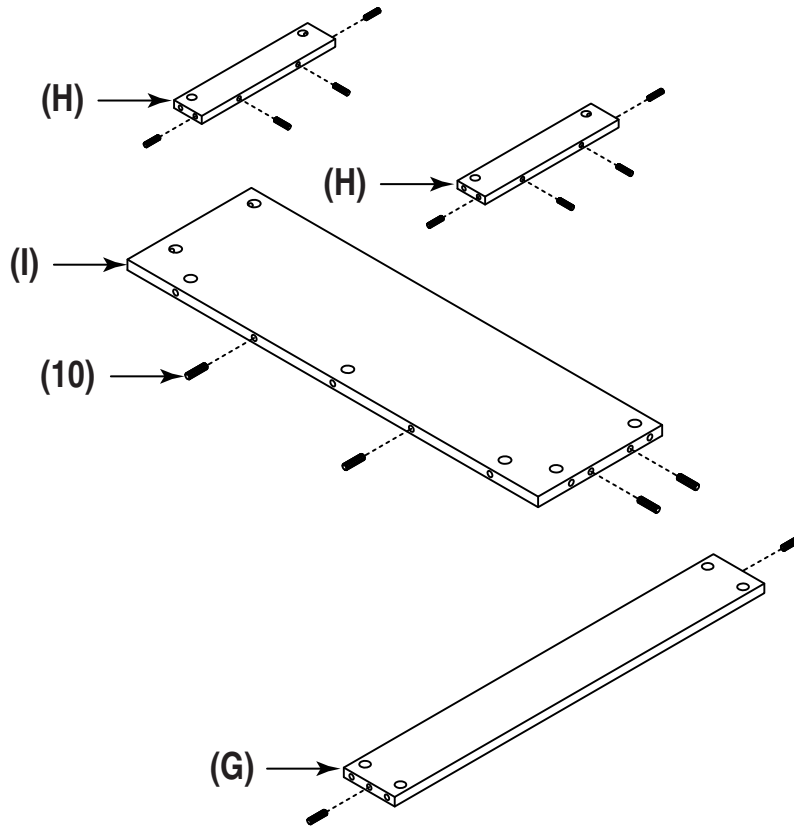


 STEP 4

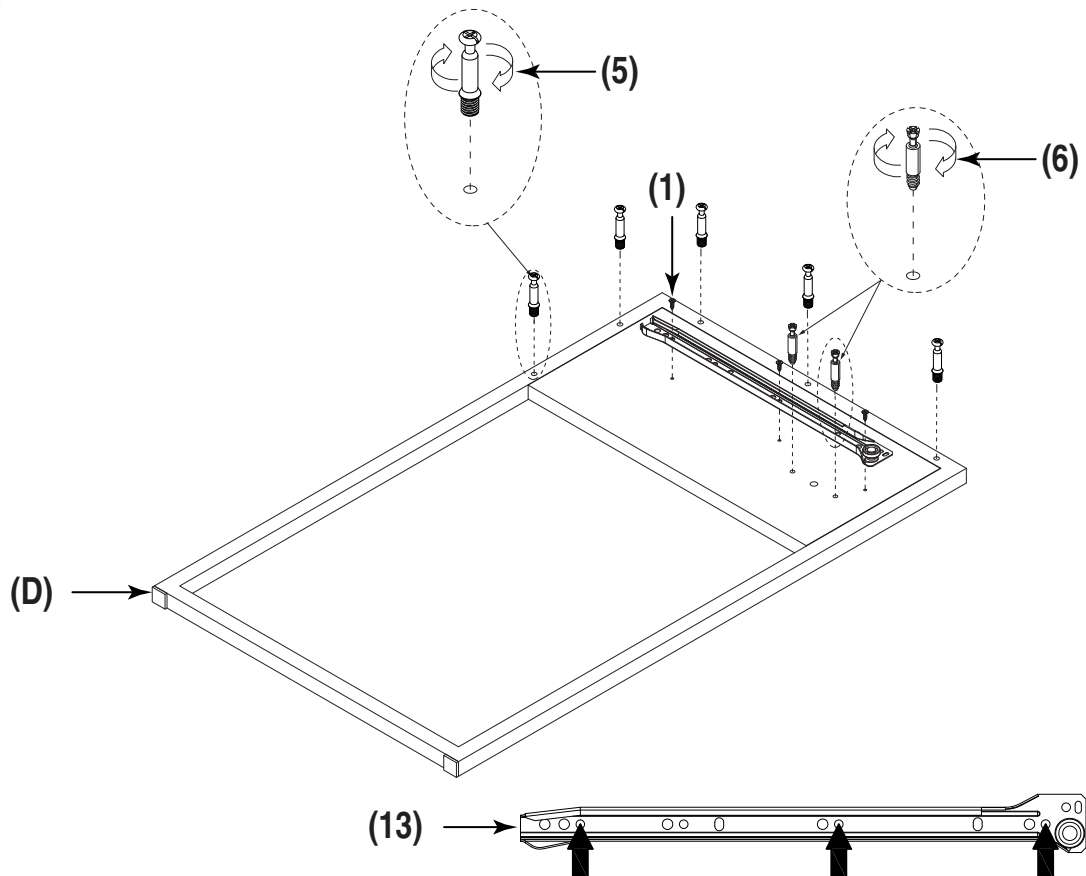


FULLY TIGHTEN CAM SCREWS (5 & 6) AND SCREWS (1).

 STEP 5

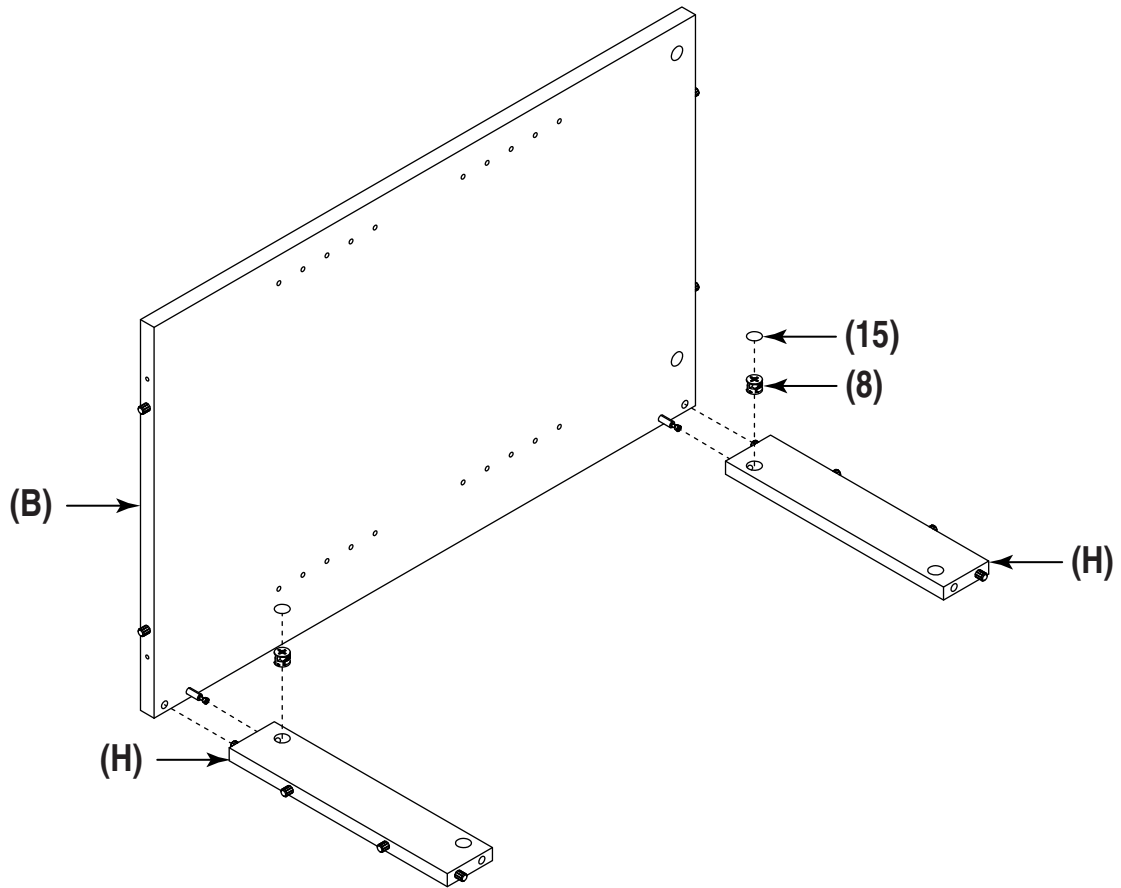


FULLY TIGHTEN CAM NUTS (8).

 STEP 6

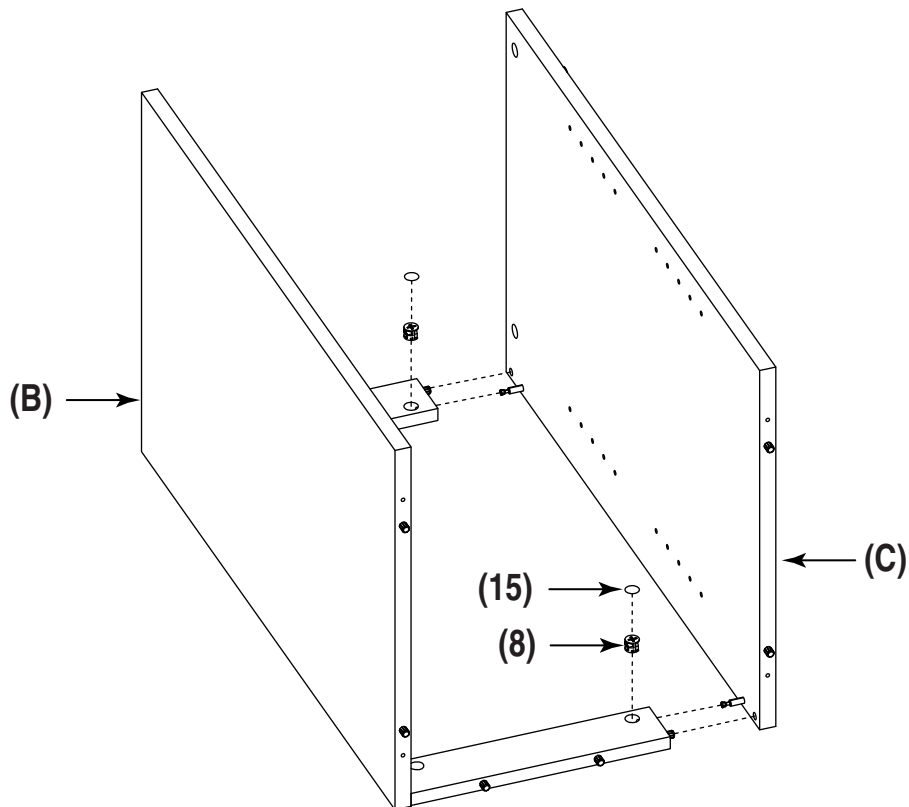


FULLY TIGHTEN CAM NUTS (8).

 STEP 7

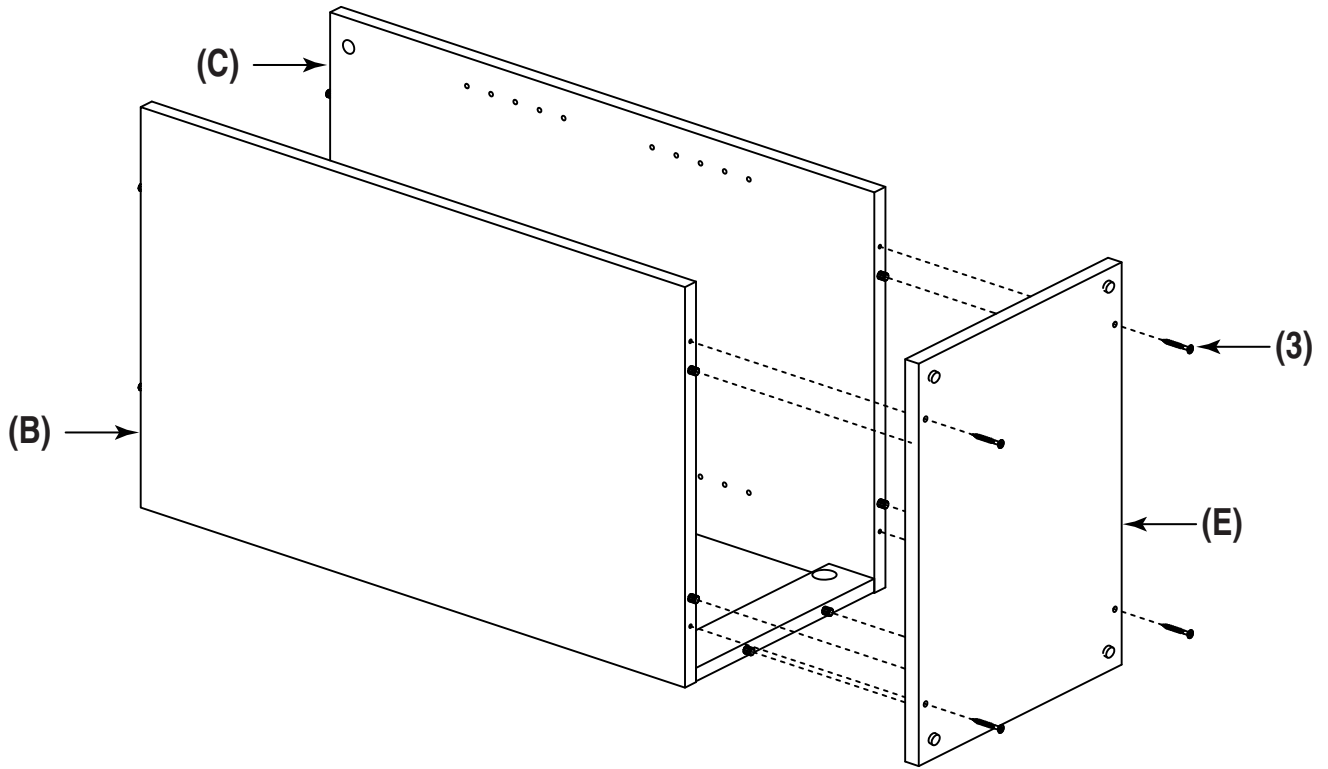


FULLY TIGHTEN SCREWS (3).

 STEP 8

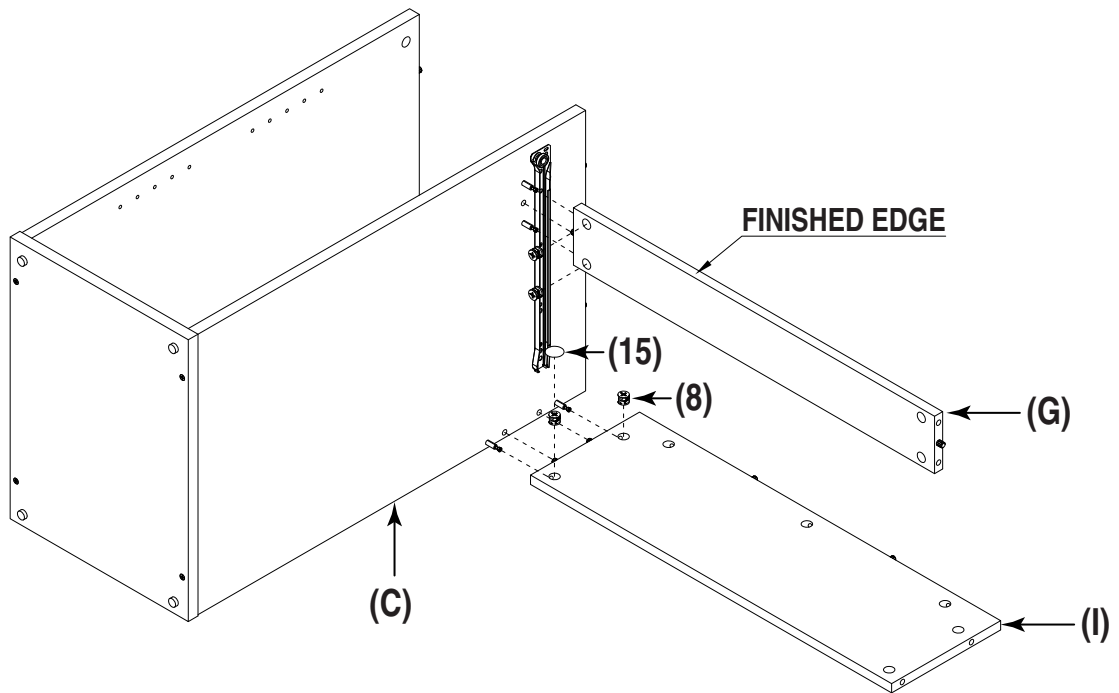


FULLY TIGHTEN CAM NUTS (8).

 STEP 9

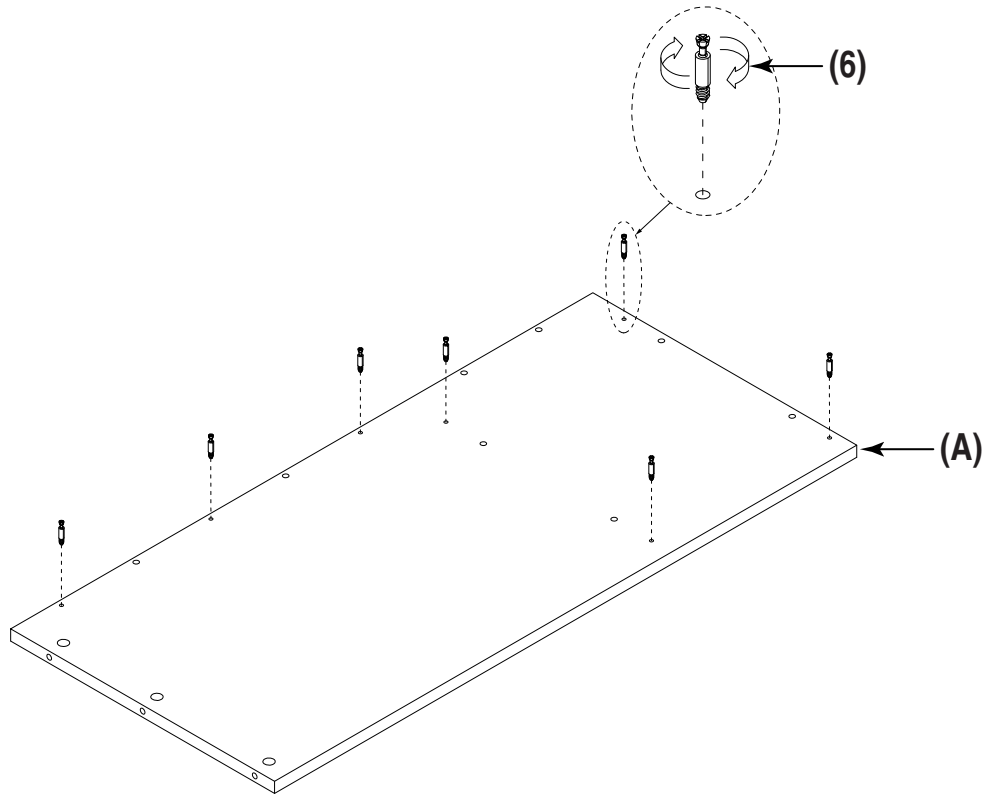


FULLY TIGHTEN CAM SCREWS (6).

 STEP 10

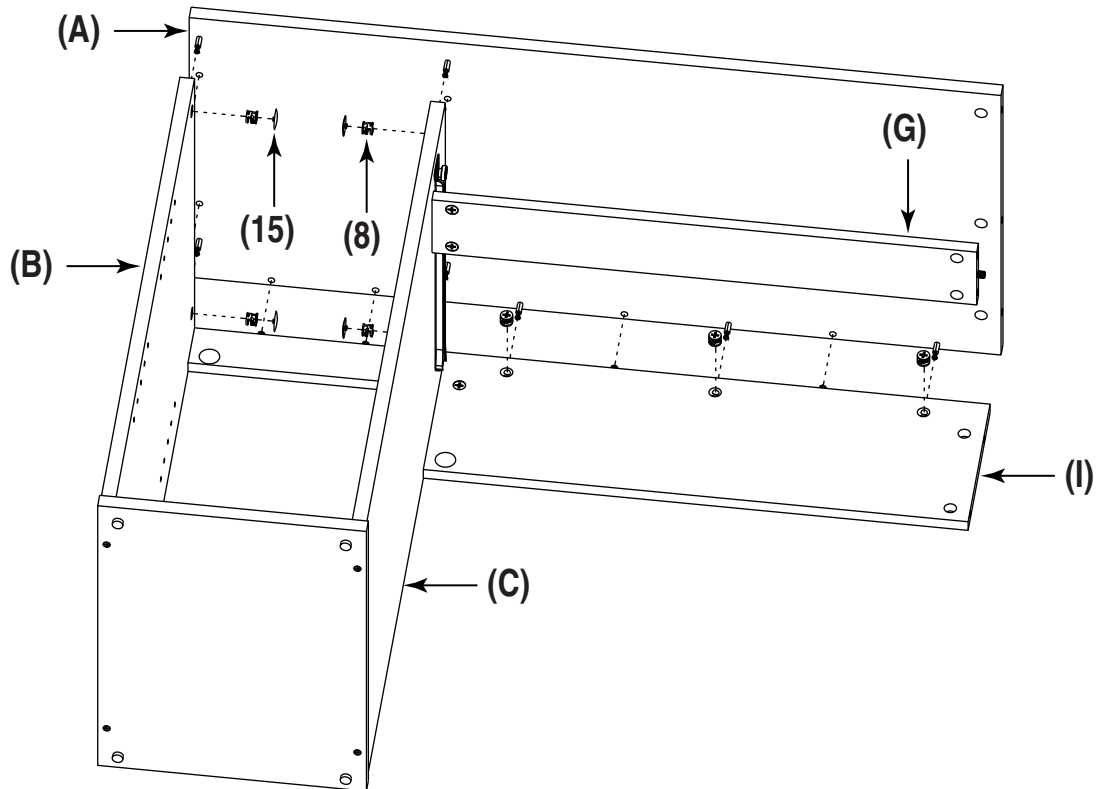


FULLY TIGHTEN CAM NUTS (8).

 STEP 11

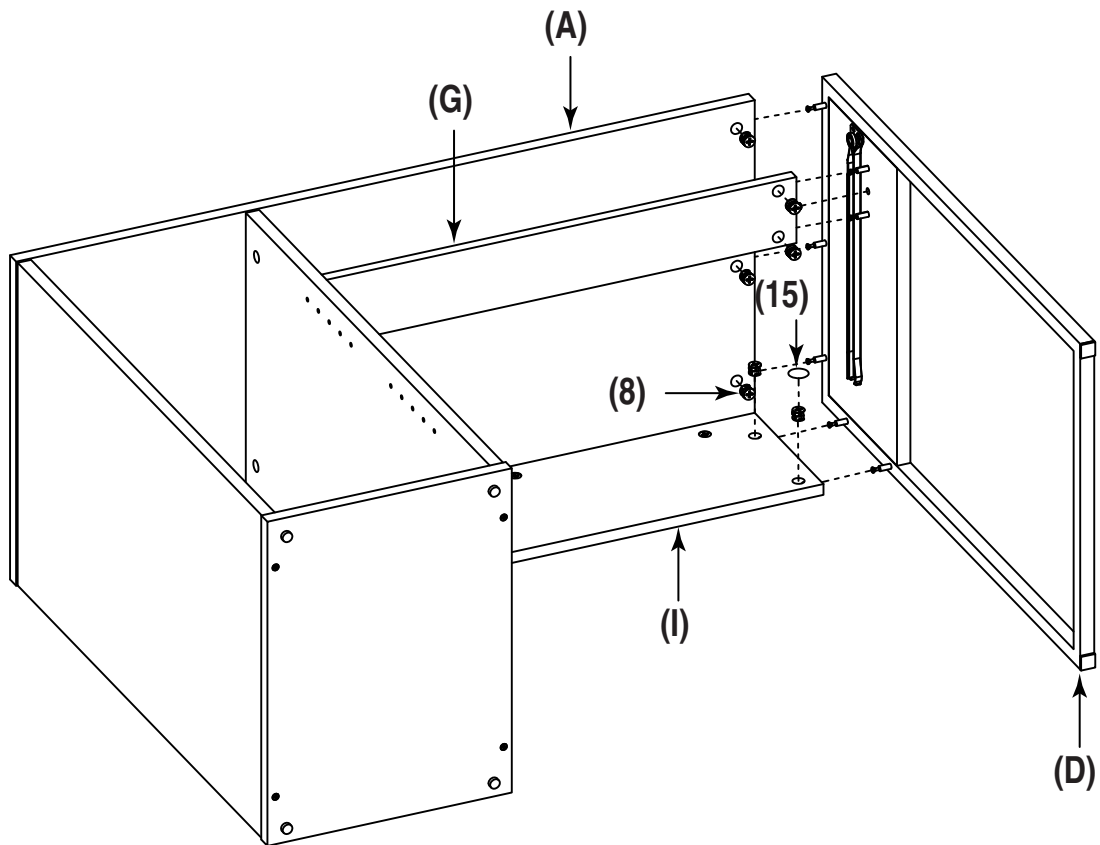


FULLY TIGHTEN CAM NUTS (8).

 STEP 12

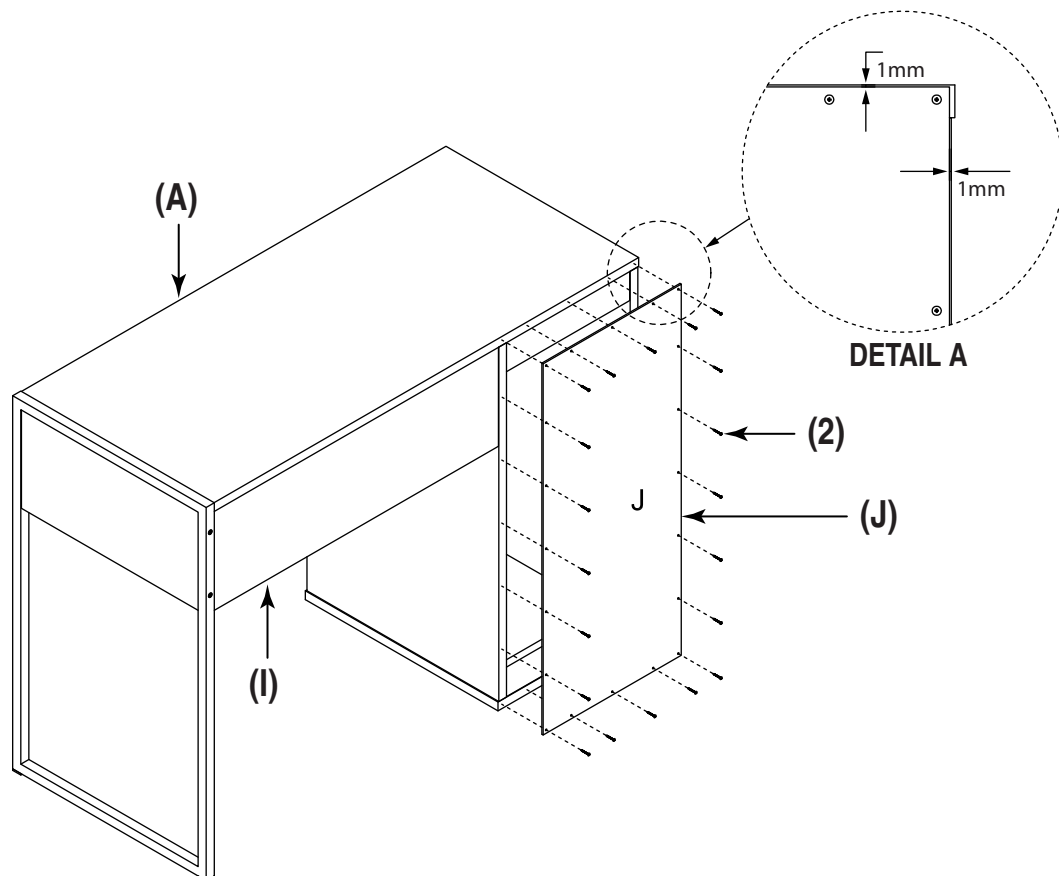


ALIGN LEFT BACK PANEL (J) TO ASSEMBLY (SEE DETAIL A). FULLY TIGHTEN SCREWS (2).

 STEP 13

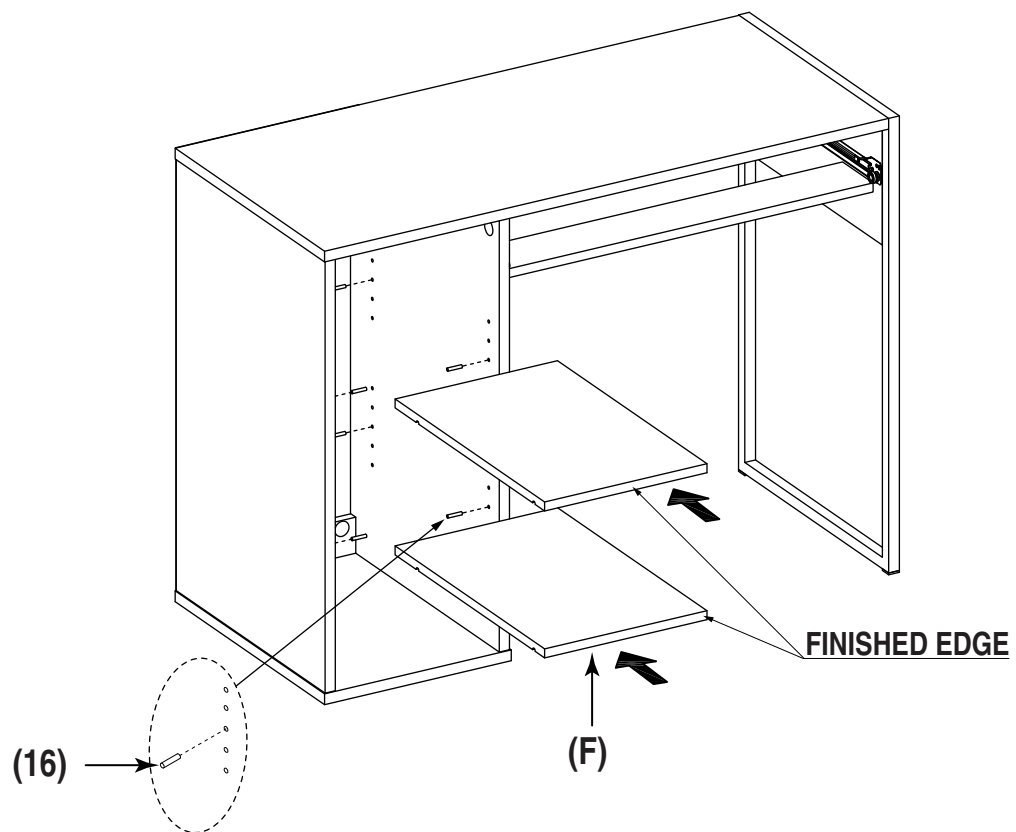


 STEP 14

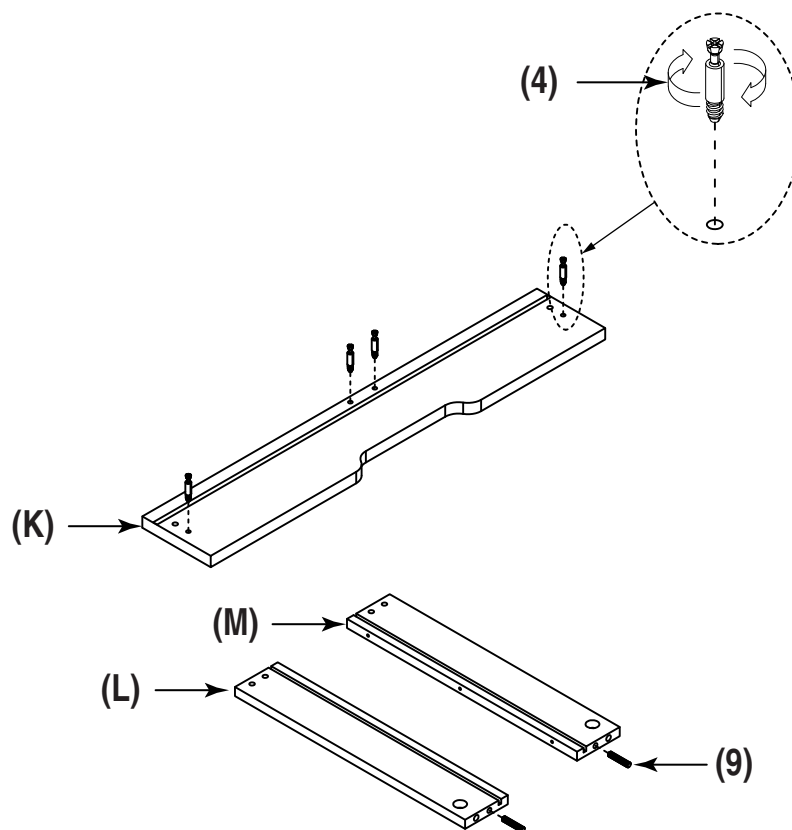


FULLY TIGHTEN CAM LOCK SCREWS (4).

 STEP 15

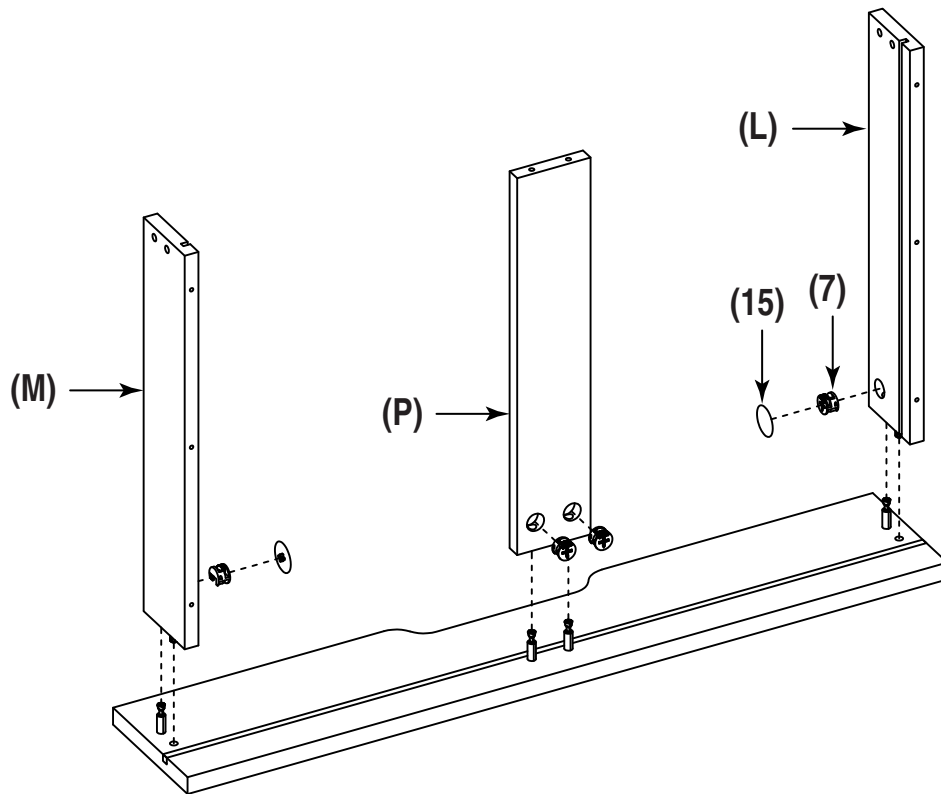


FULLY TIGHTEN CAM NUTS (7).

 STEP 16

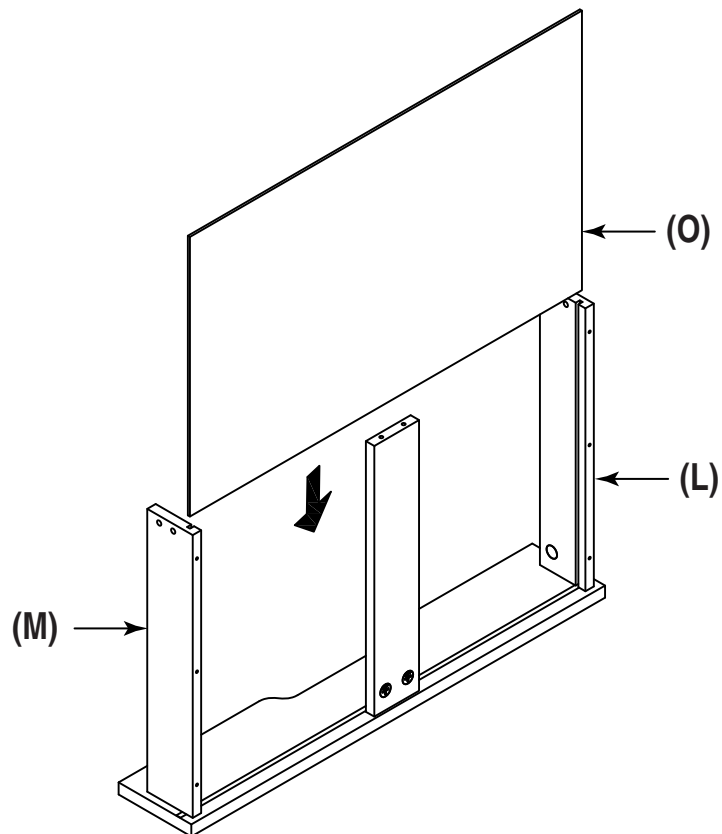


 STEP 17

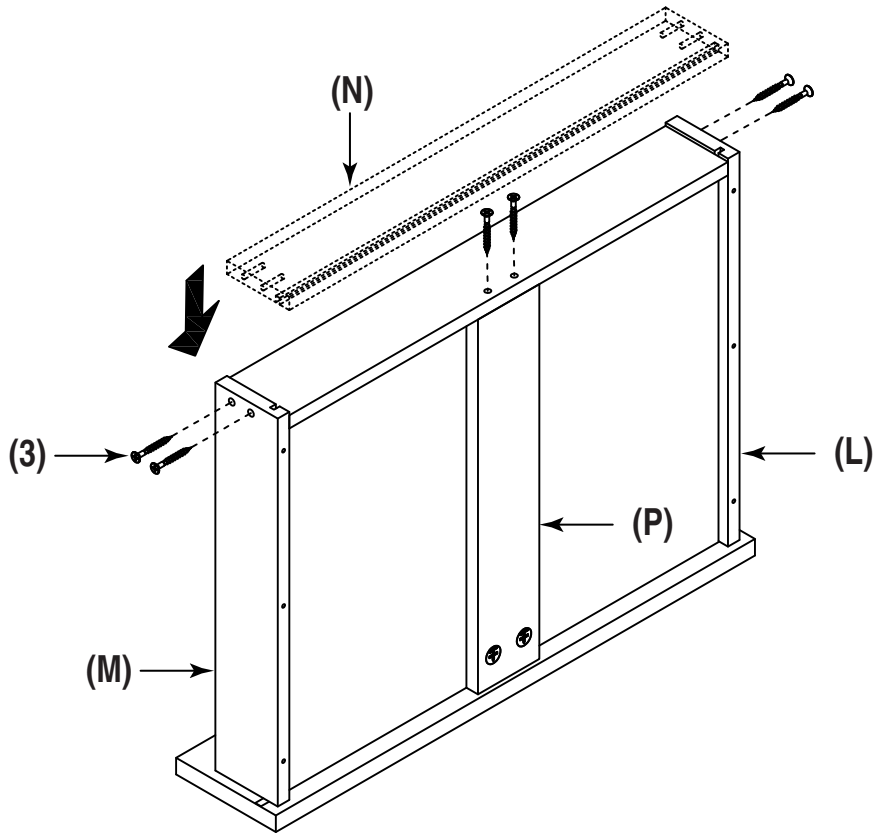

FULLY TIGHTEN SCREWS (3).

 STEP 18

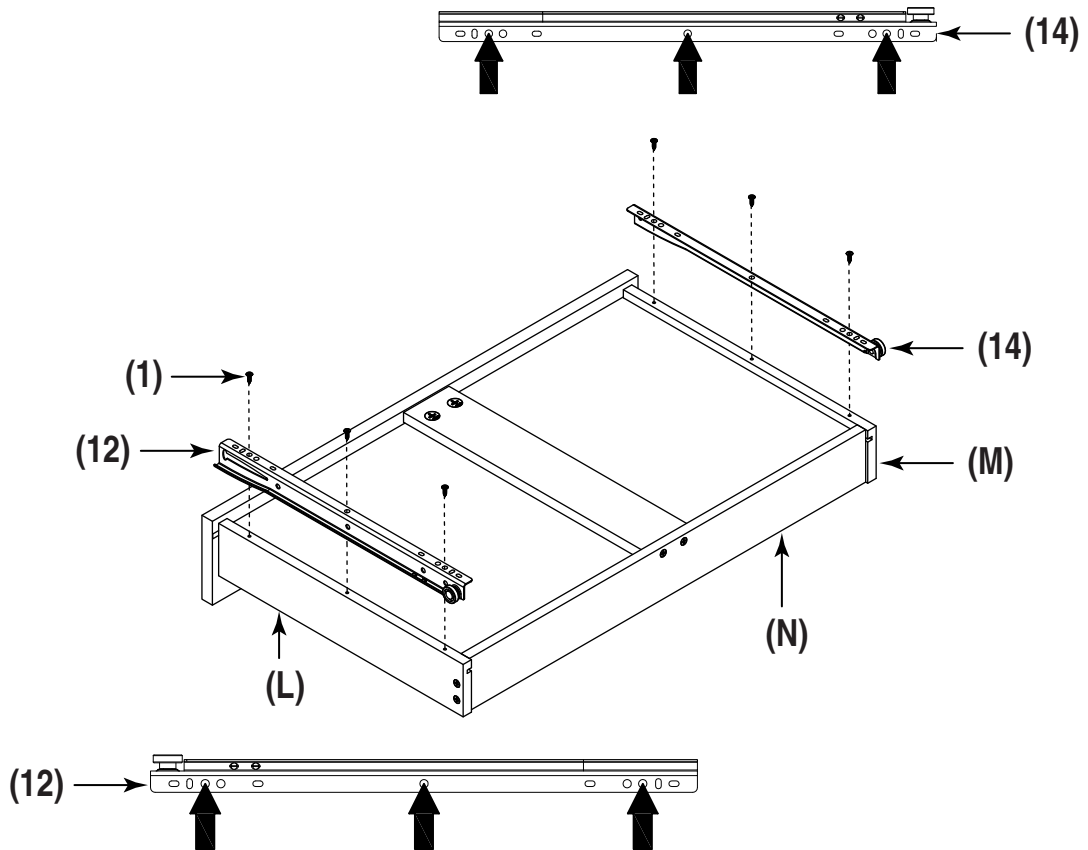

FULLY TIGHTEN SCREWS (1).

STEP 19

