

## QUICK SETUP GUIDE

## 130-Can Beverage Cooler

NS-BC130GP1 / NS-BC130GP1-C



## PACKAGE CONTENTS

- 130-can beverage cooler
- Quick Setup Guide

Before using your new product, please read these instructions to prevent any damage.

## IMPORTANT SAFETY INSTRUCTIONS

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this appliance near water.
- 6 Clean only with a damp cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatuses (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched, particularly at plugs, wall outlets, and the point where they exit from the appliance.
- 11 Do not attempt to modify or extend the power cord of this appliance.
- 12 Unplug this appliance during lightning storms or when it will not be used for long periods of time.
- 13 Make sure that the available AC power matches the voltage requirements of this appliance.
- 14 Do not handle the plug with wet hands. This could result in an electric shock.
- 15 Unplug the power cord by holding the plug, never by pulling the cord.
- 16 Do not turn the appliance on or off by plugging or unplugging the power cord.
- 17 Refer all servicing to qualified service personnel. Servicing is required when the appliance has been damaged in any way, such as when the power-supply cord or plug is damaged, when liquid has been spilled or objects have fallen into the appliance, or when the appliance has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 18 To reduce the risk of fire or electric shock, do not expose this appliance to rain, moisture, dripping, or splashing, and do not place objects filled with liquid on top of it.

## Grounding requirement



This cooler must be grounded. This cooler is equipped with a cord that has a grounding wire and plug. The plug must be inserted into an outlet that is properly installed and grounded.

Improper use of the grounding plug can result in a risk of electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood or if doubt exists as to whether the cooler is properly grounded.

## FEATURES

- 130-can, 4.6 cu. ft. capacity holds your favorite drinks
- Flexible 34–50°F (1–10°C) temperature range chills drinks perfectly
- Touch controls and LED display for easy control
- 3 removable wood-trimmed shelves for additional storage options
- Reversible glass door for convenient entry options
- Adjustable legs keep your cooler stable
- Auto defrost prevents ice and condensation build-up
- White LED light makes it easy to find your drinks

## Control panel/display

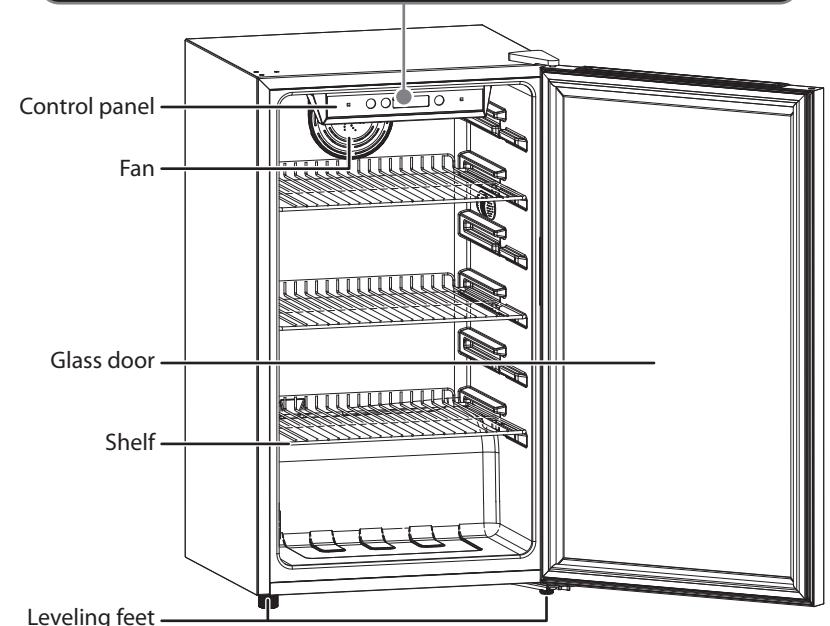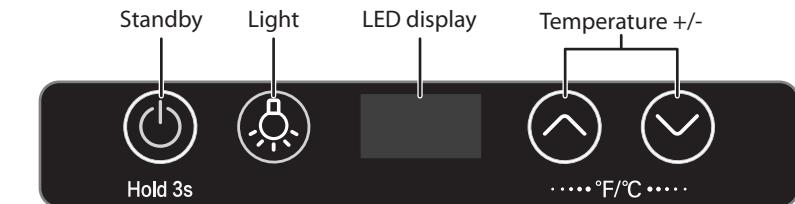

## SETTING UP YOUR COOLER

## Before using your cooler

- Remove the exterior and interior packaging.
- Let the cooler stand upright for approximately half an hour before plugging it in to reduce the possibility of a cooling system malfunction.
- Clean the interior with a damp, warm cloth.

## 1 Find a suitable location

## DO

- Place your cooler on a floor, countertop, or cabinet that is strong enough to support it when it is fully loaded.
- Allow 1.6 inches (4 cm) of space on all sides of the cooler to allow for proper air ventilation.
- Place the cooler away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Room temperature below 50°F (10°C) or above 85°F (30°C) will hinder the performance.

## DON'T

- Recess or build it into a countertop or wall. This cooler is designed to be free standing only.
- Place the cooler in moist areas.
- Use the cooler in a garage or any other outside location.

## 2 Level your cooler

If the cooler is not level, the door may not close or seal properly. This may cause cooling, frost, or moisture problems.

- To level your cooler, raise or lower the leveling feet by turning them clockwise or counter-clockwise.

## 3 Connect to power

- Plug your cooler in and run it for two to three hours before adding beverages and making temperature adjustments. This allows your cooler to reach a stable temperature.

**Note:** Check your local power source. This cooler requires a 110V-120V, 60 Hz power supply. Use a 3-prong (grounding) outlet. The power cord is equipped with a 3-prong (grounding) plug which plugs into a standard 3-prong (grounding) wall outlet to minimize the possibility of electric shock hazard from this cooler.

## USING YOUR COOLER

### Setting the temperature

- Press the  $\wedge$  (temperature up) or  $\vee$  (temperature down) buttons to increase or decrease the temperature by one degree. The temperature range is 34–50° F (1–10° C).
- Press and hold the  $\wedge$  (temperature up) and  $\vee$  (temperature down) buttons at the same time for three seconds to switch between Fahrenheit and Celsius.
- Note:** If you experience a power outage, your cooler will resume cooling at the temperature it was set to before the outage when it is turned on again.

### Using the display

- When you plug in your cooler for the first time, the display screen turns on for three seconds, and you hear a start-up buzzer.
- In normal mode, the display shows the set temperature.

### Lighting your cooler

- Press the  (light) button to turn the light on or off. The buzzer sounds when the light is turned on or off.

### Entering standby mode

- Press and hold the  (Standby) button for three seconds. The buzzer sounds and the display turns off.
- To return to normal mode, press  (Standby) again.

### Reversing the door

- See the online *User Guide* for steps on reversing the door.

## CLEANING YOUR COOLER

- Turn off your cooler and unplug it from the wall outlet.
- Remove all beverages.
- Wash the interior with a damp, warm cloth.  
**Note:** It is recommended that you soak your cloth in a baking soda solution before washing the interior. Mix one quart of warm water and two tablespoons of baking soda.
- Clean the door gasket (seal) so the door closes properly.
- Dry the interior and exterior with a soft cloth.

## TIPS ON SAVING ENERGY

- Place your cooler in the coolest area of the room, away from heat-producing appliances or heating ducts, and out of direct sunlight.
- Do not overload the cooler, because it forces the compressor to run longer.
- Do not open the door too often, especially if the weather is very hot. Close the door as soon as possible to prevent cool air from escaping.
- Make sure that the door seals completely to keep your cooler running efficiently.
- Make sure to keep the door gasket (seal) clean to keep your cooler running efficiently.
- Make sure that your cooler is sufficiently ventilated and is in a room with adequate air circulation.

## SPECIFICATIONS

- Dimensions (HxWxD):** 33.6 x 21.4 x 22.2 in. (85.5 x 54.5 x 56.5 cm)
- Weight:** 79.4 lbs. (36 kg)
- Power requirements:** 115 V~60 Hz-70.5 W
- Current:** 1.2 A
- Ambient operating temperature:** 50 ~ 85°F (10 ~ 30°C)
- Power cord length:** 5.4 ft. (1.65 m)
- Cooler temperature range:** 34 ~ 50°F (1 ~ 10°C)

## TROUBLESHOOTING

### Fault indication

If a fault is detected, the display shows one of the following codes:

- E1:** Temperature sensor fault
- E4:** Defrost sensor fault

If either of these error codes appears on the display, please contact your local dealer or service center. Do not try to repair the cooler yourself.

| PROBLEM                                                      | SOLUTION                                                                                                                                                                                                                                                                                                                                                                |
|--------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>My cooler is not working.</b>                             | <ul style="list-style-type: none"><li>Make sure that your cooler is plugged in and that the plug is pushed completely into the outlet.</li><li>Check the house fuse/circuit breaker box and replace the fuse or reset the circuit breaker.</li><li>If a power failure occurs, your cooler turns off. Wait until the power is restored, then turn it on again.</li></ul> |
| <b>The door does not close completely.</b>                   | <ul style="list-style-type: none"><li>Adjust the shelves.</li><li>Clean the door gaskets.</li><li>Level the cooler with the leveling feet.</li></ul>                                                                                                                                                                                                                    |
| <b>My cooler is not cold enough.</b>                         | <ul style="list-style-type: none"><li>Make sure that the door is closed properly.</li><li>Allow time for the new beverage(s) to cool, then check again.</li><li>Set the temperature to a colder setting.</li></ul>                                                                                                                                                      |
| <b>My cooler makes unusual noises or vibrates.</b>           | <ul style="list-style-type: none"><li>Level the cooler with the leveling feet.</li><li>Move the cooler away from the wall.</li><li>This is normal.</li></ul>                                                                                                                                                                                                            |
| <b>Moisture is building up in the interior of my cooler.</b> | <ul style="list-style-type: none"><li>Make sure that the door is closed properly.</li><li>Move the cooler to a drier location.</li></ul>                                                                                                                                                                                                                                |
| <b>My cooler turns on and off frequently.</b>                | <ul style="list-style-type: none"><li>Make sure that your cooler is in a room that is 50–85° F (10–29.4° C) or place your cooler in a cooler location.</li><li>Make sure that the door is closed properly.</li><li>Clean the door gaskets.</li><li>Set the temperature to a colder setting.</li></ul>                                                                   |

**Note:** See the online *User Guide* for additional troubleshooting tips.

## WARNING

### Electric Shock Hazard

Failure to follow these instructions can result in electric shock, fire, or death.

**1 WARNING**—Keep ventilation openings on the appliance clear of obstructions.

**2 WARNING**—Do not touch the compressor with wet hands. This could result in frost bite.

**3 WARNING**—Do not use mechanical devices or other means to accelerate the defrosting process, unless they are recommended by the manufacturer.

**4 WARNING**—Do not damage the refrigerant tubing when handling, moving, or using the cooler.

**5 WARNING**—Do not use electrical appliances inside the beverage cooler, unless they are of the type recommended by the manufacturer.

**6 WARNING—DANGER**—Never allow children to play with, operate, or crawl inside your cooler.

Risk of child entrapment. Before you throw away your old cooler:

1) Take off the door

2) Leave the shelves in place so that children may not easily climb inside

**7 WARNING**—Do not use extension cords or ungrounded (two prong) adapters.

**8** Unplug the cooler before carrying out user maintenance on it.



**R600a**

Caution, risk of fire

## ONE-YEAR LIMITED WARRANTY

Visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for details.

## QUEBEC AVAILABILITY GUARANTEE

For Quebec Residents Only: No guarantee of replacement parts, repair services, or maintenance/repair information. Visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for details.

## CONTACT INSIGNIA

For customer support, call 1-877-467-4289 (U.S. and Canada)  
[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies

Distributed by Best Buy Purchasing, LLC

Richfield, MN 55423

©2025 Best Buy. All rights reserved.