



PN50-R851-26U / PN75-R851-26U

INCLUDED ACCESSORIES

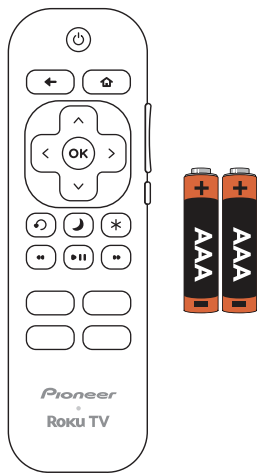


Remote and two AAA batteries

50"

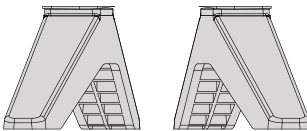

ST4 screws
(25 mm length) (4 pcs.)

75"

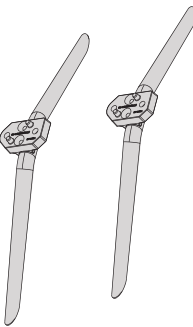

BM6 screws
(18 mm length) (4 pcs.)

WHAT YOU NEED (not included)

- Phillips screwdriver
- Computer, tablet, or smart phone (to connect with a Roku account)
- Roku account and internet connection (for streaming)

*Subscription or other payment may be required to access certain content.
IMPORTANT: Roku never charges for activation. A Roku account and internet connection are required for activation. A paid subscription or other payments may be required for some streaming app content. App availability subject to change and varies by country.

FIND YOUR USER GUIDE ONLINE!

Go to www.usca.pioneer-tv.com and search for PN50-R851-26U / PN75-R851-26U.
For Roku OS features, the manual can be found at go.roku.com/tvmanual




Before using your new TV, read these instructions to prevent any damage.
Do not plug your power cord in until all other devices have been connected.

1 START HERE

How do I attach the stands to my TV? (not for wall mounting)

Carefully place your TV face-down on a cushioned, clean surface. Use a Phillips screwdriver to secure each TV stand to the bottom of your TV with two of the provided screws.

USING THE STANDS

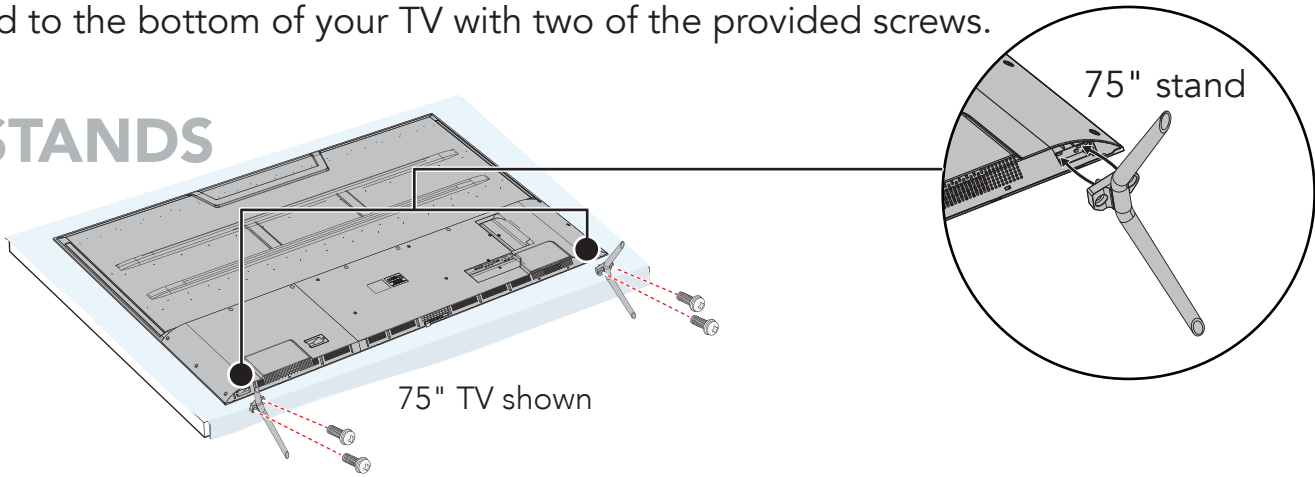


WALL MOUNTING

Before you mount your TV, make sure that:

- You remove the stands if you have already installed them.
- The wall-mount bracket supports the weight of your TV.

See the instructions that came with your wall mount for more information about how to correctly mount your TV.

WARNING: Your TV has four VESA mounting holes on the back. **You must secure a wall-mount bracket to all four holes.** If you do not use all four holes, your TV may fall and cause property damage or personal injury.
Note: Wall-mount screws are not included.

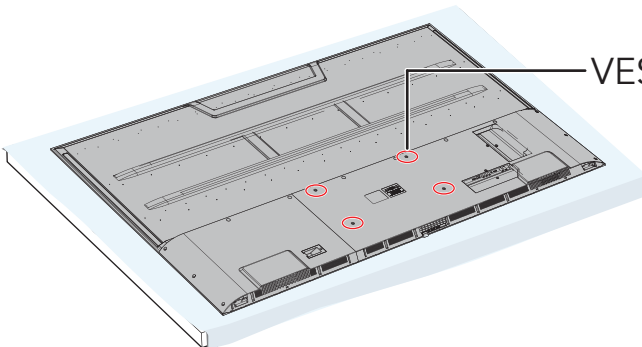

50"


VESA Mounting Pattern
400 × 300 mm
Screws: Type M6,
10 mm (4 pcs) length
depending on the wall mount

75"


VESA Mounting Pattern
400 × 200 mm
Screws: Type M8,
20 mm (4 pcs) length
depending on the wall mount

FEATURES



Front

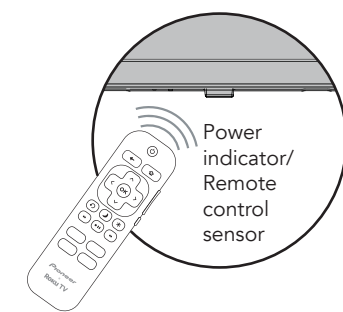

Bottom

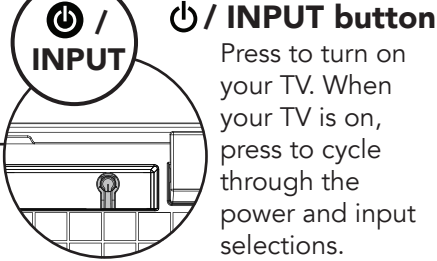

Back

 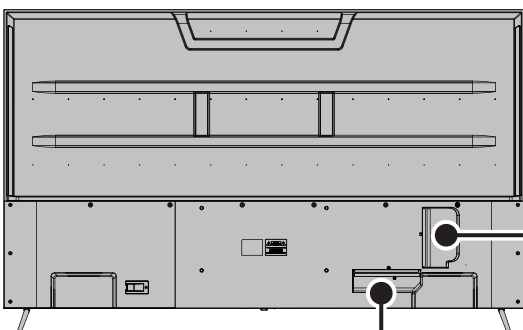

Note: Images do not necessarily represent the exact design of your television.


2 MAKING CONNECTIONS

How do I watch TV (cable, satellite, or antenna) or connect a device such as a DVD or Blu-ray disc player or game console? How do I connect to the internet?

VIDEO OPTIONS

HDMI (BEST)

Note: You can use HDMI to connect to other HDMI devices. To use eARC/ARC functionality the connected device must also have HDMI eARC/ARC. Both devices need to be plugged into **eARC/ARC HDMI** ports.

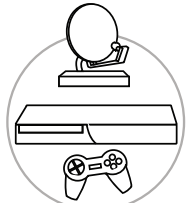

HDMI options


1 (eARC/ARC)

2



3

COAXIAL (GOOD)

Note: Connect an HD antenna or clear cable (via a wall jack).

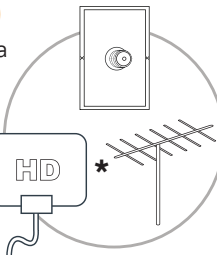

AV (GOOD)

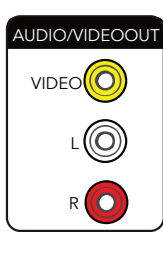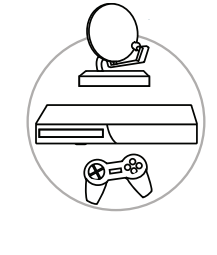

HDMI options

1 (eARC/ARC)

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242

243

244

245

246

247

248

249

250

251

252


253

3 TURNING ON MY TV


When can I turn on my TV?

WHEN YOUR TV IS IN PLACE:

- 1 Plug in your TV.

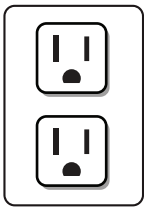


- 2 Remove the remote cover and install the batteries.

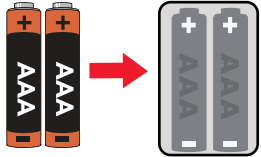


Tip: Always replace dead batteries with two brand-new AAA batteries from the same manufacturer. Never use damaged batteries. If your remote gets hot during use, stop using and contact customer support immediately.

4 COMPLETE GUIDED SETUP

How do I activate my Pioneer Roku TV?

- 1 Press  on your remote.
- 2 Follow the on-screen instructions on your Pioneer Roku TV by using your computer or smartphone to link to a Roku account. If you are not ready to connect to the internet now, you can still use your TV to view content accessible through other connected input sources.

Note: When powering on the TV for the very first time, the Guided Setup screens will guide you through the Wi-Fi setup steps.

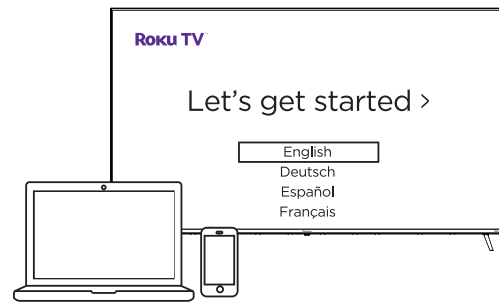

Note: Wi-Fi set up screens may change.

FREQUENTLY ASKED QUESTIONS

Why do I need an internet connection?

You will need an internet connection to stream your favorite apps and for automatic software updates.

Why should I enter a payment method?

Saving a payment method makes it easy to rent or buy movies, subscribe to popular channels, and start free trials in just a click. No charges will be made without your authorization. Roku never charges for activation.


WARNING Stability hazard

A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the television set.
- ALWAYS use furniture that can safely support the television set.
- ALWAYS ensure the television set is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the television set or its controls.
- ALWAYS route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
- NEVER place a television set in an unstable location.
- NEVER place the television set on tall furniture (for example, cupboards, or bookcases) without anchoring both the furniture and the television set to a suitable support.
- NEVER place the television set on cloth or other materials that may be located between the television set and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.

If the existing television set is going to be retained and relocated, the same considerations as above should be applied.

USING YOUR REMOTE

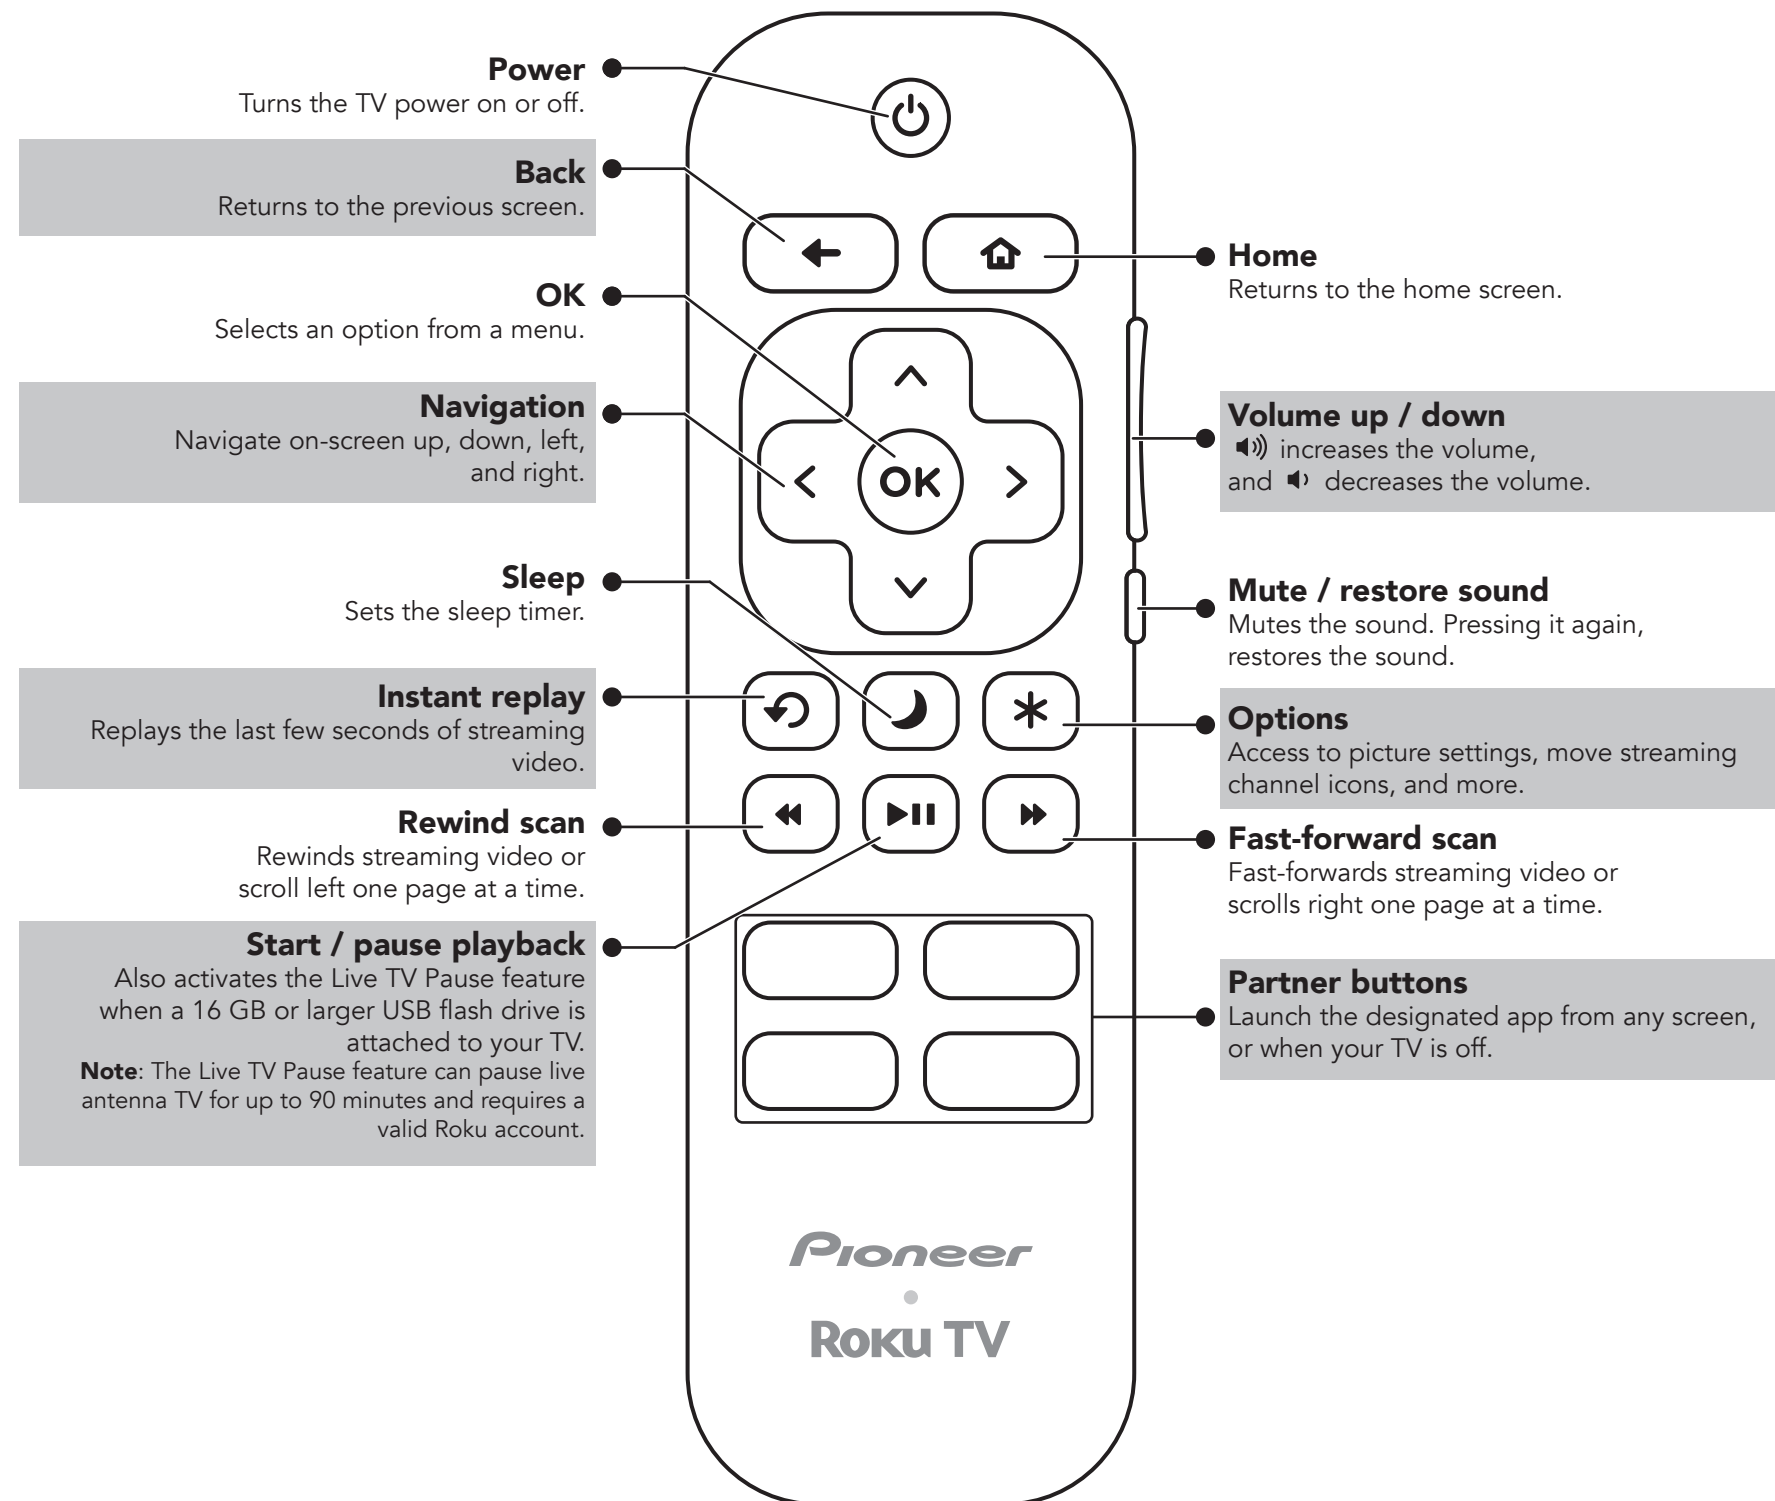

Access the Pioneer TV User Guide

Access the online *User Guide*. Go to www.usca.pioneer-tv.com and search for your model number. Many questions regarding parts, service, and warranties can be answered by visiting the Support section of our website: www.usca.pioneer-tv.com.

Access the Roku TV User Guide

Visit go.roku.com/tvmanual for details.

Contact Pioneer TV Customer Support Center:

1-888-287-7658 (U.S. or Canada)

One-Year Limited Warranty

Visit www.bestbuy.com for details.

Need Additional help?

Check out our Support Community at www.bestbuy.com for helpful information from other Pioneer TV owners.

We're Here For You

www.bestbuy.com

For customer service, call: 1-877-467-4289 (U.S./Canada)



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress, and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 1992-2019 Dolby Laboratories. All rights reserved.

PIONEER and the Pioneer logo are registered trademarks of Pioneer Corporation, and are used under license.

Not all apps and content available in LED TV (UHD).

Roku, Roku TV, the Roku logo, and the purple d-pad design are the trademarks or registered trademarks of Roku, Inc. in the United States and other countries. All other trademarks and logos herein are the property of their respective owners.

Distributed and warranted by Best Buy Purchasing LLC
7601 Penn Avenue South, Richfield, MN 55423 USA
©2025 Best Buy. All rights reserved.