 


## 6. Connect Speakers or Headphones

Connect your speakers or headphones to the projector's audio output port, using a 3.5mm cable. Adjust the volume as needed.

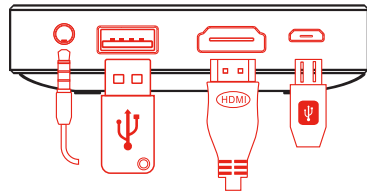

## 7. Insert MicroSD™ Card or USB Drive

Slide the microSD™ card into the microSD™ card slot until it clicks into place. If using a USB drive, insert it into the USB input.



## OPERATION

### 1. Turn on the Projector

Press and hold the power button to turn on the projector.

### 2. Playing a Video File

- A. After turning on the projector, you will be prompted to select either Movies or Images.

5

- B. Tap the Confirm button to gain access to the control panel, then use the confirm button to select Movies
- C. You will then be prompted to select either USB or MicroSD™. Use the ◀ ▶ buttons to highlight the format you wish to access. Then tap the confirm button to select.
- D. Use the ◀ ▶ buttons to cycle through the list of files. Select the file you wish to play with the confirm button.

### 3. Video Controls

Before you can use the control panel, you must always tap the confirm button to make it appear first.

Pause: Tap the confirm button.

Fast Forward: Tap the ▶ button. Each tap will increase the speed by x2, x4, x8, and x16.

Rewind: Tap the ◀ button. Each tap will increase the speed by x2, x4, x8, and x16.

 
Exit: Tap the ↺ button to return to the video file list. Tap this button again to return to the main menu.

Volume Control: Tap the 🔊 button. Then use the ◀ and ▶ buttons to increase or decrease the volume.

6

### 4. Playing a Photo File

- A. After turning on the projector, you will be prompted to select either Movies or Images.
- B. Tap the confirm button to gain access to the control panel.
- C. Use the ▶ to highlight the Images option. Then use the confirm button to select Images.
- D. You will then be prompted to select either USB or MicroSD™. Use the ◀ ▶ buttons to highlight the format you wish to access. Then tap the confirm button to select.
- E. Use the left and right buttons to cycle through the list of files. Select the file you wish to play with the confirm button.

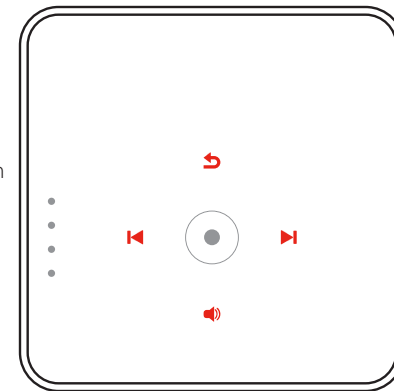

7

### 5. Photo Controls

When playing a photo file, the projector will automatically enter slideshow mode. While in this mode, each photo in the file list will automatically play in order.

Pause Slideshow: Tap the confirm button.

Resume Slideshow: Tap the confirm button.

Play Next Image: Tap the ▶ button.

Play Previous Image: Tap the ◀ button.

## CUSTOMER SERVICE

kodak@camarketing.com  
844-516-1539

8

# KODAK Pocket Portable Projector

## Quick Start Guide

 


FEATURES

Top View


Control Panel Buttons

- A. Back / Exit
- B. Confirm / Play / Pause
- C. Right / Fast-Forward / Volume+
- D. Left / Rewind / Volume-
- E. Volume
- F. Power Indicator

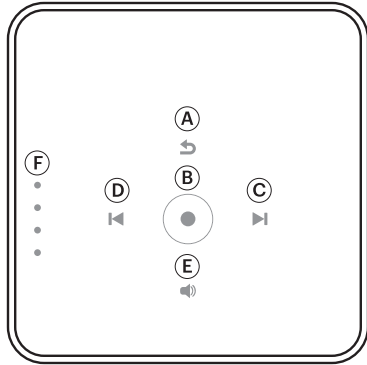


Front View

 - 1. Lens
- 2. Speaker



Rear View

 - 1. Audio Output
- 2. USB Input / Power Out
- 3. HDMI® Input
- 4. DC Input




Right Side

- 1. Power Button
- 2. Focus Wheel




Left Side

 - 1. MicroSD™ Slot
- 2. Air Outlet Vent



Bottom View

 
- 1. Air Inlet Vent
- 2. Tripod Dock
- 3. Rating Label
- 4. Non-Slip Feet

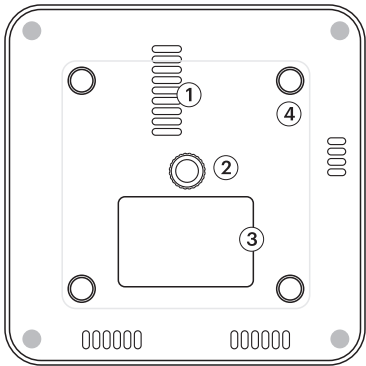

SETUP

1. Charge the Projector

 - A. Connect the adapter to the micro USB port of the projector, using the included power cord.
- B. Plug the adapter into an outlet or other power source.
- C. You may now use the projector.
- D. While plugged in, the projector's battery will automatically charge. It is recommended that you allow the projector to charge for at least 4 hours before using it in battery mode for the first time.

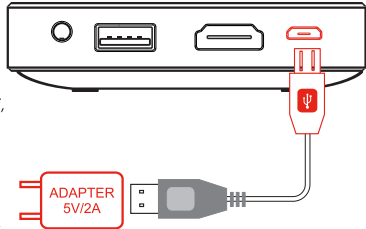

2. Turn on the Projector

Press and hold the power button for 5 seconds to turn on the projector.

3. Adjust Screen Size

The screen size will increase or decrease as the projector is brought closer or further from the wall.

4. Adjust the Focus Wheel


Open a still image and carefully rotate the focus wheel until the image is clear.

5. Connect to a an External Device

Your projector can be connected to a variety of external devices using the included HDMI® cable. Compatible devices include laptops, smartphones, tablets, gaming devices, and more.

- A. Connect one end of the HDMI® cable to the projector.
- B. Connect the other end of the HDMI® cable to the external device.

**NOTE:** Some devices may require an adapter in order to connect to the projector. Check the table in the online user manual if using a device that is not HDMI® compatible.

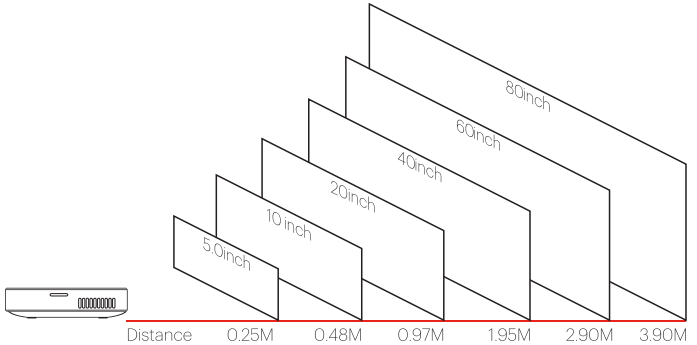

[www.kodakphotoplus.com](http://www.kodakphotoplus.com)

Distributed by: C&A Marketing, Inc., 114 Tived Lane East, Edison, NJ 08837 USA; C&A Marketing UK LTD, 167 Hermitage Road, Crusader Industrial Estate, London N4 1LZ, UK ©2017, C&A Marketing LTD. All Rights Reserved. Made in China.

The Kodak trademark, logo and trade dress are used under license from Kodak.

SD is a trademark of SD-3C LLC in the United States, other countries or both. HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC in the United States and/or other countries. The USB Trident Logo is a registered trademark of USB Implementers Forum, Inc. in the United States and/or other countries. All other products, brand names, company names and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to connote any sponsorship, endorsement or approval.

