

QUICK SETUP GUIDE

Refrigerator Filter

NS-LGLT1000P531

Before using your new product,
please read these instructions to prevent any damage.

PACKAGE CONTENTS

- Refrigerator water filter
- Quick Setup Guide

COMPATIBILITY

Works with LG® and Kenmore® refrigerator models: LMXS30796S, LMXS30796D, LMXC23796S, LMXC23796D, LFXS30796S, LFXS30796D, LMXS28626D, LFXC24796D, LFXC24796S, LSXC22396S, LSXS26396S, LSFXC2496D, LSXC22396D, LMXS28626S, LFXS28968, LMXS28626, LFXS28566, LMXS28636, LFXS28968S, LFXS28566M, LMXS28636S, LFXS28968D, LFXS28566S, LFXS28566D, LSFXC2496S, LFXC22596S, LFXS26596M, LFXS28596D, LFXS26566M, LFXS26973D, LFCC22426S, LFXC22526S, LFCS28768S, LSXS26336S, LFXS26566S, LFXS26973S, LFXS26596S, LFXS28596M, LFXS28596S, LMXC23796M, and LFXS27466S

FEATURES

- NSF 42 and 53 certified to remove contaminants, including chlorine, cysts, lead, mercury, carbofuran, benzene, and endrin
- Lasts up to six months or 200 gallons (757 L)
- Eliminates cloudiness for fresh, clear drinking water

INSTALLING YOUR WATER FILTER

- 1 Shut off the water supply, then turn off the water shutoff valve on your refrigerator. Locate the filter holder in your refrigerator.

Side door filter:

- 2 Lift up and remove the lower bin door.
- 3 Swing the right end of the old filter out of the compartment and then hold and rotate the filter counterclockwise to remove it from the filter head.
- 4 Insert the new filter into the filter head and rotate it clockwise.
- 5 Swing the filter back into the compartment.
- 6 Replace the lower bin door.

OR

Upper corner filter:

- 2 To open the filter cover, push in where indicated and the cover will drop down.
- 3 Remove the old filter by slowly rotating it counterclockwise. A small amount of water may drip down.
- 4 Insert the new filter into the water filter holder.
- 5 Slowly turn the new filter clockwise until it stops. The filter will click and lock into place.
- 6 Close the filter cover.

- 7 Turn on the the water supply and run water through the dispenser for about five minutes at 0.5 gpm (about 2.5 gallons or 9.5 L) to remove any trapped air and clear the system.

CAUTION: This filter should not be used with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system.

- 8 Open the refrigerator door and make sure that no water leaks from the new filter.

Note: If leaks occur, repeat the installation steps. If leaks persist, discontinue use and call customer service.

WARNING: To reduce the risk of property damage due to water leakage, this filter MUST be installed in accordance with the manufacturer's specifications and instructions. This filter unit must be replaced every 200 gallons (757 L) or six months. Failure to follow instructions and operating specifications will void your warranty. Further, manufacturer assumes no responsibility or liability for damages arising out of misuse of the product.

RESETTING YOUR CHANGE FILTER INDICATOR

- **LG:** Press and hold the reset button for three seconds. If this doesn't work, see the documentation that came with your refrigerator.
- **Kenmore:** The filter reset for Kenmore refrigerators varies by model. See the documentation that came with your refrigerator.

TROUBLESHOOTING

My refrigerator is not dispensing water

- Make sure that the filter is securely connected to the filter holder. Do not use tools to tighten the filter in place.
- Make sure that the water line to the refrigerator is turned on. The valve must be completely open for the refrigerator to receive water.
- Make sure that the refrigerator door is closed or the dispenser will not work.

My water dispenser is dripping

- A few drops are normal. If the water is dripping constantly, have a service technician check your refrigerator's water valve.

My water is cloudy or contains black carbon particles

- Cloudy water is caused by microscopic air bubbles. Run two gallons (7.6 L) of water from your dispenser to clear the air bubbles out.
- Black carbon particles in the water are normal and appear with all carbon filters. Run two gallons (7.6 L) of water through your dispenser to remove loose carbon particles.

My new filter is making noises or sputtering

- Noises and sputtering are caused by trapped air pockets. Run two gallons (7.6 L) of water from your dispenser to push the air out.
- Reinstall the new filter as instructed and make sure that the filter is securely connected to the filter holder. Do not use tools to tighten the filter in place.

My water tastes bad

- If you do not use your water dispenser for more than four days, run two gallons (7.6 L) of water through the dispenser before using it.
- Make sure that you replace your filter every six months to prevent bacteria growth.

SUBSTANCE REDUCTION

The system has been tested and certified by the NSF International according to NSF/ANSI Standards 42 and 53 for the reduction of the substances listed below. The concentration of the indicated substances in water entering the system was reduced to a concentration less than or equal to the permissible limit for the water leaving the system, as specified by NSF/ANSI Standards 42 and 53. While testing was performed under standard laboratory conditions, actual performance may vary.

PERFORMANCE DATA SHEET

SUBSTANCE	INFLUENT AVERAGE	NSF SPECIFIED CHALLENGE CONCENTRATION	AVE. % REDUCTION	AVERAGE PRODUCT WATER CONCENTRATION	MAX. PERMISSIBLE PRODUCT WATER CONCENTRATION	NSF REDUCTION REQUIREMENTS	NSF TEST REPORT
Chlorine, Taste, and Odor	2.1 mg/L	2.0 mg/L ± 10%	97.0%	0.05 mg/L	N/A	≥50%	J-00356469
Benzene	15 ug/L	15 ug/L ± 10%	96.6%	0.5 ug/L	0.5 ug/L	N/A	J-00268283
Carbofuran	73 ug/L	73 ug/L ± 10%	98.4%	2 ug/L	40 ug/L	N/A	J-00268284
Lead (pH 8.5)	140 ug/L	140 ug/L ± 10%	99.6%	0.5 ug/L	10 ug/L	N/A	J-00268279
Lead (pH 6.5)	140 ug/L	140 ug/L ± 10%	99.6%	0.5 ug/L	10 ug/L	N/A	J-00268280
Cyst	120,000 oocysts/L	minimum 50000 oocysts/L	>99.99%	1 oocysts/L	N/A	≥99.95%	J-00263594
Endrin	6 ug/L	6 ug/L ± 10%	93.6%	0.3 ug/L	2 ug/L	N/A	J-00296278
Mercury (pH 8.5)	6 ug/L	6 ug/L ± 10%	92.3%	0.5 ug/L	2 ug/L	N/A	J-00326152
Mercury (pH 6.5)	6 ug/L	6 ug/L ± 10%	93.8%	0.3 ug/L	2 ug/L	N/A	J-00268282

STORAGE & MAINTENANCE

- Replace your filter every six months or two hundred gallons (757 L) to prevent bacteria and fungus growth in your filter, supply lines, and storage tank.
- Stored filters do not expire. Keep your unused filters in a cool, dark, and dry place until you need them.
- If you do not use your water dispenser for more than four days, run two gallons (7.6 L) of water before using it to prevent bad tasting water.

SPECIFICATIONS

- **Temperature:** 33~100° F (0.6~38° C)
- **Pressure:** 20-100 psi (140-689kPa)
- **Capacity:** 200 gal (757 L)
- **Flow rate:** 0.5 gpm (1.9 lpm)

CERTIFICATIONS



Tested and Certified by NSF International against NSF/ANSI Standards 42 and 53 in Model EFF-6046S for the reduction of the claims specified on the Performance Data Sheet.

Replacement Cartridge NO: NS-LGLT1000P531
NSF System NO: EFF-6046S

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)
www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies. Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A. ©2019 Best Buy. All rights reserved.