

cricket

Clear and Simple Quick Start Guide

ZTE GRAND™ X 3

ZTE

More information

On the web

Detailed support information, including device specifications and troubleshooting, is available at www.cricketwireless.com/support/devices.

On the phone

• Call Customer Care at **1-855-246-2461** or
• Dial **611** from your cell phone.

Accessories

For more information concerning accessories, please visit your local Cricket store location or go to www.cricketwireless.com/shop/accessories.



Note: Store and online inventories may vary.

Product meets FCC Radio Frequency Exposure Guidelines—FCC ID SRQ-2959. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. © 2016 Cricket Wireless LLC. All rights reserved. Cricket and the Cricket logo are registered trademarks under license to Cricket Wireless LLC. Other marks are the property of their respective owners. microSDHC logo is a trademark of SD-3C, LLC. The **Bluetooth®** word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Manufactured under license from Dolby Laboratories. Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories. Qualcomm and Snapdragon are trademarks of Qualcomm Incorporated, registered in the United States and other countries. Used with permission.

© 2016 ZTE CORPORATION. All rights reserved. No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation. The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.


Getting to know your ZTE Grand™ X 3




*Customizable. See Touch screen panel.

Phone setup


1. Place your finger in the slot at the bottom of the phone to lift and remove the cover.

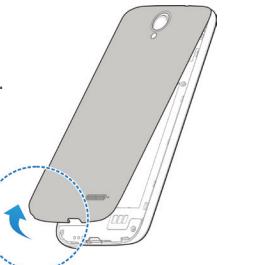

2. Insert the nano-SIM card with the cut corner first and the gold-colored contacts facing down.

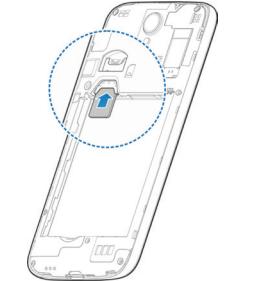

3. Insert a microSDHC™ card (not included) with gold-colored contacts facing down.

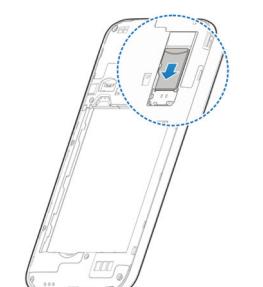


4. Replace the battery and back cover.



Text and picture messaging


Send a text message

- From the home screen, tap **Messaging**.
- Tap **New message** to start a new text message.
- In the **To** field, enter a number or a contact name or tap **Contacts** to access your contacts.
- Tap the **Type message** field and enter your message.
- Tap **Send** to send the message.

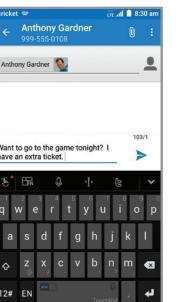

Send a picture message

- Follow steps 1-4 above.
- Tap the **Paperclip**.
- Tap **Picture** and select desired picture.
- Tap **Send** to send the message.

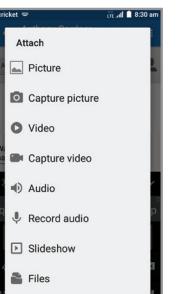

Email

Email setup (Gmail™, Yahoo®, etc.)

- From the home screen, tap **Apps** > **Email**.
- Select an account type, enter your email address and password, and then tap **Next**.
- Confirm email account settings and tap **Next**.
- Name the account, enter your name as it will appear on outgoing messages, and tap **Next**. Your email will begin to synchronize with your phone.



Note: To set up corporate email, contact your IT administrator.


Create and send an email message

- From the home screen, tap **Apps** > **Email**.
- To compose a new message, tap **Compose**.
- Tap the **To** field and enter email address or name or tap **Contacts** to access your contacts.
- Enter a subject and email message.
- To attach files to the email message, tap **Menu**, then tap **Attach file** and make your selection.
- Tap **Send** to send the message.

Touch screen


Navigating your phone

- Use your fingertip to lightly touch the screen.
- Use quick flicks of your finger on the touch screen to swipe up, down, left, and right.
- Spread two fingers apart or pinch them together on the screen to zoom in or out on a web page or a Gallery image.
- To return to the previous screen, tap the **Back key**.
- Tap the **Home key** at any time to return to the main home screen. Press and hold the **Home key** to access Google Search.
- Tap the **Recent Apps key** to access recently viewed apps.
- Tap **Apps** to access applications on your phone.
- To exchange the positions of the **Back key** and **Recent apps key**, tap **Home** > **Settings** > **Navigation key** and select an option.

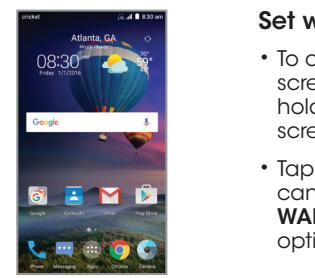

Notifications panel

- Tap the top of the screen and drag your finger down to see the Notifications panel.
- Tap **▼** to expand the quick settings menu.
- Tap **□** to access the Battery settings screen.
- Tap **⚙** to access the settings menu.
- Tap **👤** to view your personal and guest user information.
- Swipe right or left to clear individual notifications or tap **X** to clear all.

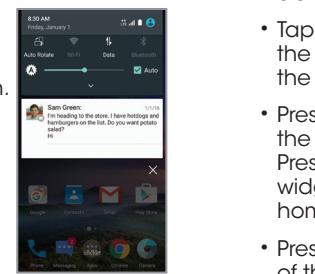

Personalize

Set wallpaper

- To change your home or lock screen wallpaper, press and hold a blank part of the home screen and tap **Wallpapers**.
- Tap a wallpaper to set it. You can also tap **GALLERY** or **LIVE WALLPAPER** for additional options.



Add to home screen


- Tap **Apps**, press and hold the desired app, and drag it to the home screen.
- Press and hold a blank part of the screen and tap **Widgets**. Press and hold the desired widget and drag it to the home screen.
- Tap the **Recent Apps key** to access recently viewed apps.
- Tap **Apps** to access applications on your phone.
- Press and hold a blank part of the screen and then tap **Themes** or **Effects** to change the theme or home screen transition effect.



Calls and voicemail

Make a call

- From the home screen, tap **Phone**.
 - Type the name or phone number of a contact in the search box at the top of the screen.
- Or, tap **...** and enter a phone number. Tap the matching contact or tap **Call** to place the call.

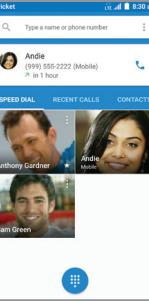

Check voicemail

- From the home screen, tap **Phone**, then tap **...**.
- Press and hold the **1 key**.
- Follow voice prompts to listen to messages.



Use call waiting

Call waiting helps you answer or hold a call while you are on an existing call.

- While on a call, you will hear a tone if another call comes in. Tap **Hold current and answer**.
- Tap **...**, then tap **...** to merge calls or tap **...** to switch between active calls.



Camera and video


Take a picture

- From the home screen, tap **Camera**.
- Note: You have a choice of 3 different modes (AUTO, FUN, and MANUAL) that offer options for every type of photographer – see user manual for additional details.



Connect to a Bluetooth headset


- From the home screen, tap **Apps** > **Settings** > **Bluetooth**.
- Tap **...** to turn **Bluetooth** on.

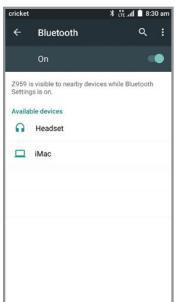

Bluetooth® and Wi-Fi®

Cricket Services

These services make using Cricket even better and easier.

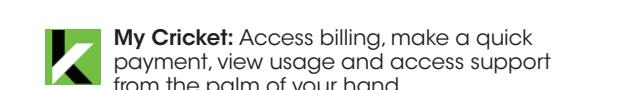

My Cricket: Access billing, make a quick payment, view usage and access support from the palm of your hand.



Visual Voicemail: Quickly view, access and play back your voicemail messages. Easily save important numbers to your Favorites list and respond to messages by calling back or texting.




Deezer: Listen on-the-go with ad-free streaming music, download your favorites to your phone, and get customized playlists based on your preferences.

Additional Value Added Services

AskMD®: This app is more than just a symptom checker. It's a personalized health consultation that helps identify what's bothering you and gets you organized around your health, enabling you to have a better doctor's visit and ultimately get healthier.

Selfie: Take selfies quickly and easily. Access the front-facing camera from the lock screen or from the Apps menu to capture the moment instantly without switching between camera modes.

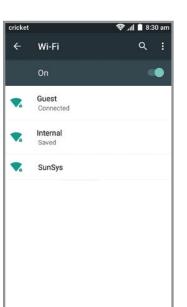

- From the home screen, tap **Apps** > **Settings** > **Wi-Fi**.
- If Wi-Fi is off, tap **...** to enable it.

- Tap a network name. Enter a password if required and then tap **CONNECT**.



Take a video

- Tap **...** > **VIDEO** to adjust your camcorder settings.
- In camera mode, tap **Start recording** to start and tap **Stop recording** to stop recording video.



- From the home screen, tap **...** > **...**.
- Tap an album and then tap a photo or video.
- Tap **...** > **Share** and select an option for sharing.

Please don't text and drive.

Cambio de idioma

1. Desde la pantalla principal, toca **Apps (Aplicaciones)**.
2. Toca **Settings (Configuración)** y después toca **Language & input (Teclado e idioma)**.
3. Toca **Language (Idioma)**.
4. Toca el idioma que te gustaría usar.






Conoce tu ZTE Grand™ X 3



*Personalizable. Ver el panel de la Pantalla táctil.










Configuración del teléfono

1. Coloca tu dedo en la ranura que se encuentra en el extremo inferior del teléfono para levantar y quitar la tapa.
2. Inserta la tarjeta nano-SIM con la esquina cortada primero y los contactos dorados hacia abajo.
3. Inserta la tarjeta microSDHC™ (no incluida) con los contactos dorados hacia abajo.
4. Vuelve a colocar la batería y la tapa trasera.

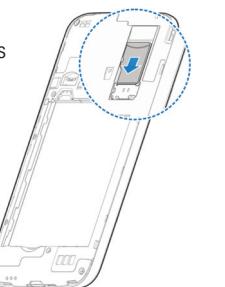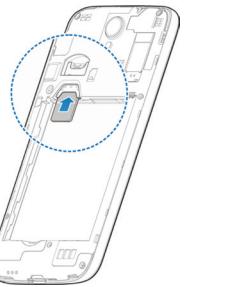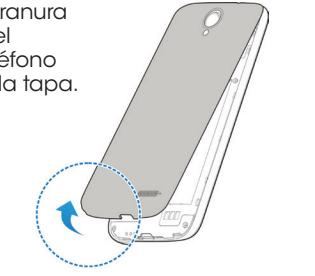

Pantalla táctil

 


- Para navegar tu teléfono**
- Usa la punta de tus dedos para tocar ligeramente la pantalla.
 - Con movimientos rápidos en la pantalla táctil, desliza tu dedo hacia arriba, abajo, la derecha y la izquierda.
 - Separa o junta dos dedos sobre la pantalla para agrandar o reducir una página web o una imagen de la Galería.
 - Para regresar a la pantalla anterior, toca el **Botón para volver**.
 - Toca el **Botón de inicio** en cualquier momento para regresar a la pantalla principal. Oprime por unos segundos el **Botón de inicio** para acceder a Google Search.
 - Toca el **Botón de aplicaciones recientes** para volver a las aplicaciones vistas recientemente.
 - Toca **Aplicaciones** para tener acceso a las aplicaciones en tu teléfono.
 - Para intercambiar la posición del Botón para volver y el Botón de aplicaciones recientes, toca **○** > **Widgets**. Mantén oprimida la miniaplicación que deseas y arrástrala a la pantalla principal.
 - Mantén oprimida una parte en blanco de la pantalla principal y toca **Widgets**. Mantén oprimida la miniaplicación que deseas y arrástrala a la pantalla principal.
 - Mantén oprimida una parte en blanco de la pantalla y luego toca **Tema** o **Efecto** para cambiar el tema o el efecto de transición de la pantalla principal.

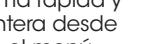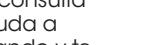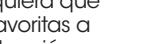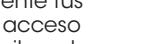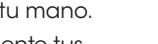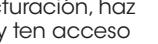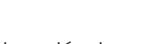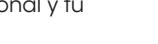

Personalización

- Para establecer el fondo de pantalla**




- Para cambiar el fondo de pantalla de la pantalla principal o la de bloqueo, oprime por unos segundos una parte en blanco de la pantalla principal y toca **Fondos de pantalla**.
- Toca un fondo de pantalla para fijarlo. También puedes tocar **GALERÍA** o **FONDO DE PANTALLA ANIMADO** para ver opciones adicionales.

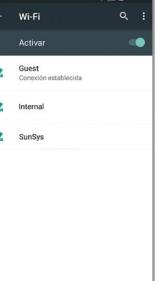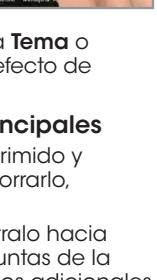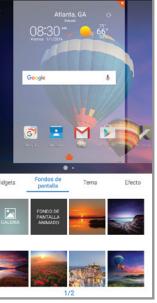


Llamadas y correo de voz

- Para hacer una llamada**

1. Desde la pantalla principal, toca **Teléfono**.
2. Escribe el nombre o número de teléfono de un contacto en el campo de búsqueda de la parte superior de la pantalla.
- O, toca **...** e ingresa un número de teléfono. Toca el contacto que coincide o toca **...** para hacer la llamada.

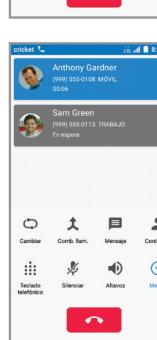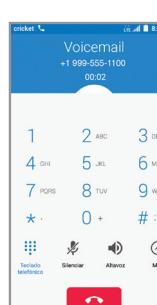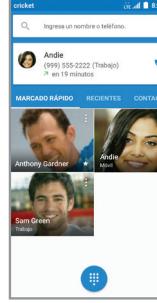

- Para revisar el correo de voz**
1. Desde la pantalla principal, toca **Teléfono**, después toca **...**.
 2. Oprime por unos segundos el **Botón 1**.
 3. Sigue las instrucciones para escuchar los mensajes.

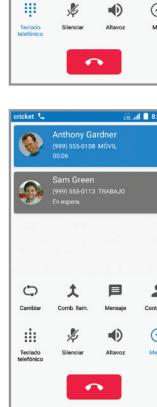

- Para usar la función de llamada en espera**
- La función de llamada en espera te ayuda a contestar o poner una llamada en espera mientras estás en otra llamada.

1. Cuando estés en una llamada, escucharás un tono en caso de que entre otra llamada. Toca **Pon. act. esper. y resp.**.
2. Toca **...**, después toca **...** para unir las llamadas o toca **...** para alternar entre llamadas activas.



Más información

En Internet

Puedes ver información detallada de ayuda, incluidas las especificaciones del teléfono e información sobre el diagnóstico y solución de problemas en www.cricketwireless.com/support/devices (en inglés).

En el teléfono

- Llama al servicio al cliente al **1-855-246-2461** o
- Marca **611** desde tu teléfono móvil.

Accesorios

Para más información con respecto a los accesorios, visita la tienda local de Cricket o www.cricketwireless.com/shop/accessories (en inglés).



Importante: los inventarios de la tienda y por Internet pueden variar.

El producto cumple con las Pautas sobre la Exposición a la Electromagnetismo de la FCC ID SRQ-2959. Este teléfono cumple con la Parte 15 de las Reglas de FCC. La operación está sujeta a las siguientes dos condiciones: (1) este teléfono no puede ocasionar interferencia perjudicial, y (2) este teléfono debe aceptar cualquier interferencia recibida, incluyendo interferencia que pueda causar una operación no deseada.

© 2016 Cricket Wireless LLC. Todos los derechos reservados. Cricket y el logotipo de Cricket son marcas comerciales registradas con licencia de Cricket Wireless LLC. Las demás marcas son propiedad de sus respectivos dueños. El logotipo de microSDHC es una marca comercial de SD-3C, LLC. La marca y los logotipos Bluetooth® son marcas registradas de Bluetooth SIG, Inc. Fabricado con la licencia de Dolby Laboratories. Dolby Audio y el símbolo de la doble D son marcas comerciales de Dolby Laboratories LLC. Qualcomm y Snapdragon son marcas registradas de Qualcomm Incorporated, registradas en los Estados Unidos y otros países. Usado con permiso.

© 2016 ZTE CORPORATION. Todos los derechos reservados. No se puede extraer, reproducir, traducir ni utilizar ninguna parte de esta publicación de ninguna forma ni por ningún medio, electrónico ni mecánico, incluidas las fotocopias y el microfilm, sin el permiso previo de ZTE Corporation. El manual es publicado por ZTE Corporation. Nos reservamos el derecho de hacer modificaciones en los errores impresos o actualizaciones sin aviso previo.

079584507709


Micro-USB
DOLBY
AUDIO

Impreso en China

Mensajes de texto y con imágenes

Para enviar un mensaje de texto

1. Desde la pantalla principal, toca la aplicación de **Mensajería**.
2. Toca **Mensaje nuevo** para comenzar un nuevo mensaje de texto.
3. En el campo **Para**, ingresa un número o el nombre de un contacto, o toca **Contactos** para tener acceso a tus contactos.
4. Toca el campo **Escribir mensaje** e ingresa tu mensaje.
5. Toca **Enviar** para enviar el mensaje.

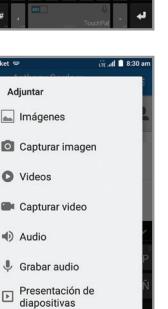

No envíes mensajes de texto mientras conduces.

Correo electrónico

Configuración de correo electrónico (Gmail™, Yahoo!, etc.)

1. Desde la pantalla principal, toca **Aplicaciones** > **Correo**.
2. Selecciona un tipo de cuenta, ingresa la dirección de correo electrónico y la contraseña y luego toca **Siguiente**.
3. Confirma la configuración de la cuenta de correo electrónico y toca **Siguiente**.
4. Nombra la cuenta, escribe tu nombre como aparecerá en tus mensajes de salida y luego toca **Siguiente**. Tu correo electrónico empezará a sincronizarse con tu teléfono.
- Importante: para establecer un correo electrónico corporativo, comunícate con tu administrador de informática.
5. Toca el campo **Adjuntar imágenes** y selecciona la imagen deseada.
6. Toca **Enviar** para enviar el mensaje.



Servicios de valor añadido

Servicios de Cricket

¡Estos servicios hacen que usar Cricket sea aún mejor