


INSIGNIA™

Universal Swivel TV Base

NS-HTMS1

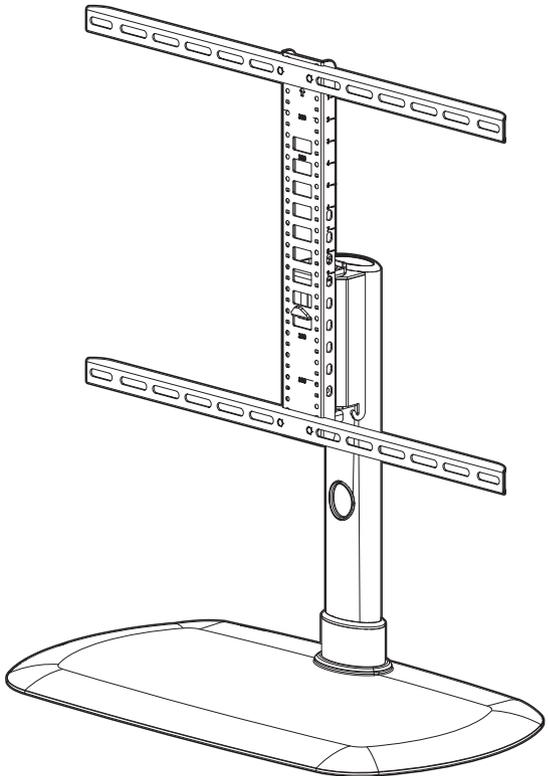

Before using your new product, please read these instructions to prevent any damage.

Contents

Introduction	2
IMPORTANT SAFETY INSTRUCTIONS	2
Features	3
Dimensions	4
Tools needed.....	4
Package contents	5
Parts.....	5
Hardware	6
Assembly instructions	7
Specifications	21
ONE-YEAR LIMITED WARRANTY	22

Introduction

Congratulations on your purchase of a high-quality Insignia product. Your NS-HTMS1 represents the state of the TV stand design and is designed for reliable and trouble-free performance.

IMPORTANT SAFETY INSTRUCTIONS

Please read through these instructions completely to be sure you're comfortable with this easy install process. Also check your TV owner's manual to see if there are any special requirements for mounting your TV.

If you do not understand these instructions or have doubts about the safety of the installation, assembly, or use of this product, contact Customer Service.

- 

• **CAUTION:** Avoid potential personal injuries and property damage! Manufacturer is not responsible for damage or injury caused by incorrect assembly or use.
- 

• **WARNING:** Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of the display (including accessories) does not exceed 60 lbs. (27.2 kg). Use with heavier televisions may result in instability causing tip over resulting in death or serious injury!
- 

• **WARNING:** Use this mounting system only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- 

• **WARNING:** Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over onto the child.



- **WARNING:** Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or overturning onto a child.

Note: This product has no user serviceable parts.


SAVE THESE INSTRUCTIONS

Features

- Supports TVs 32–65" (81–165 cm) and up to 60 lbs (27.2 kg)
- Side-to-side swivel and 8" (20 cm) height adjustment to position your TV at the perfect viewing angle
- Extra space below your TV to place a soundbar or other devices
- Integrated cable management keeps cords organized
- Compatible with VESA patterns from 75 × 75 up to 600 × 400 with all common sizes in between
- Full assortment of mounting hardware included to mount a wide range of TVs


Note: This TV base cannot be used to mount a TV on a wall.

Dimensions

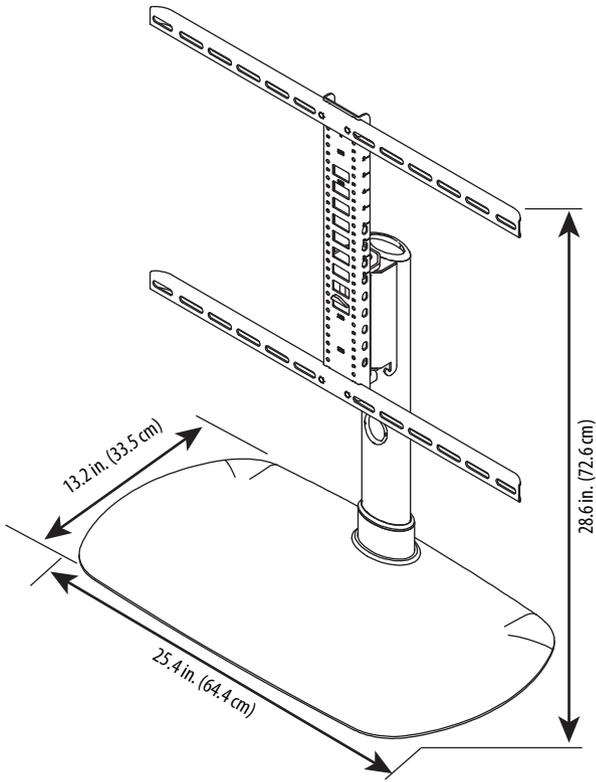


Tools needed

You need the following tools to assemble your new TV stand:

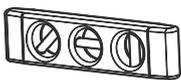

Level

 


Phillips screwdriver


Package contents

Make sure that you have all the parts and hardware needed to assemble your new TV stand.

Parts

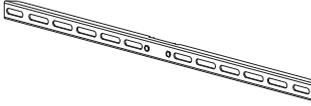

01 - Horizontal bracket (2)

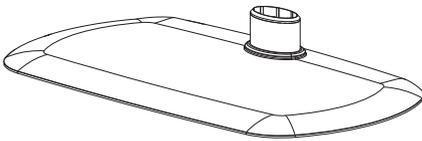

17 - Base



14 - Vertical bracket



16 - Post

Hardware


HARDWARE	#
<p>Spacer (2.5 mm)</p>	8
<p>Spacer (22 mm)</p>	4
<p>M4 washer</p>	4
<p>M6/M8 washer</p>	4
<p>M4 x 12 mm screw</p>	4
<p>M6 x 12 mm screw</p>	4
<p>M8 x 16 mm screw</p>	4

HARDWARE	#
<p>M8 x 25 mm screw</p>	4
<p>M4 x 35 mm screw</p>	4
<p>M6 x 35 mm screw</p>	4
<p>M8 x 35 mm screw</p>	4
<p>M8 x 50 mm screw</p>	4
<p>Interface screw (10-32 x 3/8 in.)</p>	4
<p>Lock screw (1/4-20 x 3/8 in.)</p>	4


Assembly instructions

Step 1 – Determine whether your TV has a flat back or an irregular or obstructed back


- 1 Carefully place your TV face-down on a cushioned, clean surface to protect the screen from damages and scratches.
- 2 Temporarily lay the horizontal brackets (01) on the back of your TV.
- 3 Align the screw holes in the brackets (01) with the mounting screw holes on your TV.
- 4 Identify which type of back your TV has:
 - **Flat back:** The brackets lay flush against the back of your TV and do not block any jacks. You do not need spacers when assembling your stand.

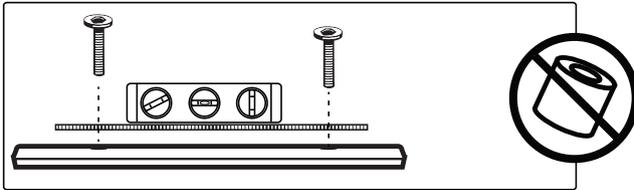

- **Obstructed back:** The brackets (01) block any of the jacks on the back of your TV. You need the spacers (22 mm or 2.5 mm) when assembling your stand.

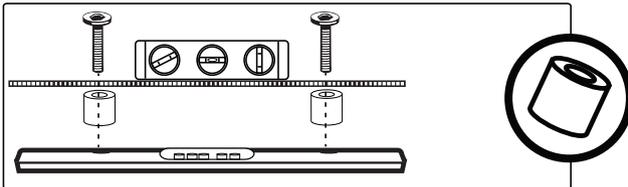

- **Irregularly-shaped back:** There is a gap between the brackets (01) and some part of the back of your TV. You need the spacers (22 mm or 2.5 mm) when assembling your stand.

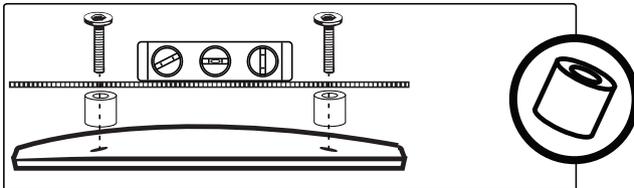

- 5 Remove the brackets (01).

Step 2 – Select screws, washers, and spacers

- 1 Select the hardware for your TV (screws, washers, and spacers). A limited number of TVs come with mounting hardware included. (If screws came with your TV, they are almost always in the holes on the back of your TV.) If you don't know the correct length of the mounting screws your TV requires, test various sizes by hand threading the screws.

Select the screws that fit:



M4 × 12 mm screw	M4 × 35 mm screw
M6 × 12 mm screw	M6 × 35 mm screw
M8 × 16 mm screw	M8 × 35 mm screw
M8 × 25 mm screw	M8 × 50 mm screw

Use the M4 washers with the M4 screws. Use the M6/M8 washers with the M6 or M8 screws.

For an irregular or obstructed TV back, also use the 2.5 mm spacers, 22 mm spacers or a combination of the 2.5 mm and 22 mm spacers. You can combine spacers (22 mm or 2.5 mm) for extra length.

⚠ CAUTION: To avoid potential personal injuries and property damage, make sure that the screws have adequate threads to secure the brackets to your TV. If you encounter resistance, stop immediately and contact customer service. Use the shortest screw and spacer combination to accommodate your TV. Using hardware that is too long may damage your TV. However, using a screw that is too short may cause your TV to fall from the stand.

Screw fits correctly

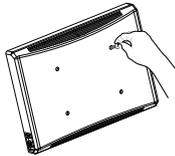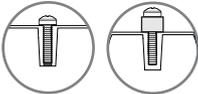

Screw is too long




Screw is too short



- 2 Remove the screws.
- 3 For a flat back TV, go to [Step 3 – Option 1: Attach the horizontal brackets to a flat-back TV](#) on page [9](#).
-OR-
For an irregular or obstructed back, go to [Step 3 – Option 2: Attach the horizontal brackets to an obstructed or irregularly-shaped TV back](#) on page [10](#).


Step 3 – Option 1: Attach the horizontal brackets to a flat-back TV

You'll need

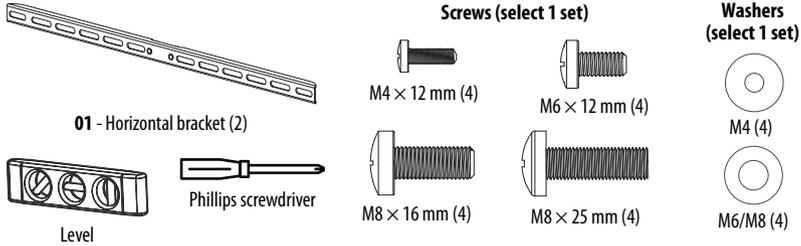

⚠ CAUTION: Avoid potential personal injuries and property damage! DO NOT use power tools for this step. Tighten the screws only enough to secure the TV bracket to your TV. DO NOT over tighten the screws.

- 1 Align the holes on the horizontal brackets (**01**) with the screw holes on the back of your TV. Make sure that the brackets are centered horizontally.
- 2 Place the washers you selected in Step 2 – Select screws, washers, and spacers over the holes in the brackets that align with the screw holes on the back of your TV, then insert the screws you selected in Step 2 – Select screws, washers, and spacers through the washers. Make sure that the horizontal brackets (**01**) are level.
- 3 Tighten the screws until they are snug against the horizontal brackets (**01**). Make sure that the horizontal brackets (**01**) are securely fastened before moving on to the next step.

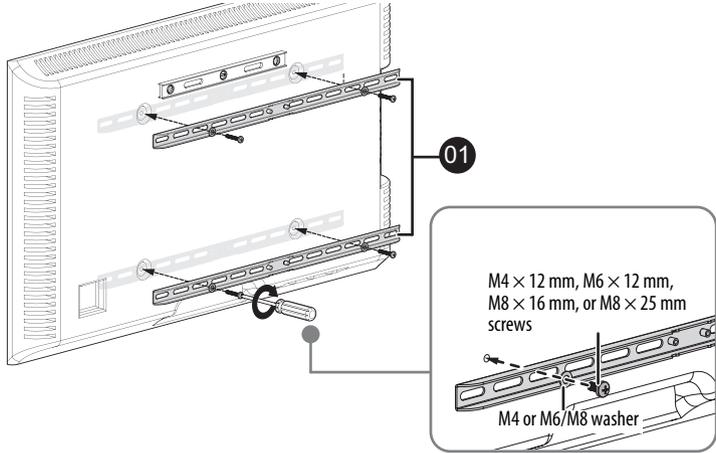


Step 3 – Option 2: Attach the horizontal brackets to an obstructed or irregularly-shaped TV back


You'll need




Screws (select 1 set)

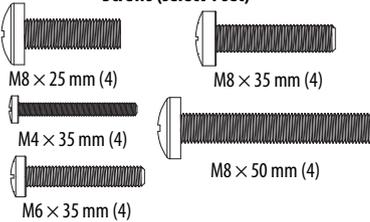


Washers (select 1 set)

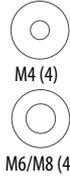

Spacers

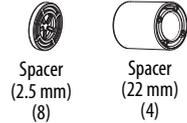


 Note: You can combine spacers for extra length.

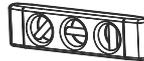

CAUTION: Avoid potential personal injuries and property damage! DO NOT use power tools for this step. Tighten the screws only enough to secure the TV bracket to your TV. DO NOT over-tighten the screws.

- 1 Place the spacers you selected in [Step 2 – Select screws, washers, and spacers](#) over the screw holes on the back of your TV.
- 2 Align the holes on the horizontal brackets (01) with the holes in the spacers. Make sure that the horizontal brackets (01) are centered horizontally.
- 3 Place the washers you selected in [Step 2 – Select screws, washers, and spacers](#) over the holes in the horizontal brackets (01) that align with the screw holes on the back of your TV, then insert the screws you selected in [Step 2 – Select screws, washers, and spacers](#) through the washers and spacers. Make sure that the horizontal brackets (01) are level.
- 4 Tighten the screws until they are snug against the brackets(01). Make sure that the horizontal brackets (01) are securely fastened before moving on to the next step.

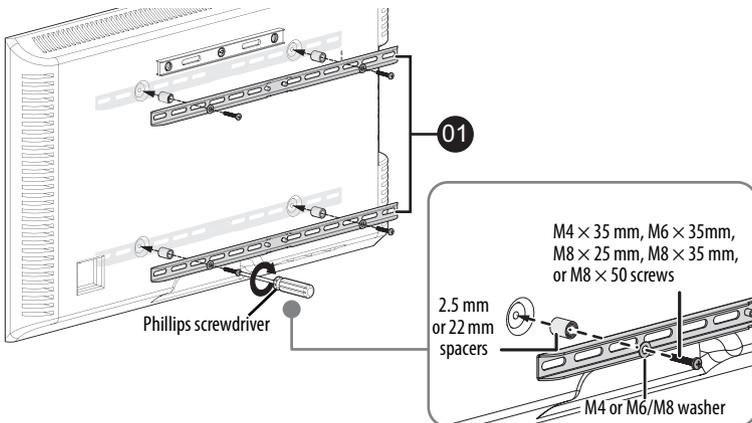

Step 4 – Attach the vertical bracket

You'll need



14 - Vertical bracket (1)





10-32 × 3/8 in.
Interface screw (4)



Phillips screwdriver

- 1 Center the vertical bracket (**14**) on the back of your TV.
- 2 Secure the vertical bracket (**14**) to the horizontal brackets (**01**) with four 10-32 × 3/8 in. interface screws.
- 3 Tighten the screws until they are snug against the vertical bracket (**14**). Make sure that all the brackets (**01** and **14**) are securely fastened before moving on to the next step.

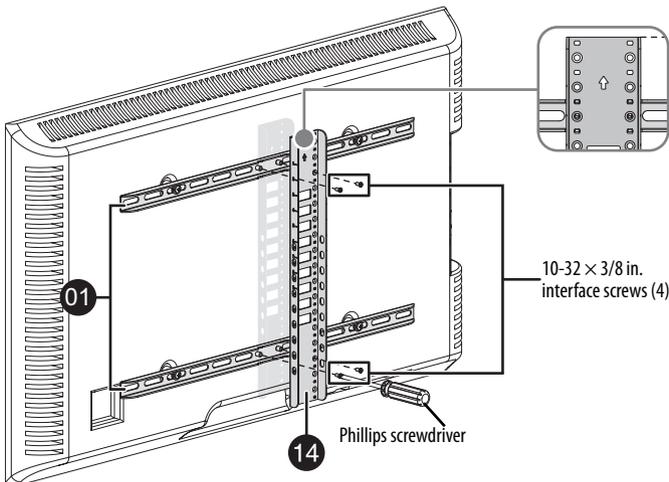

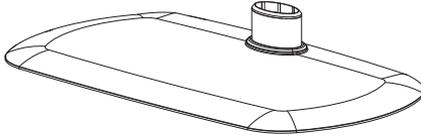Step 5 – Attach the post to the base**You'll need****16** - Post (1)**17** - Base (1)


1/4-20 x 3/8 in. Lock screw (2)




Phillips screwdriver

Note: The base (17) is made of plastic with steel structuring underneath. It has rubber feet which prevent it from sliding.

- 1 Insert the post (16) into the hole on the base (17).

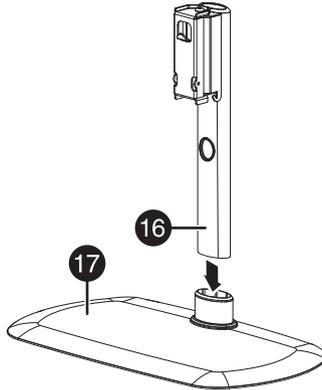

- Secure the post (16) to the base (17) with two 1/4-20 x 3/8 in. lock screws. Make sure that the post (16) is securely fastened before moving on to the next step. Do not over-tighten the screws.

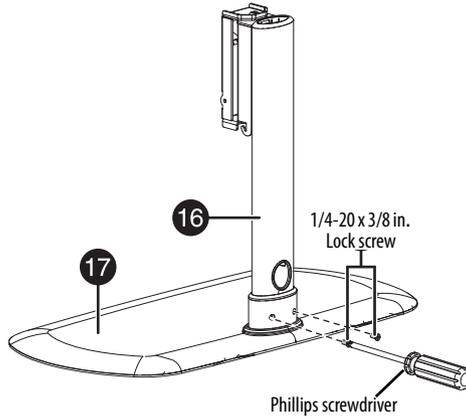

Step 6 – Attach your TV to the post

You'll need



1/4-20 x 3/8 in. Lock screw (2)




Phillips screwdriver




HEAVY! You may need assistance with this step.

- 1 Determine the height where you want to hang your TV.


Note: If you have a soundbar attached to the bottom of your TV, make sure that you select a height on the stand that allows room for the soundbar.

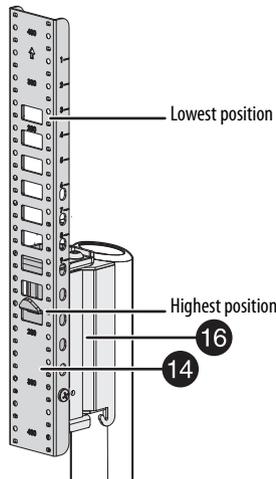


Examples of the highest and lowest hanging positions:

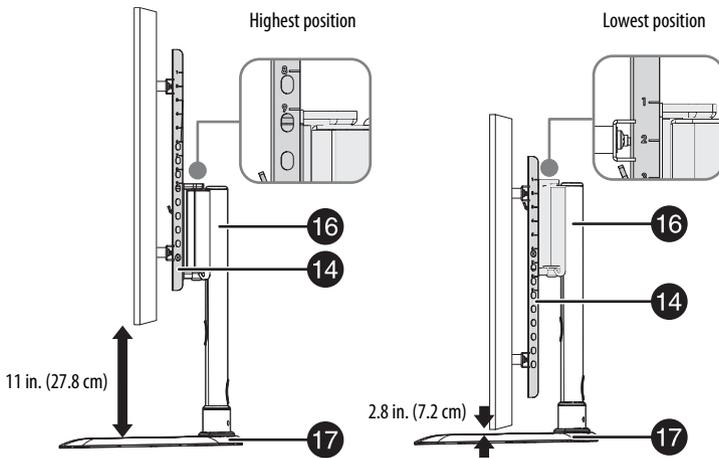

- 2 Carefully hang the TV/bracket assembly on the post (16).

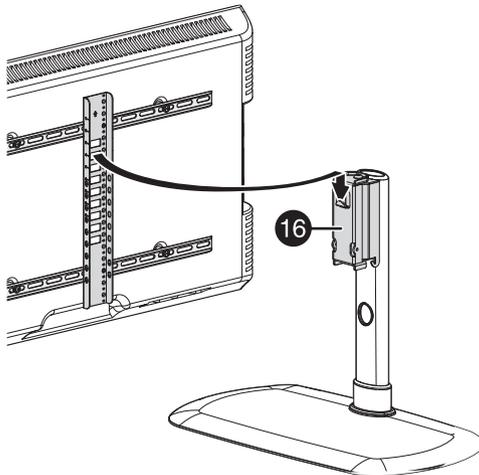


- 3 Secure the TV/bracket assembly to the post (16) with two 1/4-20 x 3/8 in. lock screws. Make sure that the assembly is securely fastened before moving on to the next step. Do not over-tighten the screws.

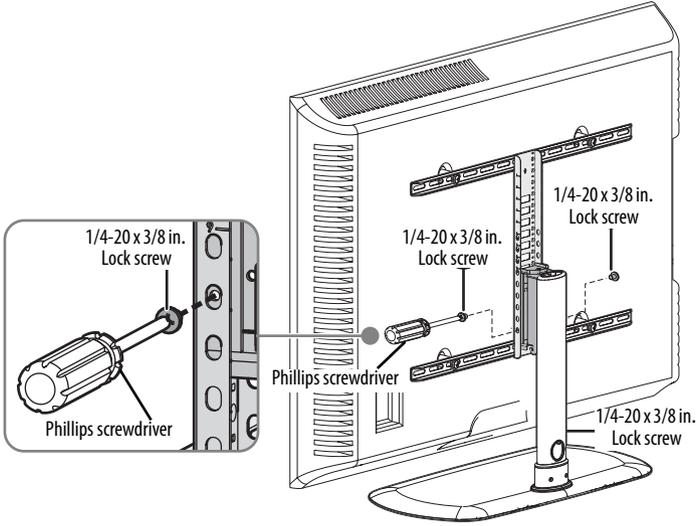


Step 7 – Manage cables

- Route your cables through the front or top opening in the post (16), then out the back.

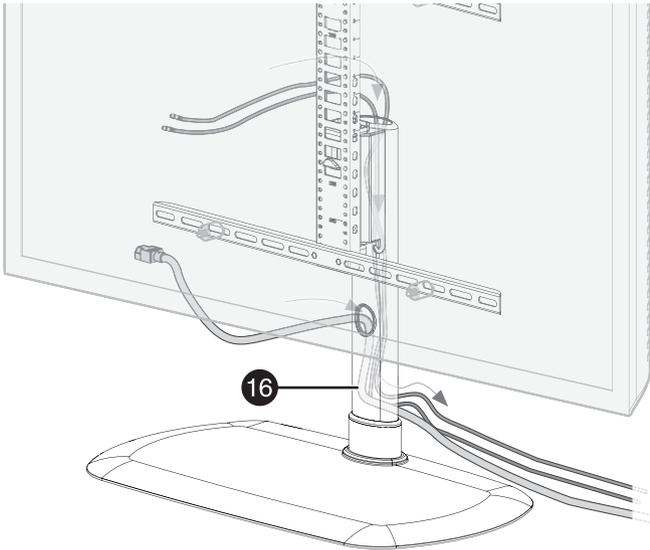

Step 8 – Adjust the TV viewing angle

- Hold the sides of your TV and swivel your TV left or right.

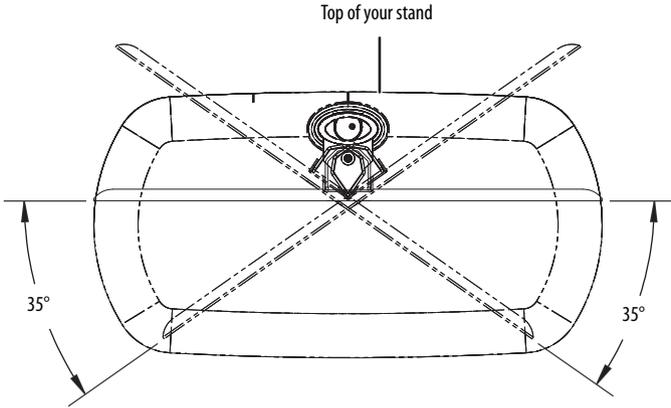

If you ever need to remove your TV from the post
You'll need




Phillips screwdriver




HEAVY! You may need assistance with this step.

- 1 Remove the two 1/4-20 x 3/8 in. lock screws that secure the TV/bracket assembly to the post (16).

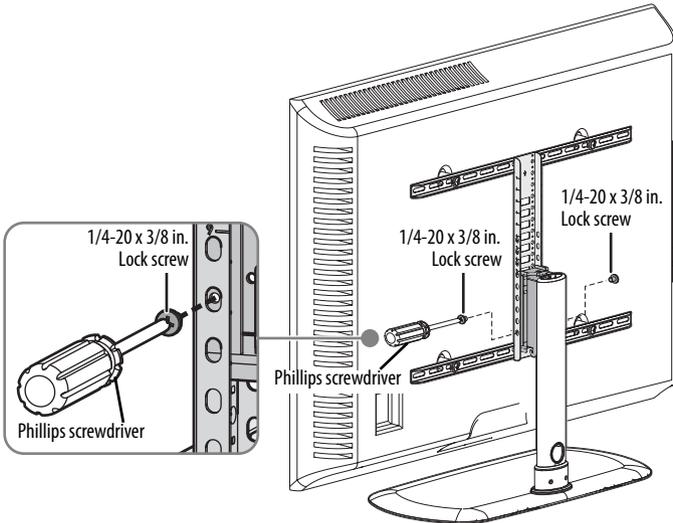

- 2 Carefully lift the assembly up and off the post (16).

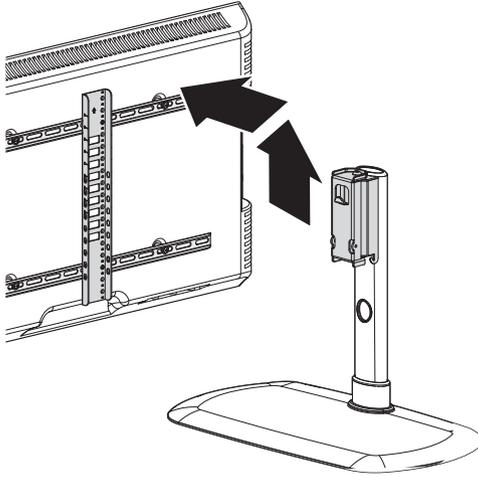

Specifications

Dimensions (W × H × D)	25.4 × 28.6 × 13.2 in. (64.4 × 72.6 × 33.5 cm)
Stand weight	17.9 lbs (8.1 kg) (including packaging)
Max. TV weight including TV accessories	60 lbs. (27.2 kg)
TV screen size	32 to 65 in.

ONE-YEAR LIMITED WARRANTY

Best Buy, or its Authorized Partner of Insignia branded products, warrants to you, the original purchaser of this new Insignia branded product ("Product"), that the Product shall be free of defects in the original manufacture of the material or workmanship for a period of one (1) year from the date of your purchase of the Product or the date of delivery (if later than the date of purchase) ("Warranty Period").

For this warranty to apply, your Product must be (i) purchased in the United States or Canada from a Best Buy branded retail store, online at www.bestbuy.com or www.bestbuy.ca, or from Best Buy's Authorized Partner, and (ii) packaged or sold with this warranty statement.

The term "Best Buy", as used in this warranty, refers to Best Buy branded retail stores, www.bestbuy.com, www.bestbuy.ca, and Best Buy's Authorized Partner.

Because Insignia cannot control the quality of products sold by unauthorized sellers, this warranty applies only to Products that were purchased from Best Buy or an Insignia Authorized Partner, unless otherwise prohibited by law. Insignia reserves the right to reject warranty claims for Products purchased from unauthorized sellers, including unauthorized websites.

REPAIR OR REPLACEMENT, AS PROVIDED UNDER THIS WARRANTY, IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESSED OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS, OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT. ALL EXPRESSED AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES, AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON (i) HOW LONG AN IMPLIED WARRANTY LASTS, (ii) EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, or (iii) LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product or the date of delivery (if later than the date of purchase). Your purchase date is printed on the receipt you received with the Product. In the event that Authorized Partner ceases to sell the covered Insignia branded product, this warranty shall terminate for that product and there shall be no repair or replacement of the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location or from a Best Buy online website (www.bestbuy.com or www.bestbuy.ca), please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased your Product from an Authorized Partner, call Insignia at 1-877-467-4289.

To obtain warranty service, in the United States and Canada call 1-877-467-4289. Call agents may diagnose and correct the issue over the phone.

If you purchased the Product from an Authorized Partner other than Best Buy, please call 1-888-BESTBUY in the United States or 1-866-BESTBUY in Canada. You will be asked to provide proof of purchase and to return your Product to Best Buy. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

Where is the warranty valid?

This warranty is valid only in the United States and Canada to the original purchaser of the product from an Authorized Partner, in the country where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Food, beverage, and/or medicine loss/spoilage.
- Damage to other products caused by a power surge or other similar issue while connected to the Product.
- Customer instruction/education.
- Installation.
- Set up adjustments.
- Cosmetic damage.
- Damage due to weather, lightning, and other acts of God, such as power surges.
- Accidental damage.
- Misuse.
- Abuse.
- Negligence.
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna.
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance.
- Connection to an incorrect voltage or power supply.
- Damage due to attempted repair by any person not authorized by Insignia to service the Product.
- Products sold "as is" or "with all faults".
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.).
- Products where the factory applied serial number has been altered or removed.
- Loss or Theft of this product or any part of the product.
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.).
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

1-877-467-4289 | www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A

©2026 Best Buy. All rights reserved.

INSIGNIA™
PART #6907-302033

www.insigniaproducts.com
1-877-467-4289



INSIGNIA is a trademark of Best Buy and its affiliated companies.
Distributed by Best Buy Purchasing, LLC
Richfield, MN 55423
©2026 Best Buy. All rights reserved.

V3 ENGLISH
26-0116