


## INCLUDED ACCESSORIES

Remote control and two AAA batteries




TV stands

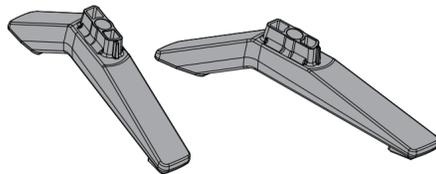

M3 screws (10 mm length) (2 pcs.)



WALL MOUNT ACCESSORIES  
M4 screws (10 mm length) (4 pcs.)

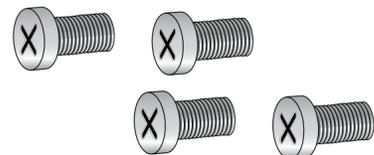

**Note:** The wall-mount screws are in the VESA mounting holes on the back of your TV.

**FIND YOUR USER GUIDE ONLINE!**  
Go to [www.insigniaproducts.com](http://www.insigniaproducts.com), then click **Support & Service**. Enter **NS-24D310NA17/ NS-24D310MX17** in the box under *Manual, Firmware, Drivers & Product Information*, then click ▶.


**STOP**  
Do not plug your power cord in until all other devices have been connected.

Before using your new product, please read these instructions to prevent any damage.


## 1 START HERE

How do I attach the stand to my TV? (not for wall mounting)  
**You'll need:** Soft surface and Phillips screwdriver

**A** Place your TV face-down on a cushioned, clean surface.

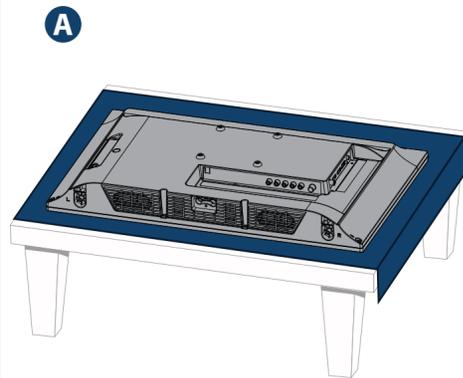

**B** Align the screw holes on the TV stands with the holes on the bottom of your TV, then secure each stand to your TV with the provided screws.

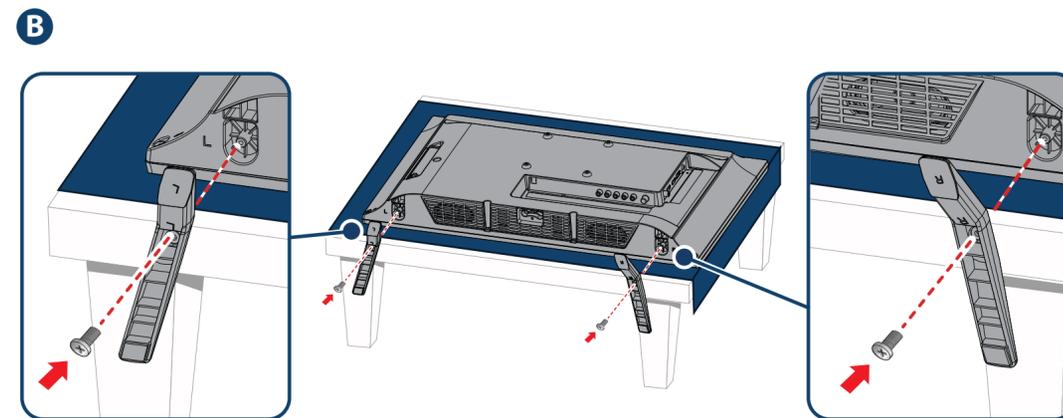

M3 screws (10 mm length)



## WALL MOUNT


How do I prepare my TV for wall mounting? (not for use with a TV stand)  
**You'll need:** Soft surface and Phillips screwdriver

- OR**
- A** Carefully place your TV face-down on a cushioned, clean surface.
  - B** See the instructions that came with your wall mount for more information about how to correctly mount your TV.
  - C** Your TV has wall-mount screws installed in the VESA mounting holes on the back of your TV. Remove the screws, place the wall-mount bracket (not included) over the screws holes, then replace the screws to secure the bracket to your TV.



Your TV has four VESA mounting holes on the back. If you attach a wall-mount bracket to the back of your TV, **the bracket must be securely attached, using all four holes.** If you do not use all four mounting holes, your TV may fall and cause property damage or personal injury. See the documentation that came with your wall-mount for complete mounting instructions.

## FEATURES

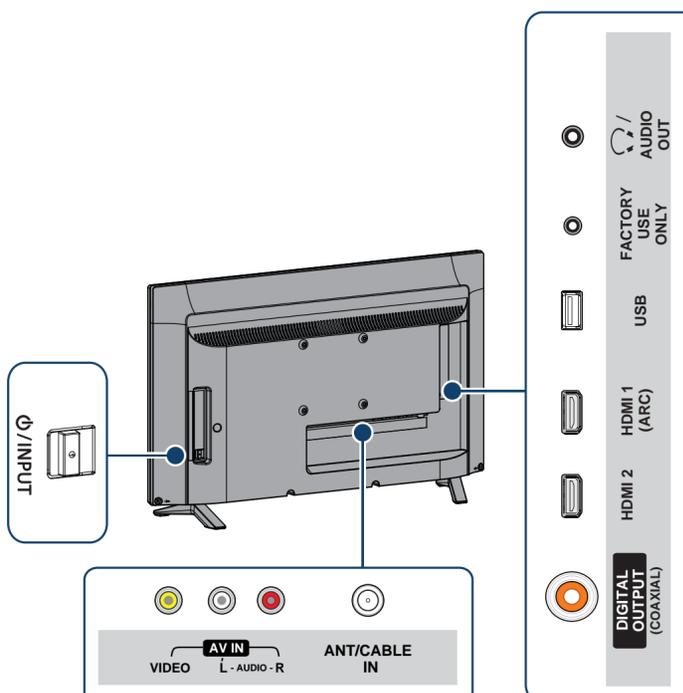

## 2 MAKING CONNECTIONS

How do I watch TV (cable, satellite, or antenna) or connect a device, such as a DVD or Blu-ray disc player, game console, or tablet?

**WHICH CABLES DO YOU HAVE?**

**HDMI (BEST)**  
Best video quality

**Multi-purpose jacks:** You can plug any device that uses HDMI into either HDMI jack. However, certain devices must be connected to the **ARC** jack. See the instructions that came with your ARC device for more information.


**AV (GOOD)**

**COAXIAL (GOOD)**

### 3 CONNECTING AUDIO DEVICES

How do I connect my TV to external speakers?


#### USING DIGITAL AUDIO

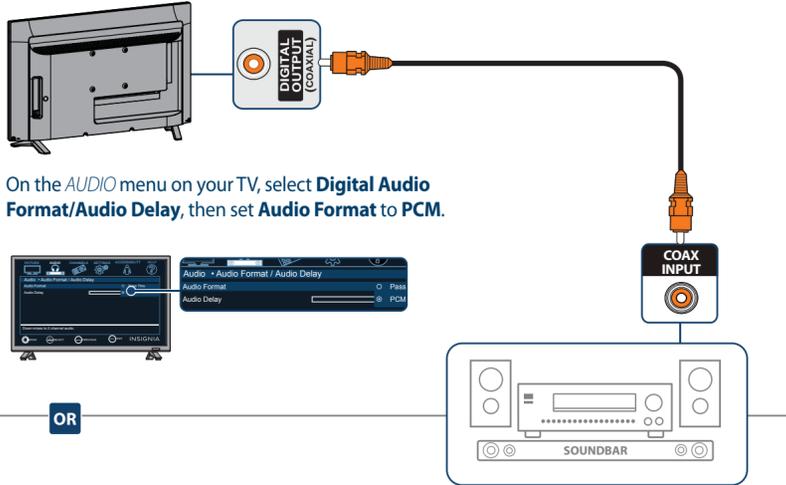

On the **AUDIO** menu on your TV, select **Digital Audio Format/Audio Delay**, then set **Audio Format** to **PCM**.

**Note:** See the instructions that came with your speakers or soundbar for more information.

#### USING ANALOG AUDIO

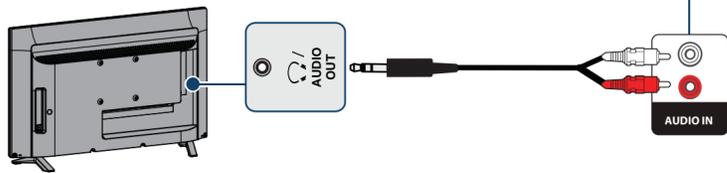


### 4 TURNING ON MY TV


When can I turn on my TV?

#### WHEN YOUR TV IS IN PLACE:

- 1 Plug the power cord into a power outlet.

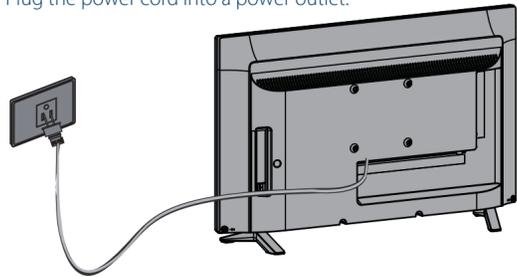

- 2 Remove the remote control cover and install the batteries.

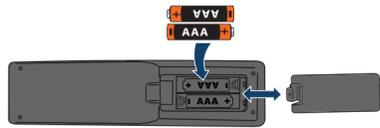

- 3 Press (power) on your remote control.

- 4 Follow the on-screen instructions.



### USING YOUR REMOTE CONTROL

**INPUT SOURCE**  
TV  
HDMI1  
HDMI2  
AV  
USB(Photos)

**Power**  
Turns your TV on or off.

**Numbers**  
Enter channel numbers or the parental controls password.

**ENTER**  
Confirms selections or changes.

**EXIT**  
Closes the TV menu.

**Volume**  
Changes the volume.

**ASPECT**  
Changes how the picture is displayed on the screen.

**SLEEP**  
Sets the sleep timer.

**Media controls**  
INlink: Control HDMI-CEC devices connected to your TV.  
USB: Control the photo slideshow.

**INPUT**  
Opens the **INPUT SOURCE** list.

**Recall**  
Returns to the previous channel.

**FAVORITE**  
Opens the Favorite Channel List.

**Arrows**  
Navigate in on-screen menus.

**INFO\***  
Opens a TV status banner.

**CC**  
Turns closed captioning on or off.

**MUTE**  
Mutes the sound.

**Channel**  
Changes the TV channels.

**GAME**  
Adjusts the picture for the ultimate gaming experience.

**PICTURE**  
Selects the video mode.

**AUDIO**  
Selects the audio mode.

**ENTER**  
Opens the TV menu.

**ACC**  
Opens the Accessibility menu.

**CH**  
Changes the TV channels.

**PICTURE**  
Selects the video mode.

**AUDIO**  
Selects the audio mode.

**Picture**  
Picture Mode: Vivid  
Advanced Settings:  
Backlight: 50  
Brightness: 50  
Contrast: 60  
Color: 73

#### I already have a universal remote control. How do I make it control this TV?

If you already have a universal remote control that you would like to program to work with your TV and don't want to use the included Insignia remote control, see the table below for common codes.

UNIVERSAL REMOTE CONTROL CODES	
<b>AT&amp;T U-verse</b>	1034, 1035, 1040, 1398, 1465, 1596, 1437, 1507, 12049, 11641, 11564, 11326, 11423, 11892, 11517, 10171, 10463, 11385, 11660, 11963, 12184, 13227
<b>Cablevision</b>	068, 069, 078, 096, 100, 164, 168, 229, 026
<b>Charter</b>	2002, 1204, 1423, 1517, 0171, 1963, 0463, 1463, 0842, 1326, 167, 415, 424, 450, 456, 461, 507, 523, 567, 577, 586
<b>Comcast</b>	10463, 10171, 11204, 11326, 11463, 11517, 11641, 11780, 11785, 11892, 11963, 12002, 01877, 00276, 01982, 01376, 00810, 01187, 01106, 00877, 00476
<b>Cox</b>	1326, 1463
<b>DirecTV</b>	10463, 10171, 11204, 11326, 11517, 11564, 11641, 11963, 12002, 11463, 12049
<b>Dish Network</b>	834, 720, 222, 898, 365, 777, 754
<b>RCA</b>	135, 12049, 11423, 11564, 10171, 10463, 11810, 11892, 11963, 12184, 12417
<b>Rogers</b>	0463, 1326, 2049, 1785, 1780, 1423, 1963
<b>Time Warner</b>	400, 450, 461, 456, 10463, 1463, 0463
<b>Verizon</b>	0198, 0490

For an up-to-date list of codes for other cable providers and universal remote brands, visit [www.insigniaproducts.com/remotecodes](http://www.insigniaproducts.com/remotecodes)

**ONE-YEAR LIMITED WARRANTY**  
Visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for details.

**NEED ADDITIONAL HELP?**  
See your online *User Guide*!  
This comprehensive guide includes everything from basic how-to steps to more advanced features. A copy of your *User Guide* is not provided in the box but is available online.

On a computer, go to [www.insigniaproducts.com](http://www.insigniaproducts.com), enter your model in the search box, then press **ENTER**.

Next to *Features*, click **Support & Downloads**, then next to *User Manual*, click the language you want.

Check out our **Support Community** <http://community.insigniaproducts.com/> for helpful information from other Insignia TV owners.

**WE'RE HERE FOR YOU**  
[www.insigniaproducts.com](http://www.insigniaproducts.com)  
For customer service, call:  
**877-467-4289** (U.S./Canada)  
**01800-926-3000** (México)

**U.S. and Canada:**  
INSIGNIA is a trademark of Best Buy and its affiliated companies.  
Registered in some countries.  
Distributed by Best Buy Purchasing, LLC  
7601 Penn Ave South, Richfield, MN 55423 U.S.A.

**Mexico:**  
INSIGNIA is a trademark of Best Buy and its affiliated companies.  
Registered in some countries.  
Best Buy Imports S. DE R.L. DE C.V.  
Avenida Santa Fe No. 440 Piso 2 Ofna 202 Y 203 P3 Y P4  
Colonia Santa Fe Cuajimalpa, C.P. 05348,  
Delegación Cuajimalpa De Morelos,  
Mexico, Ciudad De México

©2017 Best Buy. All rights reserved.  
Made in China