



Flat size (W×H): 11.25 x 4.5 in (285.77 × 114.3 mm.)
Final folded size: 3.75 x 4.5 in (95.25 × 114.3 mm.)

QUICK SETUP GUIDE

Wireless Controller

NS-GSNESWLC18 / NS-GSNESWLC18-C

PACKAGE CONTENTS

- Wireless controller
- Dongle
- AAA batteries (2)
- *Quick Setup Guide*

FEATURES


- Compatible with SNES Classic and NES Classic (these won't work with the original versions of these systems)
- 30 foot range allows for flexibility and mobility without having to move your console
- Powered by 2.4GHz wireless technology
- Powered by two AAA batteries (included)

COMPATIBILITY

This controller is compatible with the SNES Classic and NES Classic consoles. The X, Y, L, and R buttons are not compatible with the NES Classic.

INSTALLING THE BATTERIES

- 1 Remove the battery cover on the back of the controller.
- 2 Insert two AAA batteries (included) as shown below into the battery compartment.

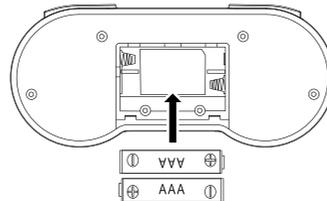


- 3 Reinsert the battery cover.

CONNECTING YOUR CONTROLLER

- 1 Insert the dongle into your NES Classic or SNES Classic. The dongle LED turns green.


NES Classic

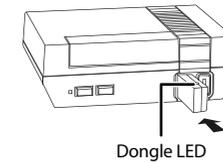

Dongle LED


OR

SNES Classic

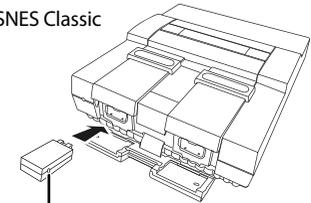

Dongle LED

- 2 Turn the controller on by sliding the **OFF/ON** switch. The controller LED blinks quickly while your controller automatically pairs with the dongle, then lights solid when pairing is complete.

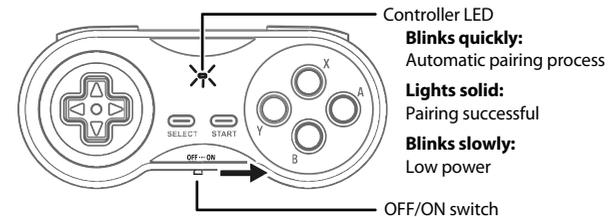



CLEANING YOUR CONTROLLER

Clean your controller with a dry or slightly damp cloth. Using cleaning solutions or attempting to clean connectors may damage your controller.

TROUBLESHOOTING

My controller is not working or there is input lag.

- Move the controller closer to the console.
- Make sure that the batteries are inserted correctly.
- Make sure that the batteries still have power.
- Make sure that the controller is paired with the dongle.
- Make sure that the console and controller are a few feet away from large, metal objects.
- Make sure that there are no objects between the controller and the dongle.
- Move or turn off other nearby wireless devices.
- Make sure that the cables for your TV and console are not damaged.
- Use the HDMI (ARC) input on your TV.
- Use Game Mode on your TV.

My controller will not pair with the dongle.

- Unplug the dongle, then plug it into the console while it is turned on. Turn the controller on, then press and hold **SELECT** and **START** simultaneously for three seconds to reset the controller. If this does not work, repeat the process again.

Some buttons do not work with the NES Classic.

- X, Y, L, and R are not compatible with the NES Classic.

Some buttons are sticking.

- Clean your controller with a damp paper towel.

SPECIFICATIONS

Dimensions (W×H×D): 5.63 × 2.52 × 1.22 in. (14.3 × 6.4 × 3.1 cm)

Operating range: 30 ft. (9 m)

Operating temperature: 41~95°F (5~35°C)

Operating time: 30–60 hours

Wireless technology: 2.4GHz

Power source: AAA batteries (2)

SAFETY INFORMATION

- Make sure that you read and follow all instructions.
- Keep batteries out of the reach of children.
- Do not heat, open, puncture, mutilate, or dispose batteries in a fire. Incorrect battery use may result in battery leakage, overheating, or explosion.
- If a battery leaks, remove the battery and take care to keep the leaked fluid from touching your skin or clothes. If fluid from the battery comes into contact with your skin or clothing, flush your skin with water or remove your clothing immediately. Before inserting new batteries, thoroughly clean the controller with a damp paper towel.
- Do not allow metal objects to touch the battery terminals, because they can become hot and cause burns. For example, do not carry a battery in your pocket with keys or coins.
- Remove the batteries when the product will not be used for an extended period of time.

LEGAL NOTICES

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could

void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ICES-003 statement

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)
www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2017 Best Buy. All rights reserved.

Made in China

