

QUICK START GUIDE

WHIRLPOOL® TOP LOADING WASHING MACHINE



OPERATING INSTRUCTIONS

Fire Hazard

Never place items in the washer that are dampened with gasoline or other flammable fluids.

No washer can completely remove oil.

Do not dry anything that has ever had any type of oil on it (including cooking oils).

Doing so can result in death, explosion, or fire.


WARNING: To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance's Owner's Manual, before operating this appliance.

STEP 1. ADD HE DETERGENT
Designed to use only HE (High Efficiency) detergents.



NOTE: See ADDING LAUNDRY PRODUCTS (below) for more information on adding HE detergent, fabric softener, and/or bleach.


STEP 2. LOAD CLOTHES
For best results, load garments in loose heaps evenly around the basket wall.

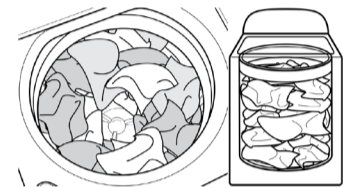


STEP 3. PRESS POWER TO TURN ON THE WASHER




STEP 4. SELECT THE DESIRED CYCLE FOR YOUR LOAD*

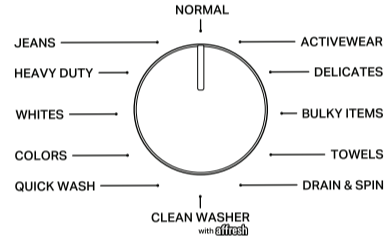


STEP 5. ADJUST CYCLE SETTINGS, IF DESIRED

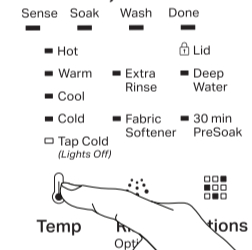

STEP 6. SELECT ADDITIONAL OPTIONS*

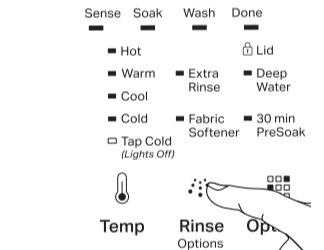


STEP 7. PRESS AND HOLD START/PAUSE TO BEGIN CYCLE

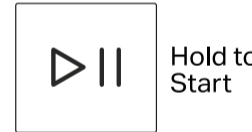

NOTE: Start button must be held for 1 second to start cycle. Once the status lights are illuminated, release the start button.

CONTROL PANEL AND FEATURES

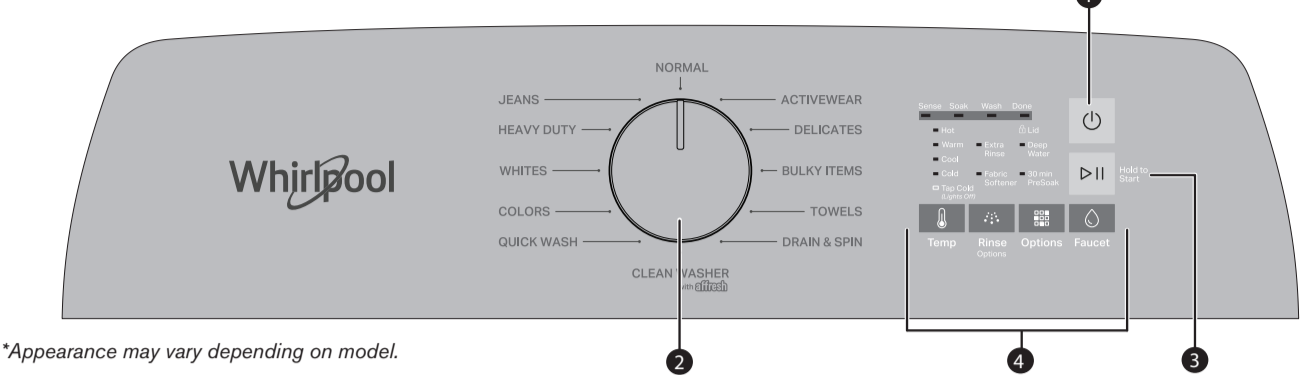


*Appearance may vary depending on model.

- POWER**
Press to turn on/off or to stop/cancel a cycle.
- CYCLE KNOB**
Turn knob to select desired cycle.
- START/PAUSE**
Press and hold the Start/Pause button for 1 second until all status lights are illuminated, then release to start cycle. Press during a cycle to pause cycle and unlock lid.
NOTE: If machine is spinning it may take longer to unlock lid.
- CYCLE MODIFIERS** (Not all modifiers are available on all cycles)
TEMP
Press to modify the cycle's available temperatures (Tap Cold, Cold, Cool, Warm, or Hot).
NOTE: Pressing Temp will toggle through available temperature options. When no lights in the temperature column are illuminated the selected temperature is Tap Cold.
RINSE OPTIONS
Press to modify the cycle's available rinse options. Press once for Fabric Softener, twice for Extra Rinse and three times to activate both.
FABRIC SOFTENER
Select this option to let the machine know when you have added liquid fabric softener.
EXTRA RINSE
Select this option to add a second rinse.



- OPTIONS**
Press to add or remove options for each cycle. Press once to add a 30 min PreSoak, twice to activate Deep Water and three times for both.
- DEEP WATER**
Use this option to automatically add more water to your wash cycle. You can also use this option to reduce the likelihood of white residue on dark clothing.
- 30 MIN PRESOAK**
Touch to add a 30 minute presoak period to help loosen tough stains. The washer will fill, pause to soak, and then begin the selected cycle.
- FAUCET**
Press to access an instant water stream. Use this feature to pretreat clothes and other items right in the washer. You can also use this feature to manually add water to the machine as desired.
NOTE: The washer will drain at the beginning of the cycle if a large volume of water is detected to ensure the machine can correctly sense the load size.

CHOOSING THE RIGHT CYCLE

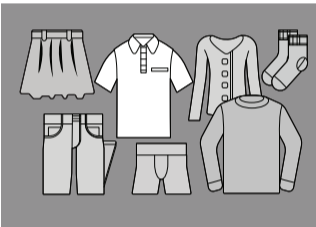


A cycle guide for your washer can be found online at www.whirlpool.com. The document will help identify which cycle to choose for various load types as well as the default cycle options. For example we recommend using the NORMAL cycle with Warm water for cottons, linens and mixed-garment loads.

PRE-TREATING BEFORE A WASH CYCLE

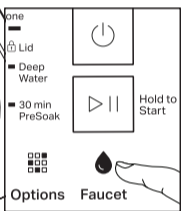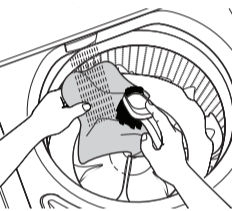


- Press the Faucet button once to turn on and press again to turn off.
- Faucet will automatically shut off after 10 minutes or when max water level is reached.
- Water will automatically drain if water level becomes too high. Water will also drain after 10 minutes if the lid is left open or 3 hours if the lid is left closed.

MORE WATER WHEN YOU WANT IT

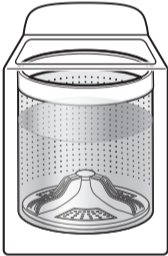

- AUTO SENSING AND DEEP WATER**
- The washer will adjust the water level to the optimal amount for a High Efficiency wash of the detected load size.
 - Press Deep Water to automatically add more water to your wash cycle.
 - It is recommended to use BULKY ITEMS cycle with Deep Water option for loads where maximum water level is desired.
 - Expect longer cycle times due to extended fill duration when using the Deep Water option.

CLEANING WITH LESS WATER

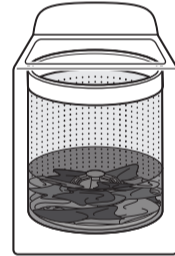

The washer has been designed and optimized to provide a thorough cleaning using less water to conserve energy and resources. As the washer dampens and moves the load, the level of the items will settle in the basket. This is normal, and does not indicate that more items should be added.
IMPORTANT: You will not see a full basket of water as with older, less efficient washing machines. It is normal for some of the load to be above the water line.

For detailed installation instruction and maintenance information, winter storage, and transportation tips, please see the Owner's Manual included with your machine.

ASSISTANCE OR SERVICE AND ADDITIONAL INFORMATION

For information on any of the following items, a full cycle guide, detailed product dimensions, or for complete instructions for use and installation, please visit www.whirlpool.com/owners , or in Canada www.whirlpool.ca/owners . This may save you the cost of a service call.						
Register Product	Schedule Service	How To's & FAQ	Manuals & Downloads	Add Service Plan	Parts	Accessories
		To speak with a customer service representative or if you have additional questions, call us toll free at 1-866-698-2538 or in Canada call 1-800-807-6777 . You can write with any questions or concerns at: Whirlpool Brand Appliances Customer eXperience Center 533 Benson Road Benton Harbor, MI 49022-2692 Whirlpool Brand Appliances Customer eXperience Center Unit 200-6750 Century Ave Mississauga, Ontario L5N 0B7 Please include a daytime phone number in your correspondence.				

ADDING LIQUID CHLORINE BLEACH
Do not overfill, dilute, or use more than 1 cup (236 mL). Do not use color-safe bleach or oxi products in the same cycle with liquid chlorine bleach.

ADDING LIQUID FABRIC SOFTENER
If you desire to use liquid fabric softener with this washer, Whirlpool suggests using the Downy Ball® dispenser. Pour a measured amount of liquid fabric softener into the Downy Ball® dispenser, pull the ring tightly to seal it, and place on top of load. Follow manufacturer's directions for correct amount of fabric softener based on your load size. Then use the Rinse Options button to select Fabric Softener. The Downy Ball® dispenser will automatically release the fabric softener at the correct time in the cycle. For questions on using the Downy Ball® dispenser visit www.downy.com.

ADDING LIQUID FABRIC SOFTENER MANUALLY
Add liquid fabric softener during the final rinse phase for optimal results. Ensure that the Fabric Softener option has been selected on the control panel. The Sense and Wash status indicators will both illuminate during the final rinse phase, to indicate the correct time to add liquid fabric softener. Press the Start/Pause button to pause the washer. Lift the lid and add the recommended amount of liquid fabric softener. Close the lid, press and hold the Start/Pause button to resume the cycle.

INSTRUCTIONS D'UTILISATION



Ne jamais mettre des articles humectés d'essence ou d'autres fluides inflammables dans la laveuse.

Ne pas faire sécher des articles qui ont été salis par tout genre d'huile (y compris les huiles de cuisson).

Le non-respect de ces instructions peut causer un décès, une explosion ou un incendie.



PROGRAMME SI DESIRE


Sense Soak Wash Done

■ Hot
■ Warm
■ Cool
■ Cold
□ Tap Cold
(Lights Off)

■ Extra Rinse
■ Fabric Softener
■ 30 min PreSoak

■ Deep Water
■ Lid

Temp Op/ations

 Hold to Start

 **Hold to Start**

Eau de Javel

The diagram shows a top-down view of a washing machine drum. Inside, there are several items: a dark-colored garment, a light-colored garment, a white cloth, and a small white container with a handle. A legend titled "Rinse Options" is located to the right of the drum. It lists four options with corresponding symbols: "Extra Rinse" (a solid square), "Deep Water" (a solid square), "Fabric Softener" (a star symbol), and "30 min PreSoak" (a solid square). Below the legend, there is a section labeled "Rinse Options" with a small diagram of a person's head and neck, showing the placement of the items in the drum.

Ajouter de l'assouplissant liquide pendant la phase de rinçage final pour obtenir des résultats optimaux. S'assurer que l'option Fabric Softener (assouplissant pour tissu) a été sélectionnée au tableau de commande. Les témoins d'état Sense (détection) et Wash (lavage) s'allument pendant la phase de rinçage final, pour indiquer le bon moment pour ajouter de l'assouplissant liquide pour tissu. Appuyer sur le bouton Start/Pause (mise en marche/pause) pour interrompre la lavasse. Lever le couvercle et verser le montant recommandé d'assouplissant pour tissu. Fermer le couvercle, appuyer sur Start/Pause (mise en marche/pause) pour remettre le programme en marche.

W11428539C








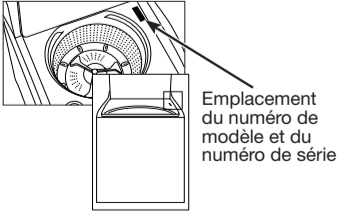
The diagram shows the control panel of a Whirlpool front-loading washing machine. It includes a large circular dial with various wash cycle options: NORMAL, ACTIVEWEAR, DELICATES, BULKY ITEMS, TOWELS, DRAIN & SPIN, CLEAN (with a 'WASHER with eRefresh' label), QUICK WASH, COLORS, WHITES, HEAVY DUTY, and JEANS. To the right of the dial is a digital display showing '0:00' and a 'Hold to Start' button. Below the display are four touch-sensitive buttons: Temp, Rinse Options, Options, and Faucet. Above these buttons is a row of icons for different wash programs: Hot, Warm, Cool, Cold, Gold, Fabric Softener, Extra Rinse, Deep Water, and 90 min ProCook. At the top of the panel is a row of four buttons: Normal, Soak, Wash, and Drain. Numbered callouts point to specific features: 1 points to the 'Normal' button, 2 points to the 'Normal' position on the dial, 3 points to the 'Hold to Start' button, 4 points to the 'Options' button, and 5 points to the 'Faucet' button.

Sélectionner cette option pour ajouter un deuxième rinçage.

One
 Lid
 Deep Water
 30 min PreSoak
 Options
 Faucet

■ L'eau s'écoulera automatiquement si le niveau d'eau devient trop élevé. L'eau se vidange également au bout de 10 minutes si le couvercle est laissé ouvert ou 3 heures si le couvercle est laissé fermé.

A diagram of a water filter system. It shows a cylindrical tank with a lid. Inside the tank, there is a filter at the bottom. Water is shown being filtered through the filter and then being distributed into the tank. The water level in the tank is indicated by a dashed line.

<p>Pour obtenir des informations sur l'un des points suivants : Guide de programmes complet et dimensions détaillées du produit ou pour obtenir des instructions complètes sur l'utilisation et l'installation, visiter le www.whirlpool.com/owners, ou au Canada le www.whirlpool.ca/owners. Cette vérification peut aider à économiser le coût d'une intervention de dépannage.</p>								
<p>Enregistrement du produit</p> 	<p>Prendre rendez-vous</p> 	<p>Comment faire et FAQ</p> 	<p>Manuels et téléchargements</p> 	<p>Ajouter un plan de service</p> 	<p>Pièces</p> 	<p>Accessoires</p> 		
 <p>Emplacement du numéro de modèle et du numéro de série</p>		<p>Pour communiquer avec un représentant du service à la clientèle ou si vous avez des questions, appelez-nous sans frais au 1-866-698-2538 ou au 1-800-807-6777 si vous résidez au Canada.</p> <p>Vous pouvez adresser tous commentaires ou toutes questions à :</p> <table border="0"> <tr> <td> <p>Whirlpool Brand Appliances Customer eXperience Center 533 Benson Road Benton Harbor, MI 49022-2692</p> </td> <td> <p>Whirlpool Brand Appliances Customer eXperience Center Unit 200-6750 Century Ave Mississauga, Ontario L5N 0B7</p> </td> </tr> </table> <p>Veuillez indiquer dans votre correspondance un numéro de téléphone où l'on peut vous joindre dans la journée.</p>					<p>Whirlpool Brand Appliances Customer eXperience Center 533 Benson Road Benton Harbor, MI 49022-2692</p>	<p>Whirlpool Brand Appliances Customer eXperience Center Unit 200-6750 Century Ave Mississauga, Ontario L5N 0B7</p>
<p>Whirlpool Brand Appliances Customer eXperience Center 533 Benson Road Benton Harbor, MI 49022-2692</p>	<p>Whirlpool Brand Appliances Customer eXperience Center Unit 200-6750 Century Ave Mississauga, Ontario L5N 0B7</p>							