



 
QUICK SETUP GUIDE

Side Dock Charging Station for Xbox One® S


RF-XB1SSDCS

PACKAGE CONTENTS

- Xbox One S side dock charging station
- Rechargeable battery packs (2)
- Quick Setup Guide



Rechargeable
battery packs

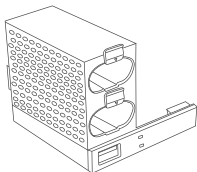

Charging station


Before using your new product, please read these instructions to prevent any damage.

FEATURES


- Power up to two controllers simultaneously with dual charging ports.
- View charging status at a glance via LED indicators.
- Locking mechanism holds battery packs in place.
- USB pass-thru supports power and data connections.
- 100% compatible with standard Xbox One and Xbox One S controllers.
- Full UL certified battery cell.

SETTING UP THE SIDE DOCK CHARGING STATION


- 1** Make sure that the fixed switch is in the unlocked position.

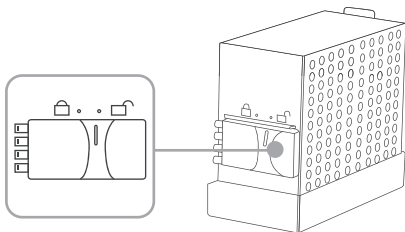


- 2** Using both hands, carefully slide the charge station into place while lining up the USB connector with the USB port.

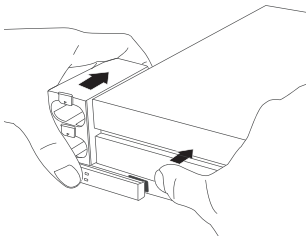

- 3** Slide the fixed switch to the left to lock the charging station on the Xbox One S console.

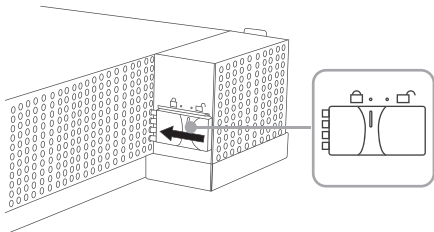


- 4** Orient the battery packs so that the diagonal stripes are facing the locking tabs with the metal contacts facing towards the inside of the charge station. Carefully slide the battery packs into the charge station until they lock in place.

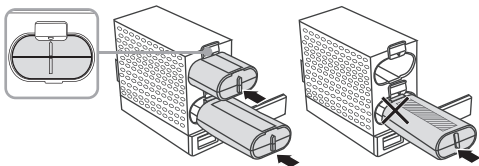


- Status light information:

STATUS LIGHT	DESCRIPTION
Amber	Charging
White	Fully charged


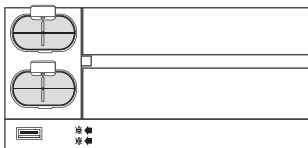


- 5** When the battery pack is fully charged, slide the locking switch up to unlock. The battery automatically pops out.

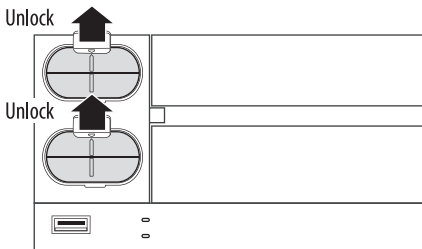


INSTALLING THE RECHARGEABLE BATTERY PACK

- 1** Open the battery cover and insert the rechargeable battery pack into the battery compartment as shown below. The contacts should be facing left and the diagonal stripes should be facing outward. Replace the battery cover.

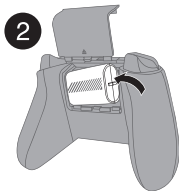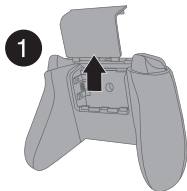



REMOVING THE SIDE DOCK CHARGING STATION

1 Slide the fixed switch to the right to unlock.

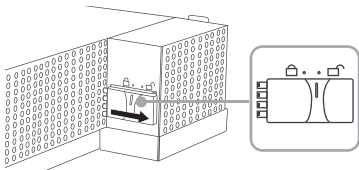

2 Hold on to the console, then pull the charging station back to remove it (as shown below).

Caution: If you pull the charging station the wrong way, you could damage it.

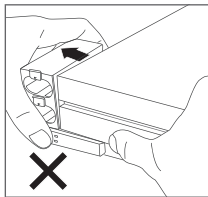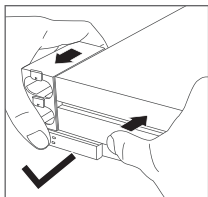

Note: The battery charging station is designed to stay connected to your Xbox One S console. We recommend that you leave it connected.

SPECIFICATIONS

External dimensions: charge station (W×H×D)	Approx. $3.0 \times 3.0 \times 2.5$ in. ($7.62 \times 7.62 \times 6.35$ cm.)
Battery capacity	1200mAh
Battery type	Ni-MH LSD battery
External dimensions: battery (W×H×D)	Approx. $1.96 \times 1.18 \times .59$ in. ($5 \times 3 \times 1.5$ cm.)
Operating temperature	32°F~104°F (0°C~40°C)

SAFETY INFORMATION/CAUTION

Incorrect battery use may result in battery leakage, overheating, or explosion.

When using batteries, make sure that you follow these instructions:

- Keep batteries out of the reach of children.
- Do not heat, open, puncture, mutilate, or dispose of batteries in fire.
- If a battery leaks, remove the battery, taking care to keep the leaked fluid from touching your skin or clothes. If fluid from the battery comes into contact with skin or clothes, flush skin with water or remove the clothing immediately. Before inserting a new battery, thoroughly clean the controller with a damp paper towel.
- Do not allow metal objects to touch the battery terminals, because they can become hot and cause burns. For example, do not carry the battery in a pocket with keys or coins.
- Remove the battery when the product will not be used for an extended period of time.

TROUBLESHOOTING

The side dock charging station doesn't charge?

- Confirm the charging station is properly connected to the Xbox One S.
- Please only use the included rechargeable battery pack or replacement rechargeable battery pack (Model: RF-XB1SRBP-sold separately), other regular rechargeable batteries don't recharge in the charging station.
- Confirm that the battery is fully inserted in the correct orientation is locked in place.
- Confirm the battery pack is properly installed on the Xbox One controller.

LEGAL NOTICES

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ICES-003 Statement

This Class B digital apparatus complies with Canadian ICES-3(B) / NMB-3(B) standard.

ONE-YEAR LIMITED WARRANTY

Visit www.rocketfishproducts.com for details.

CONTACT ROCKETFISH:

For customer service, call 1-800-620-2790 (U.S.)
www.rocketfishproducts.com

Microsoft and Xbox One are registered trademarks of the Microsoft group of companies.

ROCKETFISH is a trademark of Best Buy and its affiliated companies. Registered in some countries.
Distributed by Best Buy Purchasing, LLC, 7601 Penn Ave South, Richfield, MN 55423 U.S.A.,
©2020 Best Buy. All rights reserved.

Made in China