Care and Maintenance

Cleaning Your Wine Cooler

- Wash the inside surfaces with warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda with a quart of water.
- Wash the shelves with a mild detergent solution.
- Turn off the power, unplug the appliance, and remove all items including shelves and rack.
- Wring excess water out of the sponge or cloth when cleaning area of the controls, or any electrical parts.
- Wash the outside cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.

Power Failure

• Most power failures are corrected within a few hours and will not affect the temperature of your appliance if you minimize the number of times the door is opened.
If the power is going to be off for a longer period of time, you need to take the proper steps to protect your contents.

Vacancy time

- Short vacancy: Leave the Wine Cooler off for around three weeks.
- Long vacancy: If the appliance will not be used for several months, remove all items
 and turn off the appliance. Clean and dry the interior thoroughly so as to restraint
 odors and mold. Leave the door open slightly all the time if necessary.

Moving Your Wine Cooler

- Remove all items.
- Securely tape down all loose items (shelves) inside your appliance.
- Turn the adjustable leg up to the base to avoid damage.
- Shut door/s.

Be sure the appliance stays secure in the upright position during transportation.

Also protect outside of appliance with a blanket, or similar item.

> Energy saving Tips

• The Wine Cooler should be located in the coolest area of the room, away from heat producing appliances, out of the direct sunlight.