



© 2025 Brentwood Appliances, Inc.

MILK FROTHER

ESPUMADOR DE LECHE

MOUSSEUR À LAIT

ITEM NO: GA-103S



Operating and Safety Instructions

FOR INDOOR HOUSEHOLD USE ONLY

Instrucciones de Operación y Seguridad

SOLO PARA USO DOMESTICO

Consignes de Sécurité et de Fonctionnement

POUR USAGE DOMESTIQUE INTÉRIEUR SEULEMENT

IMPORTANT SAFEGUARDS

When using this or any other electrical appliance, always follow these basic safety precautions, especially when children are present.



READ ALL INSTRUCTIONS

BEFORE USE

⚠ WARNING-To reduce the risk of fire, electric shock, serious personal injury and property damage please note the following:

- This product is not intended for use by children. Keep the product out of the reach of children and pets.
- Always ensure the product is turned off and allow to cool before assembling, disassembling, relocating, or cleaning.
- **Do not leave the product unattended while it is in use. Always turn off the product when not in use.**
- Do not immerse this product in or expose the base/handle to water or other liquids.
- Use appliance on a table or other flat surface.
- This product is intended solely for non-commercial, non-industrial, household use in cooking of food for human consumption; do not use the product outdoors or for any other purpose.
- Do not operate the product if it has a damaged battery compartment, if wires are exposed, if it malfunctions, if it is dropped or damaged, or if the Motor Housing is dropped in or exposed to water.
- This product has no user-serviceable parts. Do not attempt to examine or repair this product yourself.
- Do not use old batteries. Only install new batteries.

Instructions

1. Hold the lower half of the Milk Frother in one hand and use the other to turn the upper half counterclockwise until they separate, revealing the battery compartment.
2. Insert 2 new AA batteries in the battery compartment of the lower half and join lower and upper halves by turning the upper half clockwise onto the lower half.
3. To use the Milk Frother, first, submerge the whisk into the liquid and press the power button. Move the whisk up and down for 15-20 seconds to create froth, or longer for a creamier texture.
4. Once done, press the power button to turn off.
5. To clean, rinse the whisk under running water and briefly turn the Milk Frother on in water to flush out any residue.



© 2025 Brentwood Appliances, Inc.