


Let's see what your Smart Camera can do:

①

Enable Privacy Mode.


To enable privacy mode, manually slide privacy shutter **up**. This disables audio and video functionality.

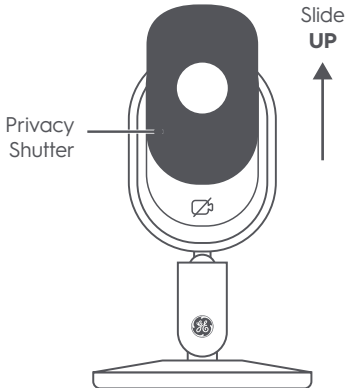

②

Disable Privacy Mode.

To disable privacy mode, manually slide privacy shutter **down**. This restores audio and video functionality.

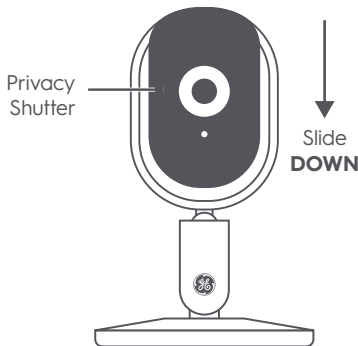

Smart Tips

①

How to Factory Reset Your Camera:

- Locate the pin hole on your camera
- Press and hold the button for 3+ seconds
- You can let go when the LED light turns red



②

Choose Your Storage Option:

Cloud Storage

Your camera comes with a free trial of our premium Cloud video storage solution.

Your video will be stored in our secure Cloud accessed by two factor authentication.

SD Drive

Store all of your content locally on an SD card (sold separately) using the camera's built in SD drive.

Diagram of Camera

