

# Metal and Glass TV Stand for TVs up to 65" or 110 lbs.

**NS-HMG1856**



SAFETY INFORMATION AND SPECIFICATIONS.....	2
PACKAGE CONTENTS: PARTS.....	3
PACKAGE CONTENTS: HARDWARE .....	4
ASSEMBLY INSTRUCTIONS.....	5
CARE AND MAINTENANCE .....	11

Before using your new product, please read these instructions to prevent any damage.

# SAFETY INFORMATION AND SPECIFICATIONS



**CAUTION:** The top surface of this stand is designed for use with a product weighing no more than 110 lbs. (50 kg) and having a width that permits it to sit evenly on the stand with no more than a one-inch overhang on each side of the shelf. Use with products that weigh more than the maximum weight allowed, or with dimensions that extend beyond the maximum width may result in instability, which may result in injury.



**CAUTION:** This product contains small items that could be a choking hazard if swallowed. Keep these items away from young children!

## Maximum weight

**Top shelf:** 110 lbs. (50 kg)

**Middle/Bottom shelf:** 50 lbs. (22.7 kg)

**TV:** 110 lbs. (50 kg)

**Maximum screen size:** 65" diag. (no more than 1-inch overhang on each side of the top shelf)


## Dimensions:

**Overall (W x H x D):** 56 x 24 x 20 in. (142.1 x 60.9 x 51 cm)


**Top shelf (W x D):** 56 x 20 in. (142.1 x 51 cm)

**Middle/Bottom shelf (W x D):** 52.7 x 19.3 in. (134 x 49 cm)

**TV stand weight:** 96.1 lbs. (43.6 kg)

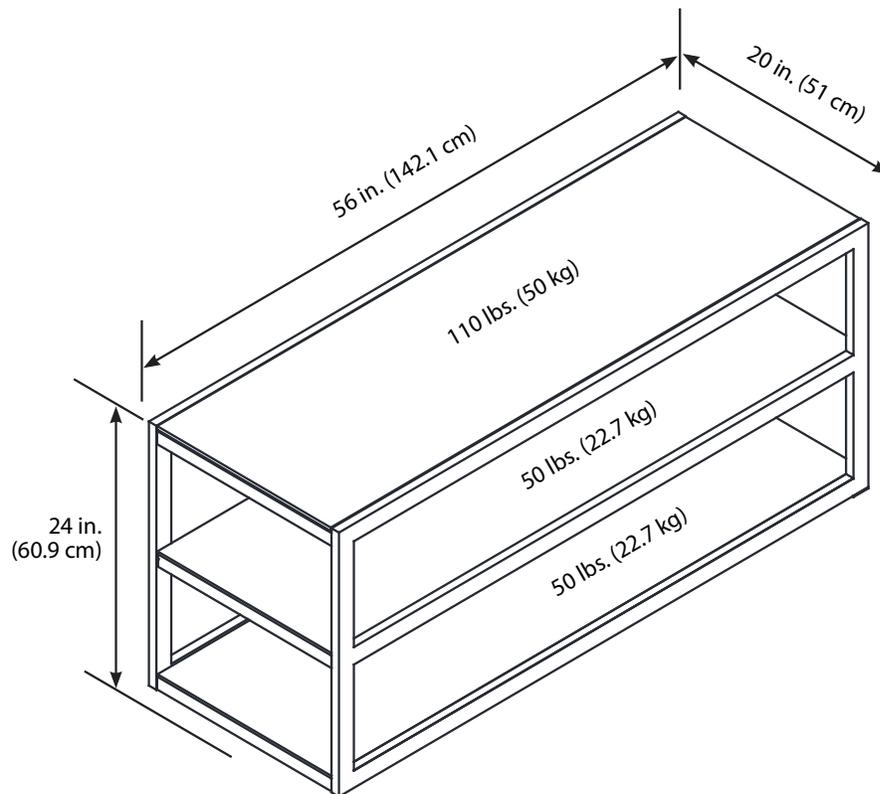


**Tools needed:**

 


Phillips screwdriver

# PACKAGE CONTENTS: PARTS


Make sure that you have all the parts necessary to assemble your new TV stand.

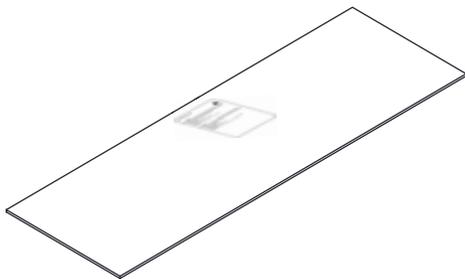


**A** Top glass shelf (Qty. 1)

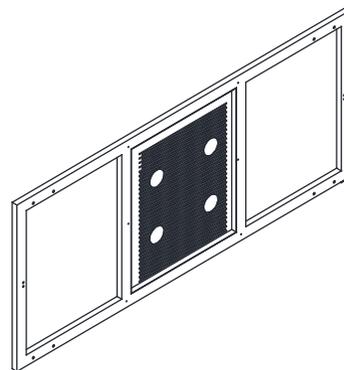


**D** Back frame (Qty. 1)

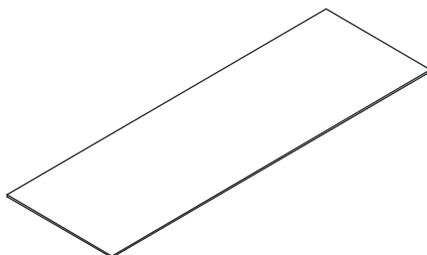


**B** Lower glass shelf (Qty. 2)

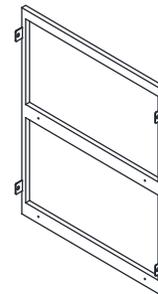

**E** Side frame (Qty. 2)

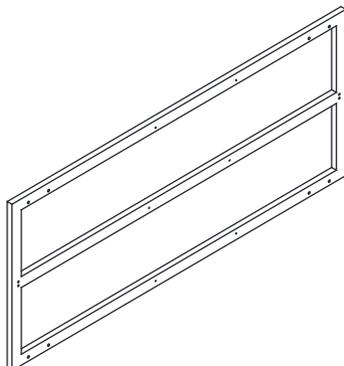


**C** Front frame (Qty. 1)

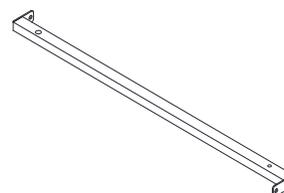



**F** Middle bar (Qty. 4)

# PACKAGE CONTENTS: HARDWARE

 Make sure that you have all the hardware necessary to assemble your new TV stand.

Label	Hardware	Qty.
<b>G</b>	 Metal bracket	<b>12</b>
<b>H</b>	 Glass spacer	<b>16</b>
<b>I</b>	 1/2" bolt	<b>8</b>
<b>J</b>	 1/2" pan head screw	<b>20</b>

 
Label	Hardware	Qty.
<b>K</b>	 5/8" pan head screw	<b>2</b>
<b>L</b>	 Cable management clip	<b>2</b>
<b>M</b>	 Allen wrench	<b>1</b>
<b>N</b>	 Suction cup	<b>8</b>

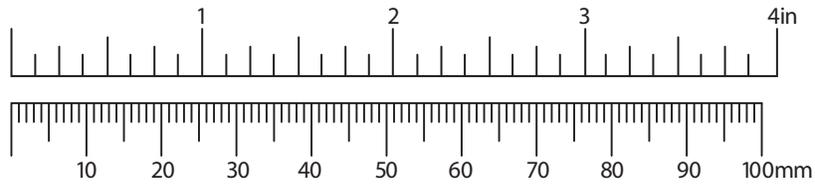


# ASSEMBLY INSTRUCTIONS

## Step 1: Attach the metal brackets

- 1 Attach four metal brackets (G) to each of the side frames (E) with four 1/2" pan head screws (J) and a Phillips screwdriver. Make sure that the brackets face the bottom.

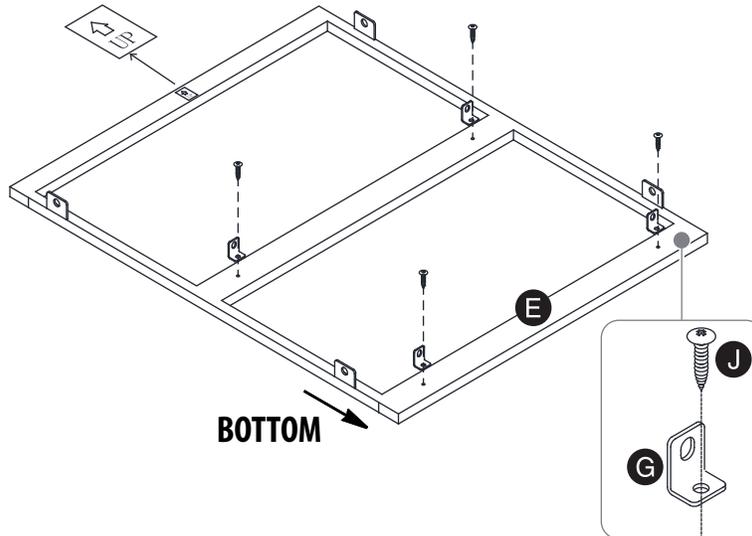

- 2 Attach two metal brackets (G) to the front frame (C) with two 1/2" pan head screws (J) and a Phillips screwdriver. Make sure the brackets face outward.

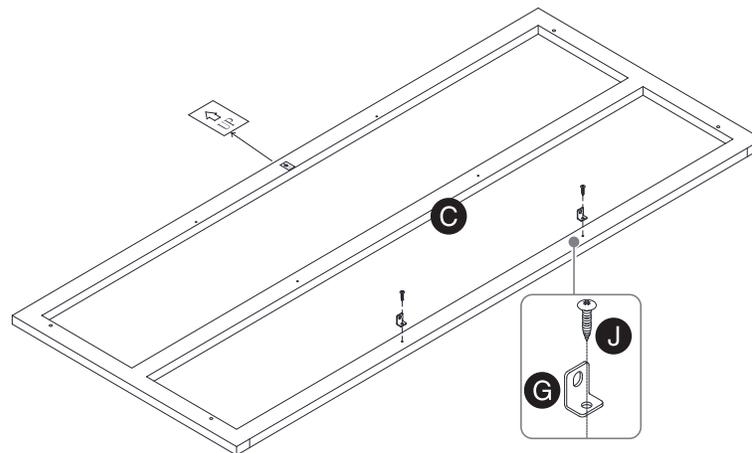

### You'll need:



**G** Metal brackets  
(Qty. 10)



**J** 1/2" pan head screws  
(Qty. 10)




Phillips screwdriver

## Step 2: Attaching the connecting bars


- 1 Attach the four middle bars (F) to the back frame (D) with four 1/2" pan head screws (J), and a Phillips screwdriver.
- 2 Attach two metal brackets (G) to the back frame (D) with two 1/2" pan head screws (J) and a Phillips screwdriver. Make sure that the brackets face outward.

**Note:** Do not fully tighten the screws until assembly is complete.

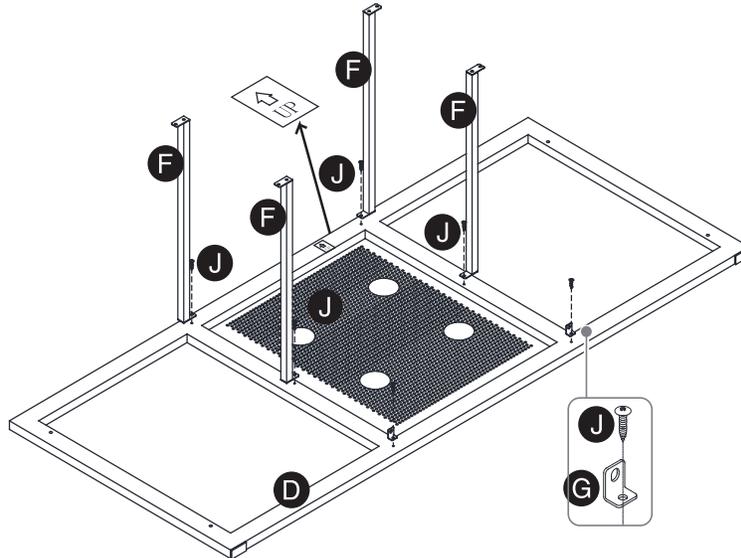

- 3 Attach the two side frames (E) to the back frame (D) with four 1/2" bolts (I) and an Allen wrench.

**Note:** Do not fully tighten the bolts until assembly is complete.

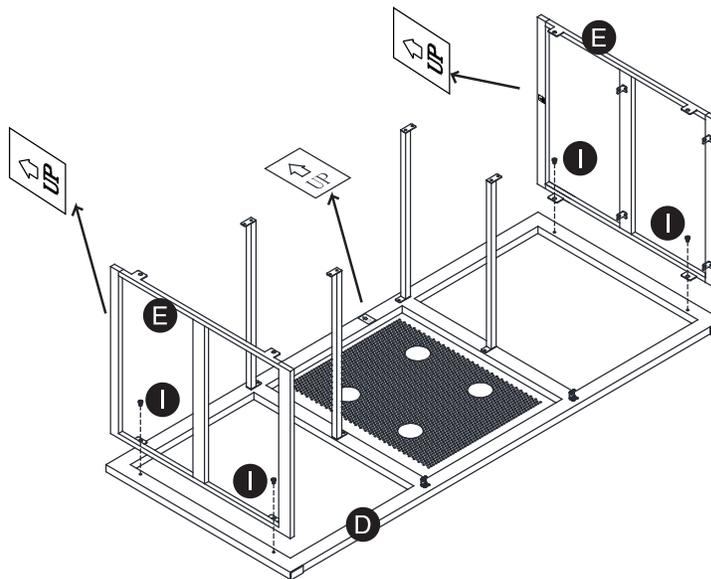


### You'll need:




**G** Metal brackets  
(Qty. 2)



 
**J** 1/2" pan head  
screws (Qty. 6)



**I** 1/2" bolts (Qty. 4)

 


**M** Allen wrench

 

Phillips screwdriver

### Step 3: Attach the front and back frames

- 1 Turn the back frame assembly upright.
- 2 Attach the four middle connecting bars (F) to the front frame (C) using four 1/2" pan head screws (J) and a Phillips screwdriver.  
**Note:** Do not fully tighten the screws until assembly is complete
- 3 Attach the two side frames (E) to the front frame (C) using four 1/2" bolts (I) and an Allen wrench. Make sure that the brackets on the back frame assembly and front frame are on the same side.  
**Note:** Do not fully tighten the bolts until assembly is complete.
- 4 Fully tighten all the bolts and screws attached to the assembly.

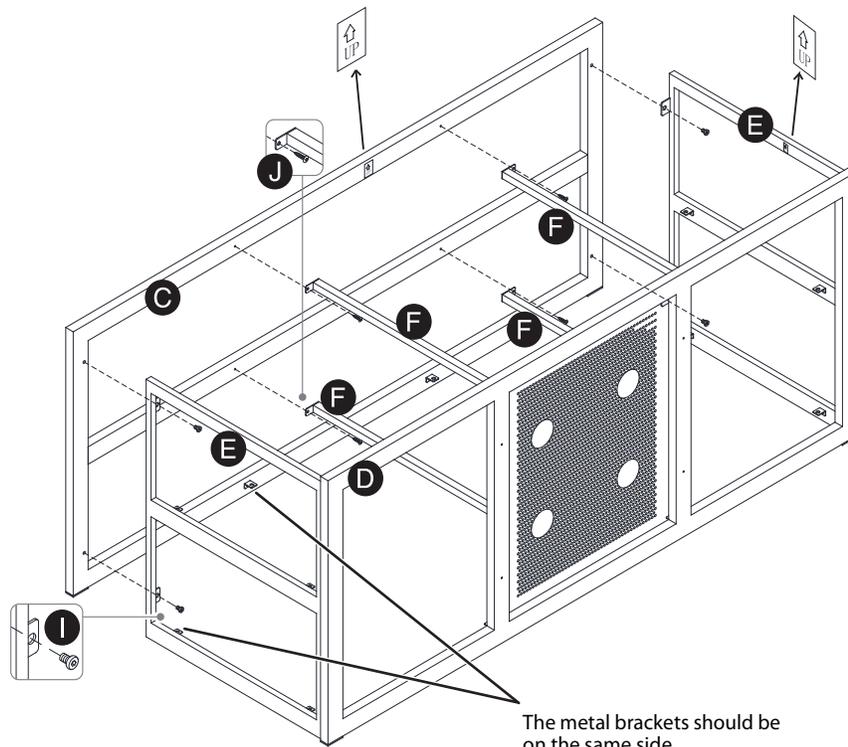


#### You'll need:




I 1/2" bolts (Qty. 4)



 J 1/2" pan head screws (Qty. 4)




M Allen wrench

 


Phillips screwdriver

### Step 4: Attaching the cable management clips

- Attach the cable management clips (L) to the back frame using two 5/8" pan head screws (K) and a Phillips screwdriver. You can attach the clips to any of the four available holes.

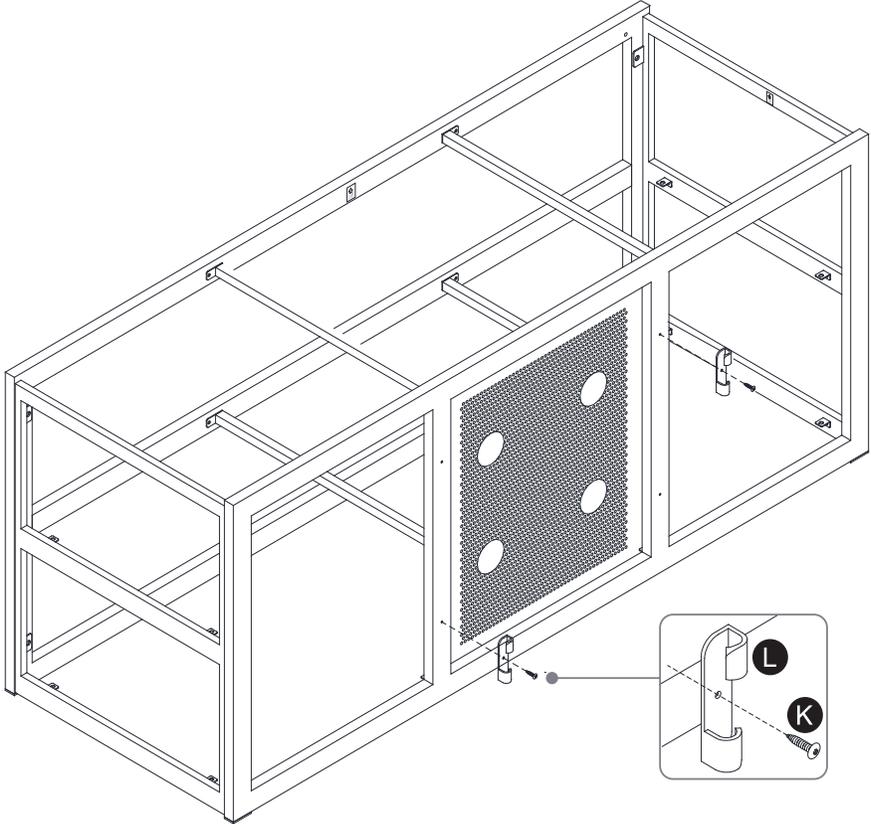


**You'll need:**

 

L Cable management clips (Qty. 2)



 
K 5/8" pan head screws (Qty. 2)



Phillips screwdriver

**Step 5: Attach the glass spacers and suction cups**

- 1 Peel off the 24 glass spacers (H) and stick them onto the side frames (E), middle bars (F), and metal brackets (G), as shown.
- 2 Push eight suction cups (N) into the holes in the middle bars (F).

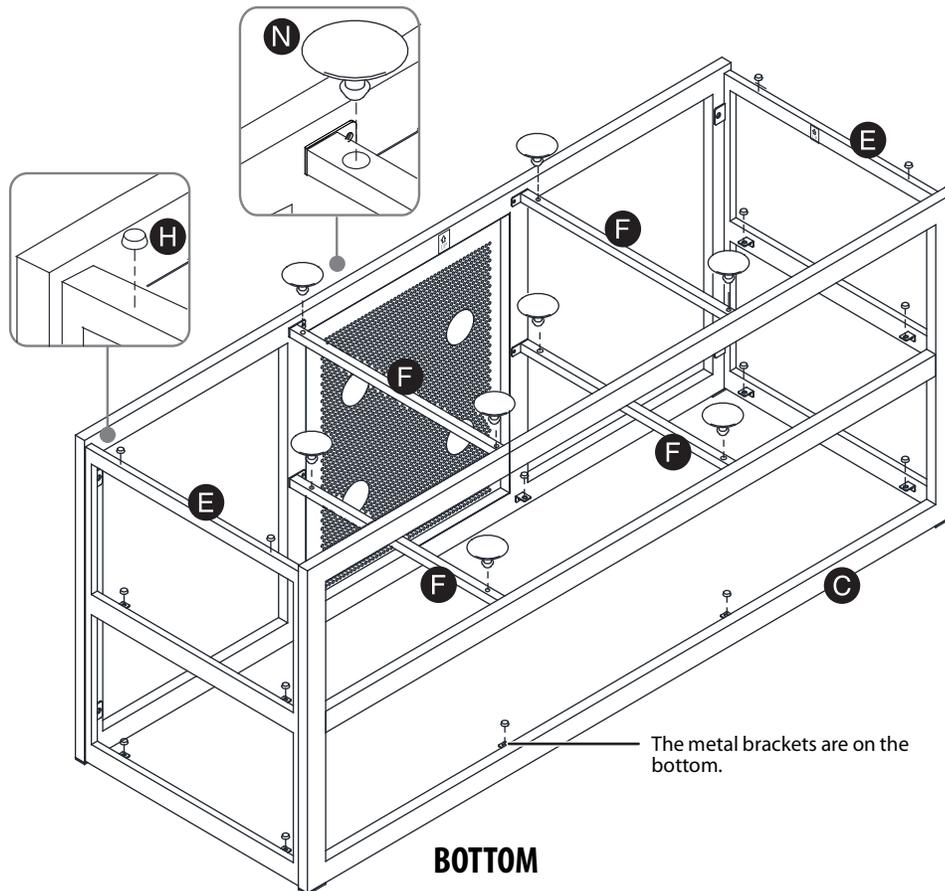**You'll need:**


**H** Glass spacers  
(Qty. 16)



**N** Suction cups  
(Qty. 8)

**Step 6: Place the glass shelves**

- 1 Slide a lower glass shelf (B) into the bottom of the assembly.
- 2 Slide a lower glass shelf (B) into the middle of the assembly.
- 3 Slide the top glass shelf (A) onto the top of the assembly.

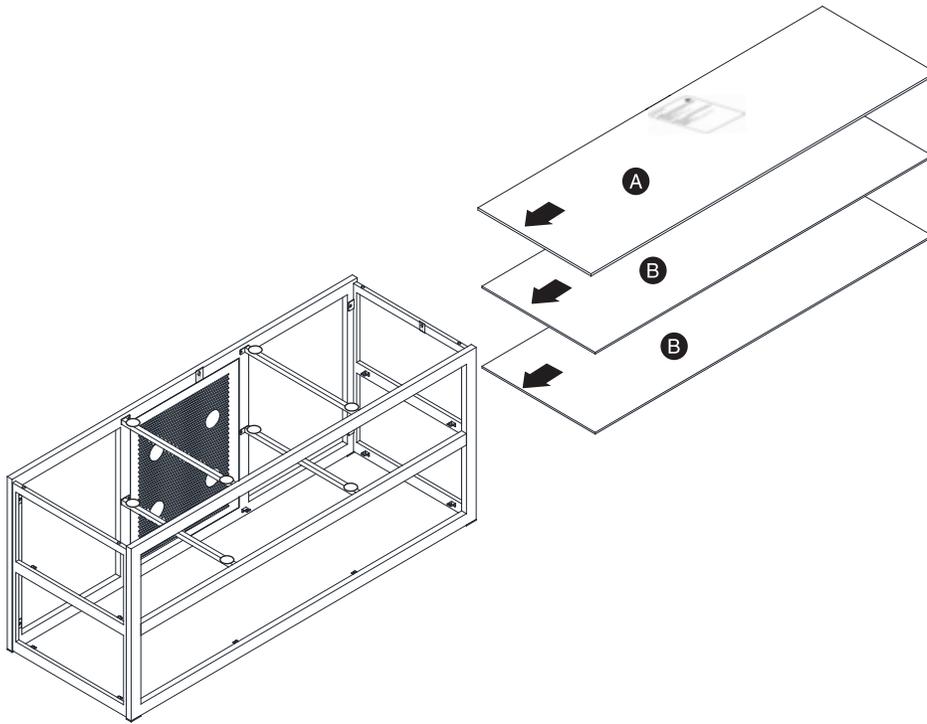

# CARE AND MAINTENANCE

## Glass

- Use a commercial liquid glass cleaner and a soft cloth.
- Do not use harsh powders or any other abrasive substances as they will scratch the glass.

### **WARNING**

Please use your stand correctly and safely. Improper use can cause safety hazards or damage to your furniture or household items. Carefully read the following chart.

Look out for:	What can happen:	How to avoid the problem:
<ul style="list-style-type: none"> <li>• Children climbing on the stand.</li> <li>• A child may try to reach a toy or other object by climbing on the stand.</li> <li>• Children will play and be active near the TV.</li> </ul>	<ul style="list-style-type: none"> <li>• Risk of injury or death.</li> <li>• A child climbing on the stand can make it top-heavy and cause it to tip over.</li> <li>• A child playing with a TV can cause it to tip over.</li> </ul>	<ul style="list-style-type: none"> <li>• Never allow children to climb on or play with the stand.</li> <li>• Do not place toys or food on the top shelves. Children may try to climb to reach them out of curiosity.</li> </ul>
<ul style="list-style-type: none"> <li>• Improper use of the stand to support TVs.</li> <li>• The stand is designed for use with TVs with a specified maximum weight rating and recommended size of the TVs it will safely support.</li> </ul>	<ul style="list-style-type: none"> <li>• Risk of injury or death.</li> <li>• TVs can be very heavy. Note, older CRT TVs tend to be unbalanced and prone to tipping forward.</li> </ul>	<ul style="list-style-type: none"> <li>• A TV must only be set on furniture specifically designed to support a television.</li> <li>• Never use a TV that exceeds the weight ratings or size guidelines specified for the stand.</li> </ul>
<ul style="list-style-type: none"> <li>• Overloaded shelves.</li> </ul>	<ul style="list-style-type: none"> <li>• Risk of injury.</li> <li>• Top-heavy furniture can tip over.</li> <li>• Overloaded shelves can break.</li> </ul>	<ul style="list-style-type: none"> <li>• Never exceed the weight limits shown in the instructions.</li> <li>• Work from the bottom to the top when loading shelves.</li> <li>• The middle and bottom shelves can only support 50 lbs. while the top can support 110 lbs.</li> </ul>
<ul style="list-style-type: none"> <li>• Improperly moving the stand.</li> </ul>	<ul style="list-style-type: none"> <li>• The stand can tip over or break if improperly moved.</li> <li>• Risk of injury.</li> </ul>	<ul style="list-style-type: none"> <li>• Unload shelves from the top to the bottom before moving the stand.</li> <li>• Do not push the stand, especially on a carpeted floor. Have a friend help you lift the item and set it in place.</li> <li>• Do not lift the stand using the top shelf. Lift from the frame or leg assembly.</li> <li>• Remove the TV before moving the TV stand.</li> </ul>
<ul style="list-style-type: none"> <li>• The TV/stand assembly tipping forward.</li> </ul>	<ul style="list-style-type: none"> <li>• Risk of injury.</li> <li>• Top-heavy furniture can tip over.</li> <li>• The TV and stand could be damaged.</li> </ul>	<ul style="list-style-type: none"> <li>• Do not exceed the TV stand's weight limit.</li> <li>• Do not place a TV larger than 65" diag. on your TV stand.</li> </ul>

# ONE-YEAR LIMITED WARRANTY

## Definitions:

The Distributor\* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at [www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca), and is packaged with this warranty statement.

## How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

## What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

## How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location, please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from a Best Buy online web site ([www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca)), mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States call 1-888-BESTBUY or in Canada call 1-866-BESTBUY. Call agents may diagnose and correct the issue over the phone.

## Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the county where the original purchase was made.

## What does the warranty not cover?

This warranty does not cover:

- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna

- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

For customer service please call 1-877-467-4289

[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2017 Best Buy. All rights reserved.

Made in China

# INSIGNIA™

1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)  
[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies.  
Registered in some countries.  
Distributed by Best Buy Purchasing, LLC  
7601 Penn Ave South, Richfield, MN 55423 U.S.A.  
©2017 Best Buy. All rights reserved.  
**Made in China**

V3 ENGLISH  
17-0621