

Scan this QR code for product information, videos, and assembly assistance.



## UL CERTIFIED FULL MOTION TV WALL MOUNT



**HAVE QUESTIONS?**

Monday - Friday from 8:00am - 4:00pm PST



[support@mount-it.com](mailto:support@mount-it.com)



(855) 925-5668



[www.mount-it.com](http://www.mount-it.com)

# Thank you for choosing Mount-It!

**EN** Read the entire instruction manual before you start installation and assembly. If you have any questions regarding any of the instructions or warnings, please contact Mount-It! for assistance.

**CAUTION:** Use with products heavier than the rated weights indicated may result in instability causing possible injury.

Mounts must be attached as specified in assembly instructions. Improper installation may result in damage or serious personal injury.

- Safely gear and proper tools must be used. This product should only be installed by professionals.
- This product is designed to be installed on wood stud walls, solid concrete walls.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- Use the mounting screws provided and DO NOT OVER TIGHTEN mounting screws
- This product contains small items that could be a choking hazard if swallowed. Keep these items away from children.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

**IMPORTANT:** Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, telephone Mount-It! for a replacement.

**MAINTENANCE:** Check that the bracket is secure and safe to use at regular intervals (at least every three months).

**FR** Lisez entièrement le guide d'utilisateur avant de commencer l'installation et le montage. Si vous avez des questions concernant les instructions ou les avertissements, veuillez contacter votre distributeur local pour une assistance.

**ATTENTION:** L'utilisation de produits plus lourds que les poids nominaux indiqués peut entraîner une instabilité causant des blessures potentielles.


Les supports doivent être joints comme spécifié dans les instructions de montage. Une mauvaise installation peut entraîner des dommages ou de graves blessures aux personnes.

- Un équipement de sécurité et les outils appropriés doivent être utilisés. Ce produit devrait être installé uniquement par des professionnels.
- Ce produit est conçu pour être installé sur des murs avec poteaux en bois, des murs en béton massif.
- Assurez-vous que la surface de soutien supporte en sécurité le poids combiné de l'équipement et de tous les matériaux et composants associés.
- Utilisez les vis de montage fournies et NE SERREZ PAS TROP les vis de montage
- Ce produit contient de petites pièces qui peuvent causer un étouffement si elles sont avalées. Éloignez ces pièces des enfants.
- Ce produit est prévu uniquement pour une utilisation à l'intérieur. L'utilisation de ce produit à l'extérieur peut entraîner une défaillance du produit ou des blessures aux personnes.


**IMPORTANT:** Avant l'installation, assurez-vous que vous avez reçu toutes les pièces selon la liste de vérification des composants. Si une pièce est manquante ou endommagée, téléphonez à votre distributeur local pour qu'il la remplace.

**MAINTENANCE:** A intervalles réguliers (au moins tous les trois mois) vérifiez que le support est d'utilisation sûre et fiable


## PACKAGE CONTENTS

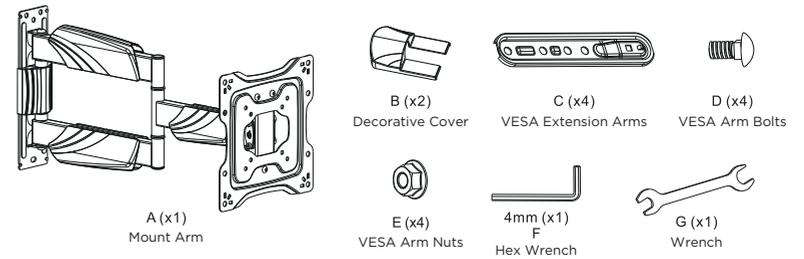

## VESA MOUNTING HARDWARE

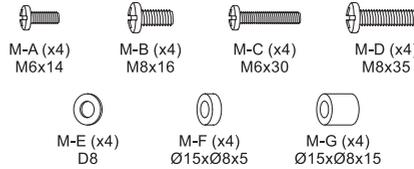

## WALL MOUNTING HARDWARE

 


Check carefully to make sure there are no missing or defective parts. Some hardware provided may not be used. Use the correct mounting hardware suitable for your installation.

**CHOKING HAZARD.** Package includes small parts. Not for children under 3 years. Adult supervision is required.

**Missing Parts? Call us at (855) 925-5668 and we will ship replacement parts free of charge.**

## DIMENSIONS & WEIGHT CAPACITY

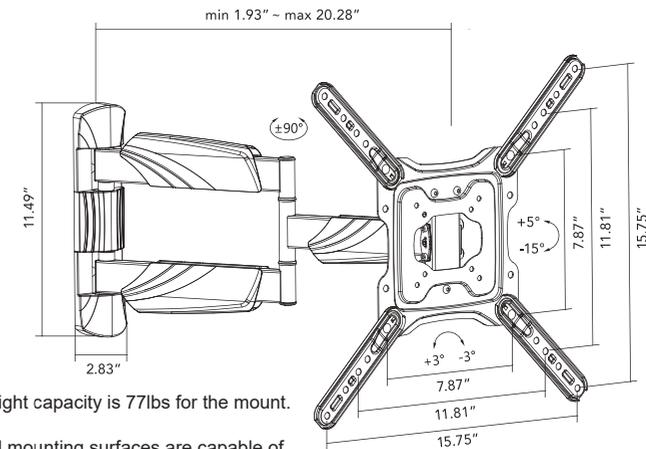

Rated weight capacity is 77lbs for the mount.

**Caution:**

Ensure all mounting surfaces are capable of holding the weight of your mount.

**DO NOT EXCEED MAXIMUM LISTED WEIGHT CAPACITY.**


**SERIOUS INJURY OR PROPERTY DAMAGE MAY OCCUR!**



## Step 1

### Remove the Decorative Cover


- Remove the preinstalled decorative cover from the middle of the wall bracket on Mount Arm (#A) to allow access to the bolt hole beneath.

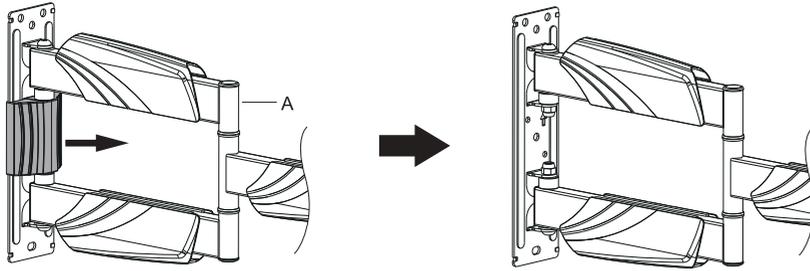

## Step 2

### Remove the VESA Plate




- As shown in the diagram, loosen the top two nuts on the rear of the VESA plate, and remove the single nut on the lower half (save this nut for the reinstallation of the plate later.) Lift the VESA plate up and off of the Mount Arm (#A).

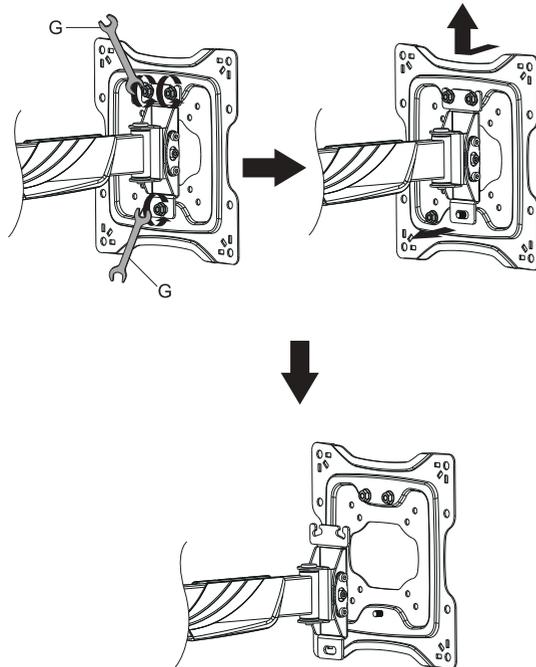

## Step 3





### A. Wood Stud Installation Option

 - Using a stud finder locate the stud and center the Mount Arm (#A) on the stud at the desired height. Use the Bubble Level (#F) to ensure straightness and mark the center of the 3 mounting holes indicated here with a pencil.
- Use a 3/16" drill bit and drill on the marked locations to a depth of 2.2". Secure the Mount Arm (#A) to the wall using 3 Lag Screws (#W-A) and Washers (#W-C). Tighten the screws until secure.

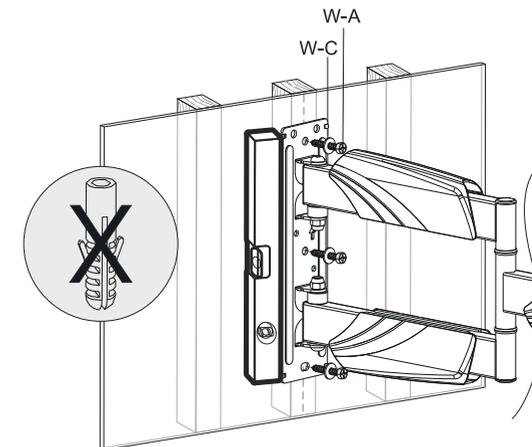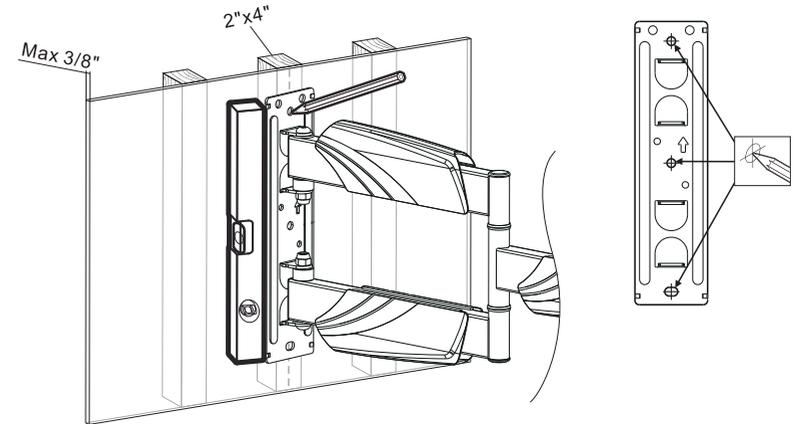

## B. Concrete/Brick Mounting Option

  
- Use a bubble level to ensure straightness and hold the Mount Arm (#A) to the desired location on the wall. Mark the center of the 4 mounting holes indicated here with a pencil.
- Use a 3/8" drill bit and drill on the marked locations to a depth of 2.4". Clear any dust and debris from the holes and insert the Concrete Anchors (#W-B). Secure the Mount Arm (#A) to the wall using Lag Screws (#W-A) and Washers (#W-C). Tighten the screws until secure.

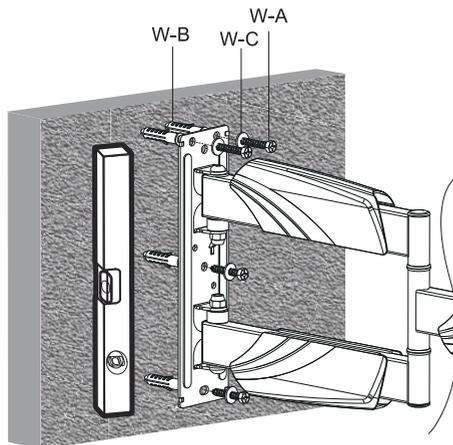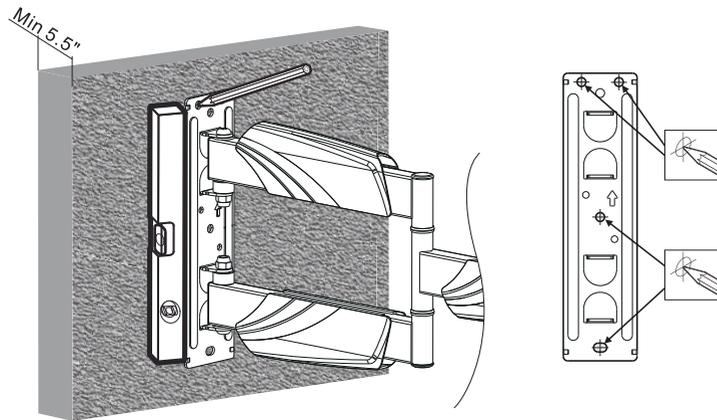

## Step 4

### Install the Decorative Covers

- Reinstall the middle cover removed in step 1.
- Install the Decorative Covers (#B) on the top and bottom of the wall bracket.

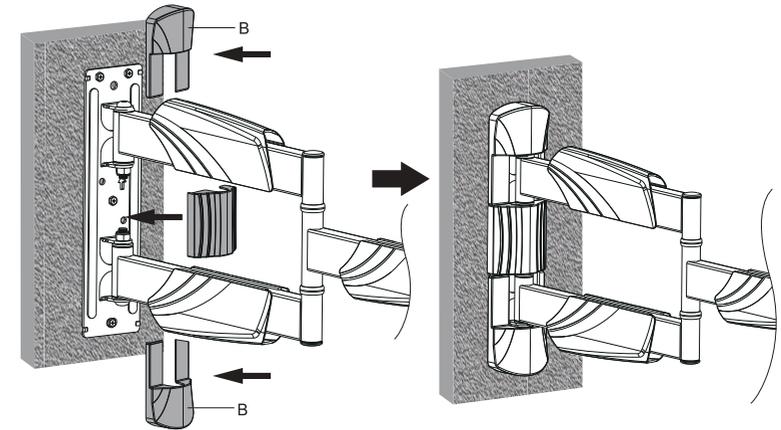


## Step 5


### Optional Installation of the VESA Extension Arms

- For TVs with a VESA pattern greater than 200x200, the use of the VESA Extension Arms (#C) will be required. Follow the orientation shown in diagrams 5a, 5b, or 5c for the configuration that matches your TV. Secure the Extension Arms to the VESA Plate using the VESA Arm Bolts (#D) and VESA Arm Nuts (#E). Ensure that they are tightened until secure.


5a VESA 300x300, 400x400

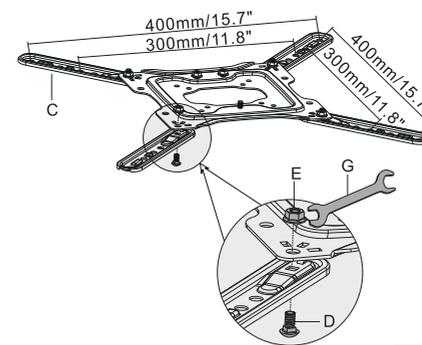

5b VESA 400x200, 300x200

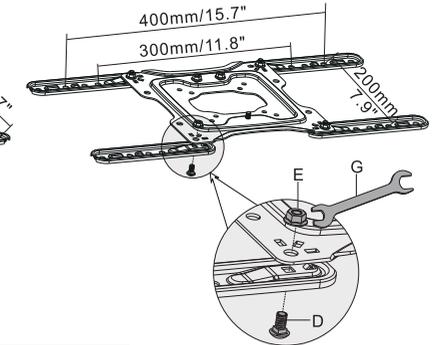

5c VESA 400x300



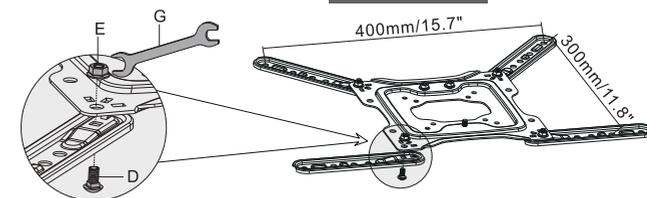


## Step 6

### Attach the TV

• Select the appropriate size mounting bolt (Select one size #M-A, M-B, M-C, or M-D) and washer (#M-E) for your display's mounting holes and verify the length of the VESA bolt is not too long. If you are unsure of the correct bolt size for your display refer to your display's user manual or contact the display's manufacturer for sizing information. If necessary, use the included spacers (#M-F, M-G) between the mount and the screen as shown above to adjust the length of the mounting bolt. Multiple spacers can be used in combination to achieve the desired bolt depth.


 
• Attach the VESA Plate using the selected bolts in the orientation shown here and tighten until secure. Do not over tighten.

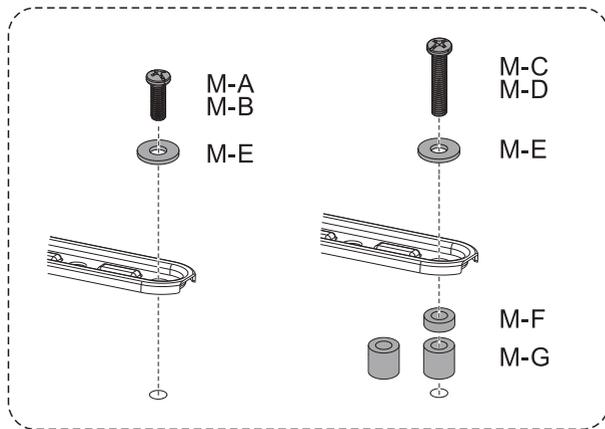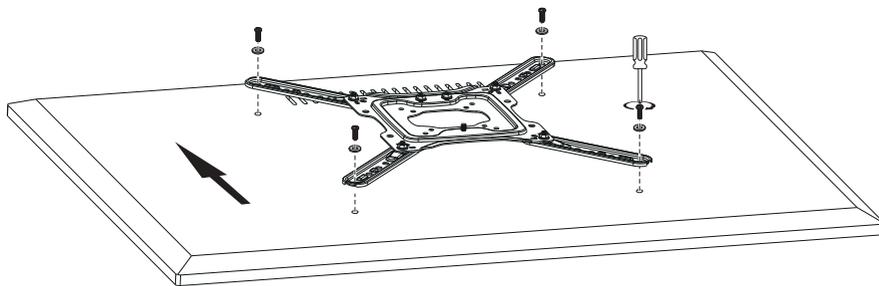

## Step 7

### Hang the TV on the Wall Mount

 
1. Hang the TV back on the end of the Mount Arm by hooking the top two bolts into the slots on top of the arm.
2. Use a bubble level to ensure the TV is level, then tighten the two nuts on the top back down using the Wrench (#G).
3. Reinstall and tighten the lower nut removed in step 2 using the Wrench (#G).

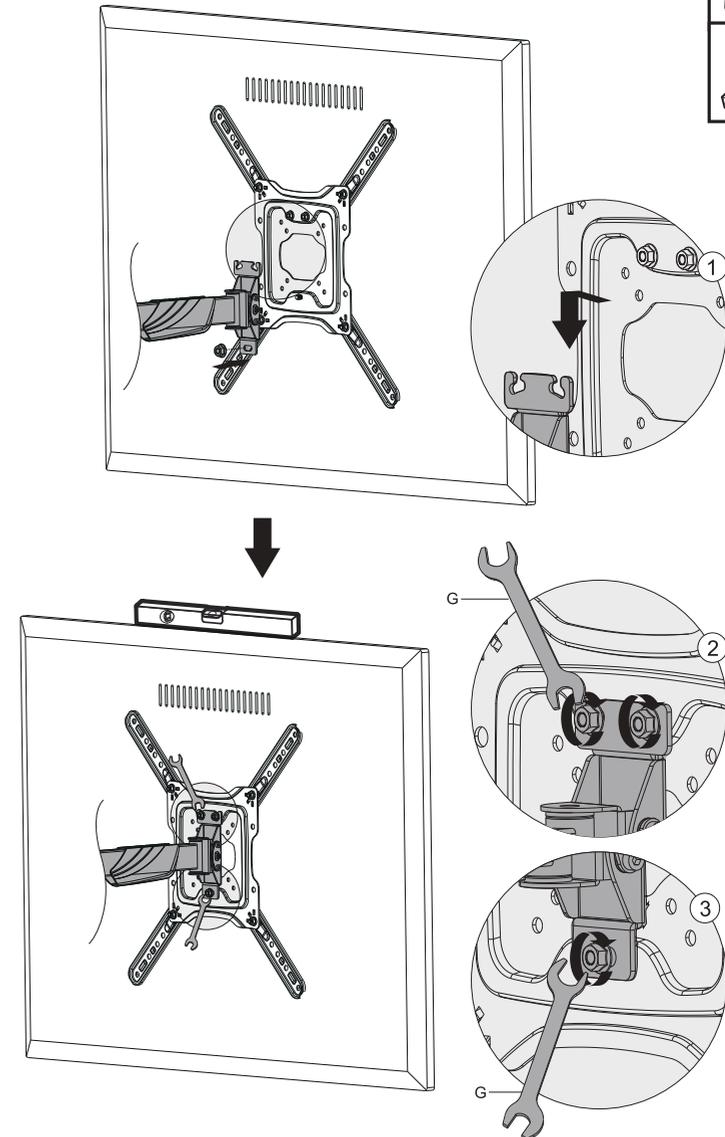

## Step 8

### Cable Management


- Route the cables through the cable clips on the underside of the arm segments.

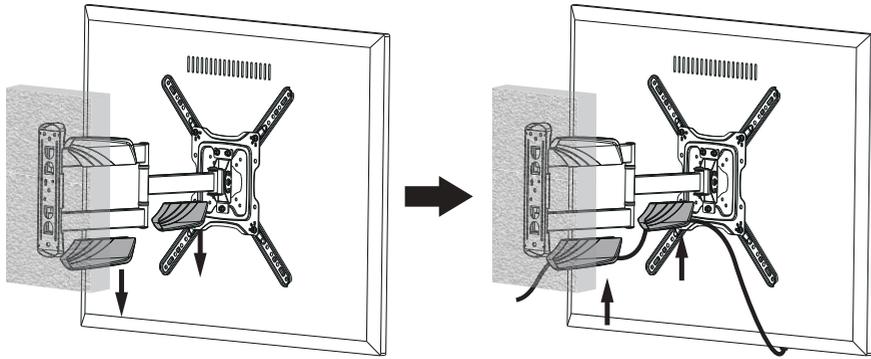

## Step 9

### Tilt Adjustments


- To adjust the tilt of the screen loosen the bolt on the side the mount (indicated in the magnification bubble) using the Hex Wrench (#F) then tilt the screen to the desired angle and tighten the bolt back down.

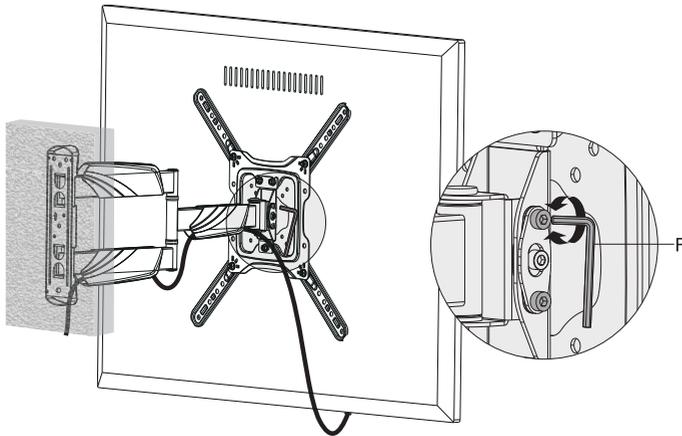

## Step 10

### Final Adjustments

- Each arm joint can be turned 180° to fold and extend the arm.
- The screen can be leveled +/- 3°
- The screen can be tilted up and down +5°/-15°

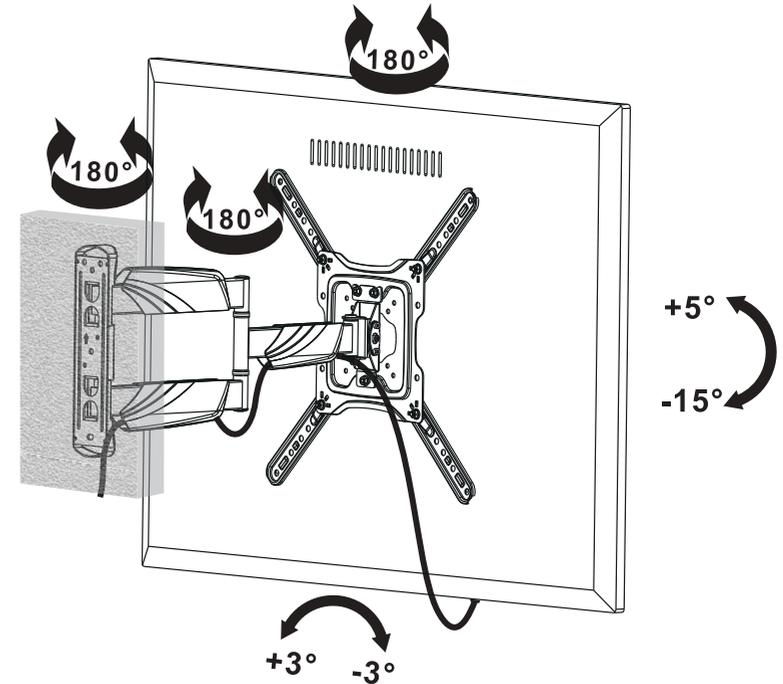

Visit us at [www.mount-it.com](http://www.mount-it.com) for product registration and warranty information.

---

Our US based customer service team is standing by to answer any questions you have about your Mount-It! product.

Available by phone **Monday - Friday from 8:00am to 4:00pm** PST.

*Chat live with an agent on our website!*



[support@mount-it.com](mailto:support@mount-it.com)



(855) 925-5668



[www.mount-it.com](http://www.mount-it.com)