


# CD-6 COMPACT DRYER

User Manual

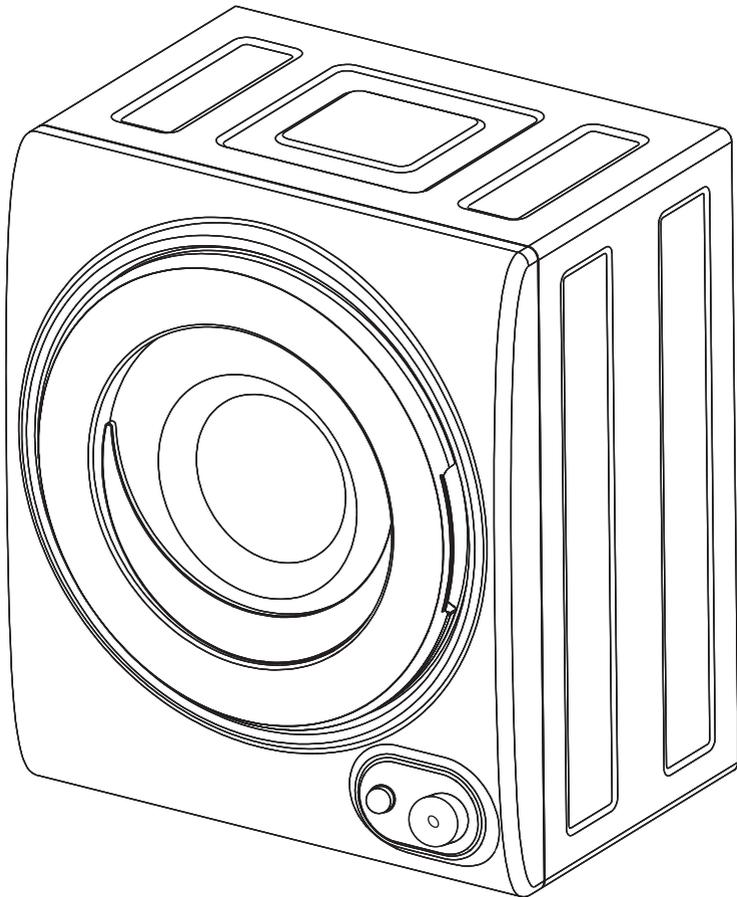

[support@homyd.com](mailto:support@homyd.com)



1-833-632-0897(US)



# Contents

Important Safety Instructions	01
Key Components and Structure	05
Touchscreen Panel Introduction	07
Set up the Dryer	09
<b>CLEANING YOUR DRYER</b>	<b>11</b>
FAQs	13
Troubleshooting	14
Specs	15
Warranty Policy	16

# IMPORTANT SAFETY INSTRUCTIONS

 FOR INDOOR HOME USE ONLY. READ ALL INSTRUCTIONS BEFORE USE

 Read and review the instructions to understand the operation and use of the product.

 This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the appliance by a person responsible for their safety.

1. **DO NOT** allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
2. **DO NOT** place open flame sources, such as candles, on the appliance.
3. **DO NOT** place the appliance or cord near heat sources such as radiators, heaters, air ducts or direct sunlight.
4. **DO NOT** block any of the ventilation openings. Ensure that vents are not covered by newspapers, tablecloths, curtains, etc.
5. **DO NOT** run the cord under floor coverings. Instead, arrange the cord away from areas with high traffic where it will not become a trip hazard.
6. Please disconnect the appliance, turn the appliance off, switch off the power outlet and remove the plug from the power outlet.
7. **DO NOT** misuse the cord. Never carry the appliance by the cord or pull on it to disconnect it from the outlet. Instead grasp the plug and gently pull to disconnect.
8. **DO NOT** operate the appliance if it has a damaged cord or plug; if the appliance malfunctions; or if it has been dropped or damaged in any way. Consult the manufacturer.
9. **DO NOT** attempt to repair, disassemble or modify this appliance. The warranty becomes void if not serviced or repaired by a qualified person.
10. **DO NOT** reach into the appliance if the drum is moving.
11. Before putting items that have been soiled by flammable liquids into the dryer, please wash them thoroughly with detergent in advance.
12. **DO NOT** excessively bend, stretch, twist or bind the power cord or place heavy objects on it.
13. This appliance is only to be serviced by a qualified person. There are no user-serviceable parts inside.
14. **DO NOT** install in a tight-fitting cabinet.
15. **DO NOT** overload the tumble dryer.

16. **DO NOT** dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they give off vapors that could ignite or explode.
17. Before the appliance is removed from service or discarded, remove the door to the drying compartment.
18. **DO NOT** install or store this appliance where it will be exposed to direct sunlight.
19. **DO NOT** tamper with the controls.
20. **DO NOT** repair or replace any part of the appliance or attempt any servicing unless specifically recommended to do so in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
21. **DO NOT** use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product.
22. **DO NOT** use heat to dry articles containing foam rubber or similarly textured rubber-like materials.
23. Keep area around the exhaust opening and adjacent surrounding areas free from the accumulation of lint, dust, and dirt.
24. The interior of the appliance and exhaust duct should be cleaned periodically by a qualified service person.
25. **DO NOT** place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could be a fire hazard.
26. Ensure that foreign objects do not find their way into the tub of the tumble dryer.
27. Clean the lint screen before or after each load

## **WARNINGS**

1. Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. This oxidation creates heat, and if the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and become a fire hazard.
2. If it is unavoidable that fabrics containing vegetable or cooking oil, or items that have been contaminated by haircare products are placed in a tumble dryer, they should first be washed in hot water with extra detergent. This will reduce, but not eliminate, the hazard.
3. **DO NOT** dry unwashed items in the tumble dryer.
4. Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

5. Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
6. The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that won't damage the items.
7. **NEVER** stop a tumble dryer in the process of the drying cycle unless all the items are quickly removed and spread out so that the heat is dissipated.



This dryer cannot be used upside down.

8. Installation of the clothes dryer must be performed by a qualified installer.
9. Install clothes dryer according to the manufacturer's instructions and local codes.
10. **DO NOT** use plastic ventilation ducts other than those provided by the manufacturer. If flexible metal (foil type) duct is installed, it must be of a specific type identified by the appliance manufacturer as suitable for use with clothes dryers. Flexible venting materials are known to collapse, be easily crushed, and trap lint. These conditions will obstruct the clothes dryer's airflow and increase the risk of fire.
11. To reduce the risk of severe injury or death, follow all the installation instructions.
12. Connect to individual branch circuit.
13. This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current. This appliance is equipped with a cord having an equipment-grounding conductor and grounded in accordance with all local codes and ordinances.
14. Improper connection of the equipment conductor may cause electric shock. Check with a qualified electrician or service representative if you are not sure as to whether the appliance is properly grounded. **DO NOT** modify the plug provided with the appliance: if it does not fit the outlet, have a proper outlet installed by a qualified electrician.

## Usage Instructions

15. This device can be used by persons with reduced physical, sensory or mental abilities or lack of experience and knowledge. However, they must be supervised or instructed on safe use and must understand the hazards involved.
16. **DO NOT** add clothing while the device is running.
17. Make sure all pockets are empty, zip or button clothes, and turn them inside out before putting them in the dryer.
18. **DO NOT** put items stained with substances such as cooking oil, acetone, alcohol, gasoline, kerosene, stain removers, turpentine, wax, and wax removers directly into the tumble dryer.
19. Put the appropriate amount of clothes to be dried in the dryer at one time.


20. Before starting the device, check whether the clothes are stuck in the doorway and ensure the dryer door is closed correctly.
21. Dark clothes should be dried separately from light clothes to prevent cross-color contamination.
22. Before drying, check that the stains on the clothes have been removed; otherwise, the heat of the dryer may cause the stains to remain permanently.
23. Clothes of similar fabrics should be dried together. It is recommended to put delicate and small clothes in a mesh bag and avoid overloading the dryer for best results. The maximum drying capacity of the dryer is 2.5 kg, so **DO NOT** overload it. The dryer is only suitable for drying textile materials that have been washed in water.
24. **DO NOT** use the dryer to dry bras with underwires to avoid damage to the device or clothing.
25. When changing the direction of rotation, the dryer may pause for a few seconds. This is normal and helps to evenly heat and prevent clothing from tangling.
26. **DO NOT** add other clothes to be dried during the drying process. This may cause the clothes to tangle and cause uneven drying.
27. Drying time may vary depending on factors such as material, fluffiness, dryer capacity, etc.
28. Please remove the clothes immediately after drying and fold or hang them. Iron the clothes if necessary.
29. **DO NOT** touch the outlet during the drying cycle due to high temperatures.


## Maintenance and Cleaning

30. Unplug the power cord before cleaning. The lint filter must be installed every time you dry. The lint filter must be cleaned before each use.
31. **DO NOT** use thinners, gasoline, or alcohol.
32. **DO NOT** use harsh or abrasive cleaners, which may damage the dryer.
33. **DO NOT** use any type of spray cleaner when cleaning the interior.
34. Regularly check the power cord for wear or damage. If you find any problems, please replace the power cord promptly or contact customer support.
35. **DO NOT** clean the dryer with water.
36. Clean the air intake filter regularly.

# KEY COMPONENTS AND STRUCTURE

- ① Door with Transparent Window
- ② Sealing Rubber Gasket
- ③ Drum
- ④ Lint Filter
- ⑤ Air Intake Filter
- ⑥ Control Panel
- ⑦ Timer Selector Knob
- ⑧ Heat Selector Knob
- ⑨ Exhaust Outlet
- ⑩ Back Cover

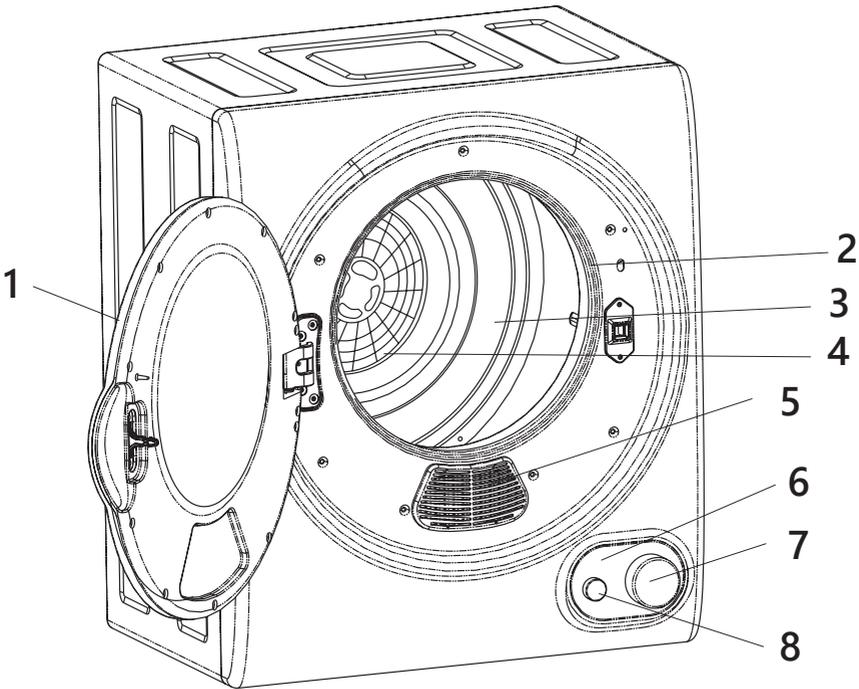

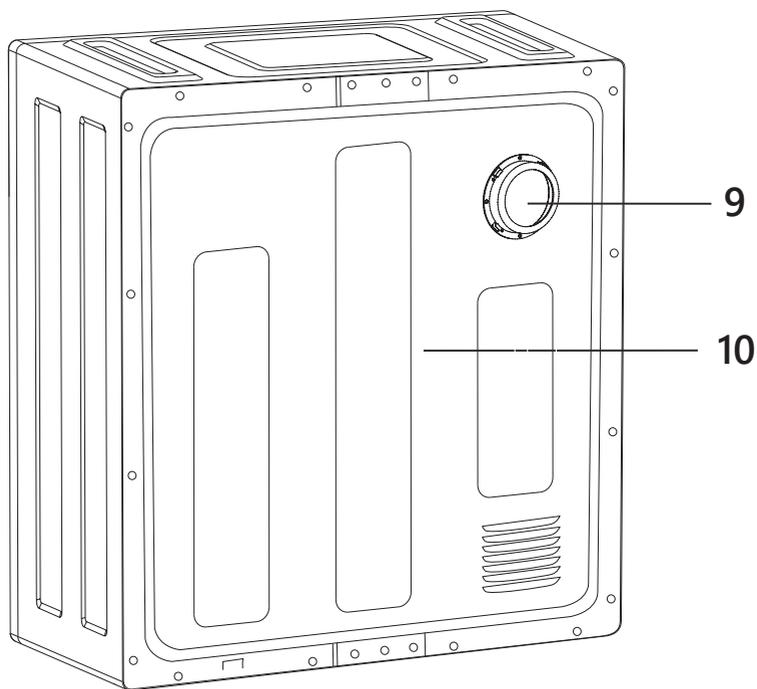

---

## Accessories



Clamp x 1



Hanging Brackets x 2



Plastic Spacers x 2



Exhaust Connector x 1



Exhaust Tube x 1





12mm-long Screws x 4



25mm-long Screws x 4

# TOUCHSCREEN PANEL INTRODUCTION

 LOW  
 HIGH

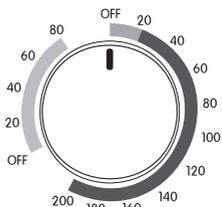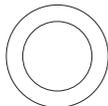

## "Heat Selector" Knob

Press to switch the machine's heat.

Select "**Low**" for delicate items such as silk, nylon, linen, etc.

Select "**High**" for items that are particularly bulky or large quantities.

## "Drying Timer" Knob

There are five drying combinations available: Cool, Anti-wrinkle, Warm, Hot, and Air dry.

Each mode corresponds to a specific **color-coded dial region and heat selector knob setting**, helping users select the optimal program based on fabric type and drying needs.

### A: OFF

When the "Drying Timer" dial is set to the '**OFF**' position, the unit is not powered.

To start the dryer, simply turn the dial clockwise to your desired drying time or program - the dryer will begin operating immediately.

### B: Air Dry:

**Dial Position:** Green-colored area

**Heat Selector Knob:** Not pressed (set to **Low**)

This function uses cool air only and is ideal for freshening up clothes that have been stored for an extended period or that simply need air circulation rather than heat. It helps remove musty odors and refresh garments without exposing them to high temperatures.

### C: Cool Down Function:

**Dial Position:** Blue-colored area

**Heat Selector Knob:** Not pressed (set to **Low**)

This function is typically used to cool items that have just been dried, helping to prevent wrinkles and creases.

During this cycle, the dryer stops producing heat. Instead, it circulates cool air through the drum to gently lower the temperature of your laundry.

**D: Anti-wrinkle Function:**

**Dial Position:** Red-colored area (30-60 mins)

**Heat Selector Knob:** Not pressed (set to **Low**)

This program is ideal for items that are difficult to iron, such as cotton shirts and linen. Set the **drying timer between 30-60 minutes** depending on the load size.

Once the timer finishes, including the **Cool Down** phase, the clothes will retain slight moisture, making ironing easier and more effective.

**E: Warm Drying Function:**

**Dial Position:** Red-colored area (60-120 mins)

**Heat Selector Knob:** Pressed (set to **High**)

Depending on the fabric type, this function is designed to dry and cool items, often leaving them wrinkle-free, .

Set the drying timer between **60-120 minutes** to ensures effective drying while helping reduce wrinkles for most materials.

**F: Hot Drying Function:**

**Dial Position:** Red-colored area (120+ mins)

**Heat Selector Knob:** Pressed (set to **High**)

For drying large quantities or bulky items (the dryer drum is more than 1/2 full).

Set the drying timer for more than **120 minutes** to ensure thorough drying for heavier loads.

# Set up the Dryer

## 1. Unpack and Inspect

Remove all external and internal packaging, including the carton, foam padding, and the protective foam inside the machine. Check if all accessories are included. If anything is missing, please contact Customer Service (*email support@homyd.com or call us at +1-833-632-0897*).

## 2. Prepare the Dryer


Remove all tape and adhesive strips from the machine; remove the accessories inside. Clean the interior cabinet with a damp cloth.

## 3. Position the Dryer





A. Place the machine in a well-ventilated area, and place it horizontally on a flat surface away from direct sunlight and heat sources (such as stoves, furnaces, and radiators). Ensure that there is at least **15 cm (about 6 inches)** of clearance between the air outlet and any obstructions.

B. Position the Dryer on the wall steps:

- Determine the dryer position on the wall and mark the required bracket position.
- Fix the wall hanging brackets/hooks (2 supplied) to the wall securely (e.g., into the stud). If it is too wide (more than 450mm), fit a timber slat between the studs to mount the brackets onto the stud position.

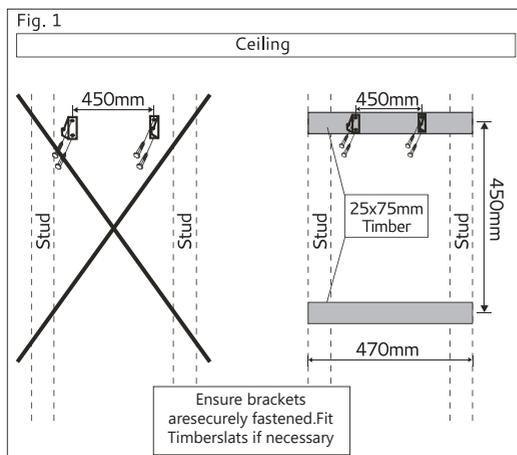

- c. To install the hanging brackets to timber, start at Fig 2.
  - d. Align hanging brackets and fasten 25mm long screws(provided) tightly. Fig 2.
  - e. Please adjust the direction of the exhaust connector, then match the exhaust connector to the connector. Please refer to Fig 3.
  - f. Turn the exhaust connector clockwise until it inserts into the connector's groove.
  - g. Use the 4 X 12mm screws (provided) to fix the 2 spacers as per Fig 4.
  - h. With assistance, mount the dryer on the wall bracket. See Fig.5.
- \* For easy installation, a minimum of 50mm is needed between the top of the dryer and the ceiling.
- \*The dryer cannot be used upside down.

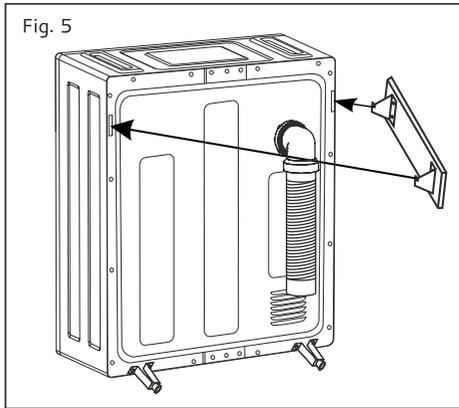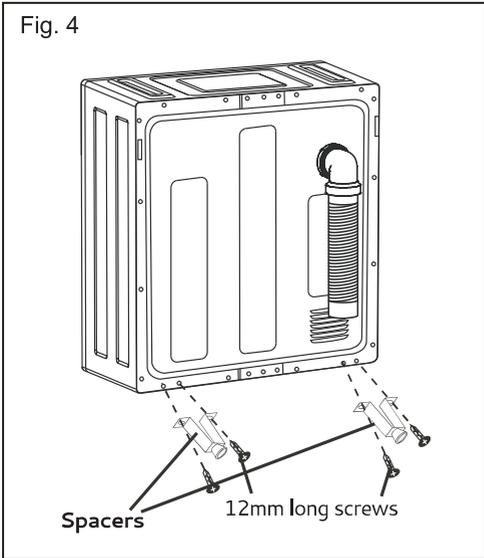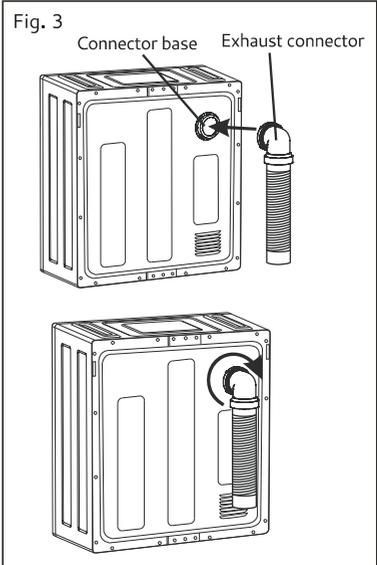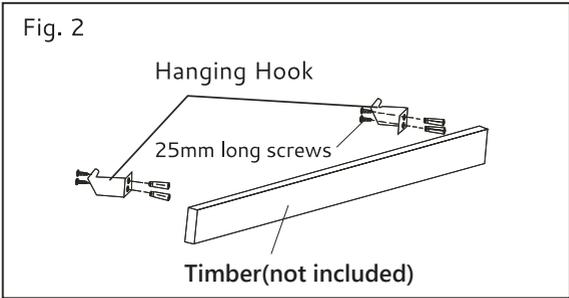

## 4. Plug Accessibility

Place the device where the plug can be easily inserted, and ensure the machine is grounded before use.

### Note: Grounding Method

For safety reasons, this product must be grounded. Use the provided grounding plug and plug into a compatible grounding outlet. If not, contact a qualified electrician for installation.

# CLEANING YOUR DRYER

## 1. Daily Cleaning


Clean all parts that come into contact with clothes, especially the lint filter. Here are the detailed steps for cleaning:

### Note:

*Before cleaning, be sure to disconnect the power supply.*


### Remove the Filters

Hold the lint filter and gently twist it from side to side. Then, pull it outward with your fingers and align it with the four holes around the exhaust mask to remove it. (Shown in Fig 1 below)

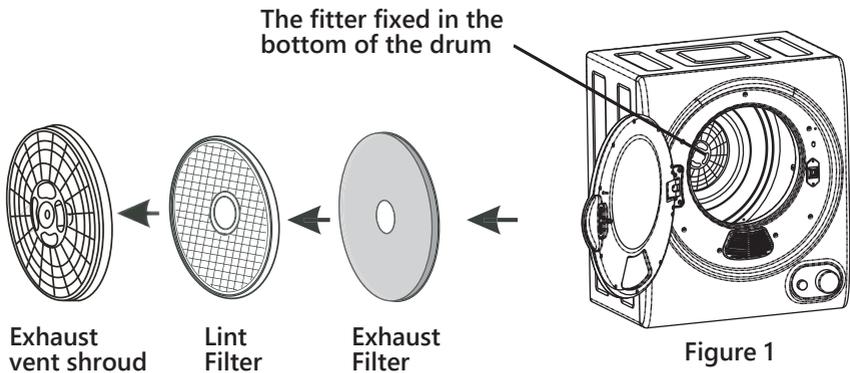

### Clean the Filters

Separate the 'exhaust vent shroud,' 'lint filter,' and 'exhaust filter.' Use a soft brush or vacuum cleaner to remove lint from the lint and exhaust filters. Avoid damaging the filters. ( Shown in Fig 2 below)

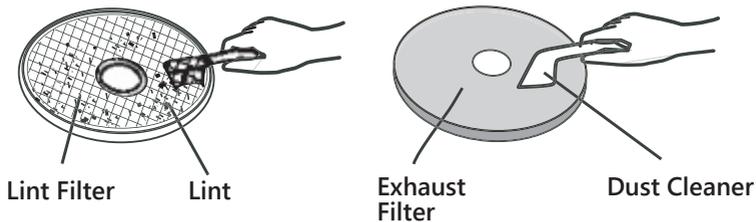

### Reinstall the Filters

After cleaning, reinstall in the following order: 'Exhaust Filter → Lint Filter → Exhaust Vent.' Align the center groove in the filter with the icon on the drum can and ensure it is inserted correctly at the front. ( Shown in Fig 3 below)

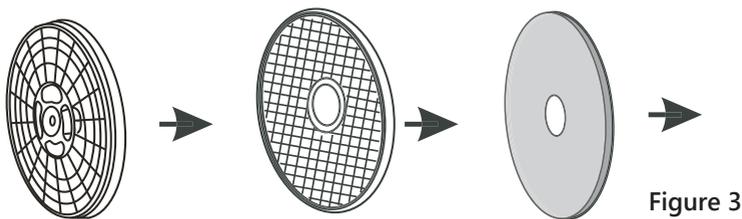


Figure 3

*The filter fixed to the bottom of the drum should also be cleaned with a soft brush.*

## 2. Deep Cleaning

The air intake filter should be cleaned at least once a month.

### Cleaning method:

Hold the top and bottom of the air intake shroud and pull outward to remove it.

Take out the filter inside the shroud and clean it with a soft brush.

Reassemble and reinstall it in the same way as before.

Regularly cleaning the filter can ensure drying efficiency, keep the dryer clean, prevent clogging, and extend the service life of the machine.

We recommend cleaning the lint filter **after each use**. In addition, the air intake filter and the dryer's interior surfaces that come into contact with clothes should be thoroughly cleaned **at least once a month**.

## CORRECT DISPOSAL OF THIS PRODUCT



When the unit is taken out of service, its disposal and the handling of its materials must comply with national regulations.

# FAQs

## 1. How do I clean the filter?

-Remove the whole filter.

Separate "exhaust vent shroud", "lint filter", and "exhaust filter".

Remove/clean the lint on the lint filter with a soft brush or vacuum cleaner.

-Remove the exhaust vent shroud and exhaust filter.

After rinsing with warm water, let it dry to ensure it is completely dry before installing it back into the dryer.

## 2. What are the Dryer Capacity Specifications?

The capacity of this dryer is as follows:

-Dry clothes Capacity: 5.5 LBS.

-Wet clothes Capacity: 8.8 LBS.

## 3. Why does the dryer drum pause for a few seconds and then change direction?

This is normal. It's to ensure even heating of clothes and to prevent them from tangling.

## 4. Will this dryer hold blankets and comforters?

Yes, you can use the **'Hot Drying'** mode for blankets and comforters but do not exceed the dryer's maximum load capacity.

## 5. Can I put the dryer in a cupboard with a lid?

We strongly advise against installing the dryer in enclosed cabinets. For optimal operation and safety, ensure adequate ventilation around the unit and avoid confined spaces that might restrict airflow.

## 6. What is the maximum temperature when the machine is running?

The maximum temperature is 140 °F.

## 7. Where are the vents located?

The dryer's exhaust vent is located at the upper right corner of the unit's back panel.

## 8. Can the machine be used on its own without the exhaust pipe attached?

The machine cannot be used independently without the exhaust pipe attached. The exhaust pipe is essential for the machine's proper operation and ventilation.

# TROUBLESHOOTING

Problem	Possible Causes	Solution
<b>Noise</b>	The dryer is not placed horizontally or mounted in balance.	Please check and make sure that the dryer is placed horizontally or mounted in balance.
	The dryer shell is deformed during transportation.	Please contact the after-sales team for assistance.
	The internal structure is loose.	Please contact the after-sales team for assistance.
<b>Dryer does not start</b>	There may be a power failure.	Try again when there is power.
	The power plug is not inserted firmly.	Insert the power plug firmly.
	The door is not closed properly.	Ensure the door is completely closed.
<b>Drum does not turn</b>	The power plug is loose.	Please check and insert the power plug firmly. If it does not resolve the issue, please check if the display still works and contact the after-sales team for assistance.
<b>The laundry is not thoroughly dried</b>	The front and back filters are clogged.	Clean the filter.
	There are too many items in the dryer.	Avoid overloading (fill drum to half capacity maximum).
	Items have been added whilst the dryer was in operation.	Re-dry the items again
	The laundry was twisted whilst drying.	Untangle the items and re-dry.
	The dryer is placed in a small and badly ventilated area.	Place the dryer in a well-vented area.
<b>Automatic Shutdown</b>	Too many continuous drying times.	Please unplug the dryer for 2 hours and then retry by inserting the plug. If that does not resolve the issue, please check whether the vent in the back is blowing cold or hot air and contact the after-sales team for assistance.

<b>Water Leakage</b>	Clothes are moist before being put into the dryer.	Before putting the clothes in the dryer, they need to be spun dry in the washing machine.
	The air outlet is not facing down.	Ensure that the air vents are facing downward to avoid condensation buildup and back flow.
<b>Parts Missing or Need to be Replaced.</b>	Any parts missing or broken.	Please contact the after-sales team for spare parts.
	The filter wool needs to be replaced.	

## SPECS

Specification	Value
SKU	CD001-150WH-USZX
Model	CD-6
Rated Input	850W
Voltage/Frequency	120V/60HZ
Drying Capacity	5.5LBS
Wet Clothes Capacity	8.8LBS
Product Dimensions	19.5*16.1*23.2 inch
Net/Gross Weight	36.6/42.77 LBS

# WARRANTY POLICY

## 1-Year Limited Warranty

**Toll-Free Call: 1-833-632-0897(US) Mon to Fri, 9AM - 6PM ( ET )**

**Email: [support@homyd.com](mailto:support@homyd.com)**

Thank you for choosing our products. We provide a 1-Year Limited Warranty for items purchased through our official channels. Please kindly note that this warranty is for the original purchaser and is non-transferable. If you purchase from an unauthorized seller, please get in touch with them directly.

We are committed to ensuring that our products are free from defects in materials and workmanship for one year from the date of purchase, as long as they are used under normal household conditions and maintained according to the User Manual. **Please note that certain conditions and exclusions apply:**

Should you find any defects in the original product or its non-wearable parts, we will be happy to repair or replace the item within one year of purchase. If a replacement is necessary, the warranty period will continue from the original purchase date. Please be aware that normal wear and tear or damage due to mishandling, accidents, or failure to follow instructions are not covered. However, replacement parts are available for purchase. Feel free to contact us for more information.

Please also note that this warranty does not cover damage caused by exposure to liquids or foreign materials, unauthorized repairs or modifications, or use in commercial or non-household environments (unless specified for commercial use).

If you encounter any issues with your product, we are here to help. You can reach us by phone at **1-833-632-0897(US)** or email us at **[support@homyd.com](mailto:support@homyd.com)**. For certain product categories, we also offer the option to upgrade your warranty to our VIP service.

Our friendly phone support team is available from **Monday to Friday, 9 AM - 6 PM (ET)**. To assist you more efficiently, please have your product with you when you call. We aim to respond to emails within 24 business hours. If you don't receive a reply after sending us an email within this time frame, kindly check your spam folder to ensure you don't miss our response.

In addition to the one-year warranty, we also offer lifetime technical support. After the warranty period, service is still available at an additional cost. Please don't hesitate to contact us with any questions or concerns.

**SKU: CD001-150WH-USZX**

**MODEL: CD-6**

