

COSTWAY®



USER'S MANUAL ROOF SNOW RAKE OP70425

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway

Visit us: www.costway.com











Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.



Before You Start

- Please read all instructions carefully.
- A Retain instructions for future reference.
- Separate and count all parts and hardware.
- A Read through each step carefully and follow the proper order.
- We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

A. BOX CONTENT:

Part I -- 1pc x (6.2'- 21') expendable aluminum handle with plastic adjustable part.

Part II -- 1pc x Snow rolling fabric with aluminum blade and plastic connection parts.

Part III -- 1pc x aluminum snow blade with small nuts hole



part I



Part II + part III

B. CAUTIONS:

Please wear working glove to assemble and be careful during assembling.

Keep your children away of the snow dropper.

Out box is able to be recycled.

C. ASSEMBLE INSTRUCTION:

1. Connect part I and part II:









- 2. Connect part II and part III
 - 2.1 screw down the nuts on part II



2.2 put part III on the plastic part of part II, try your best to insert the blade to the bottom of the plastic part.





2.3 (if necessary,) screw the nuts to be assured the connected part won't loosen.





3. Open the snow rolling fabric slowly and adjust the aluminum handle by your need.





4. How to use

- 4.1 Hanging on the snow dropper to your roof,
- 4.2 Put aluminum blade parts in snow,
 - 4.3 Shack your hands or wave the dropper up,
 - 4.4 Snow will drop by the rolling fabric
 - 4.5 After using, please keep all parts folded, easy to store.

HAVE FUN WITH SNOW!

Welcome to visit our website and purchase our quality products!

Your suggestions and comments for COSTWAY are really important to us! We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be guite encouraging if you could kindly do so like below:

★★★★ Great products so far

February 24, 2019

Great products so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana. California

UK office: Ipswich



- * Reward Points
- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History



We would like to extend our heartfelt thanks to all of our customers for taking time to assemble this product and giving us valuable feedbacks.





