



7" and 9" Portable DVD Players

**DX-P7DVD and DX-P9DVD**

# DX-P7DVD and DX-P9DVD

## Contents

|   |    |
|---|----|
| Welcome . . . . .                       | 3  |
| Important safety instructions . . . . . | 3  |
| Features . . . . .                      | 5  |
| Setting up your player . . . . .        | 9  |
| Using your player . . . . .             | 12 |
| Troubleshooting . . . . .               | 20 |
| Maintaining . . . . .                   | 21 |
| Specifications . . . . .                | 22 |
| Legal notices . . . . .                 | 22 |
| 90-day limited warranty . . . . .       | 25 |

## Welcome

Congratulations on your purchase of a high-quality Dynex product. Your DX-P7DVD or DX-P9DVD represents the state of the art in personal DVD player design and is designed for reliable and trouble-free performance.

## Important safety instructions

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with a dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not use near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 10 Only use attachments/accessories specified by the manufacturer.

- 11 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 12 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 13 To reduce the risk of fire or electric shock, do not expose this device to rain, moisture, dripping, or splashing, and no objects filled with liquids, such as vases, shall be placed on it.
- 14 The wall plug is the disconnecting device. The plug must remain readily operable.
- 15 Batteries should not be exposed to excessive heat such as sunshine, fire, or the like.

***Caution: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.***


## Discs

- Do not use irregularly shaped discs, such as heart-shaped or star-shaped discs, because they may cause your player to malfunction.
- Do not stick paper, tape, or glue on a disc.
- Do not expose a disc to direct sunlight or heat sources.
- Do not touch the surface of a disc. Handle a disc by its edge.
- Clean a disc by wiping the disc from the center out with a cleaning cloth.
- Remove a disc from your player and store it in its case after playing.
- Some playback operations of discs may be intentionally limited by software producers. Because your player plays discs according to the disc contents the software producers designed, some playback features may not be available. Also refer to the instructions supplied with the discs.

# Features


**Note:** For illustration purposes, the DX-P7DVD is shown in all examples. The DX-P9DVD is very similar in all features.

## Front

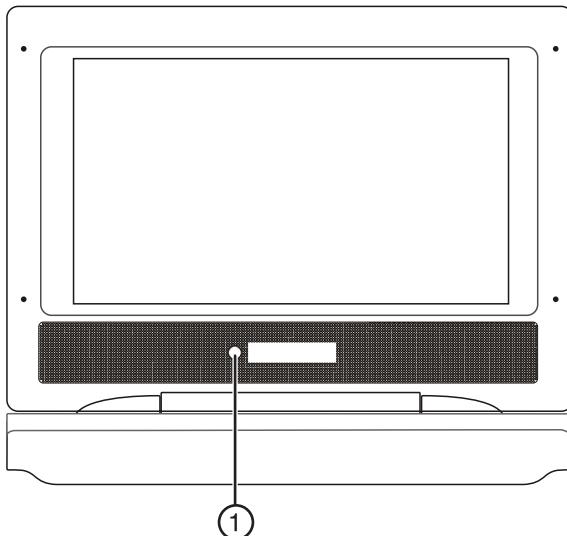


| # | Component             | Description   |
|---|-----------------------|---|
| 1 | Remote control sensor | Receives signals from the remote control. Do not block. |

## Left

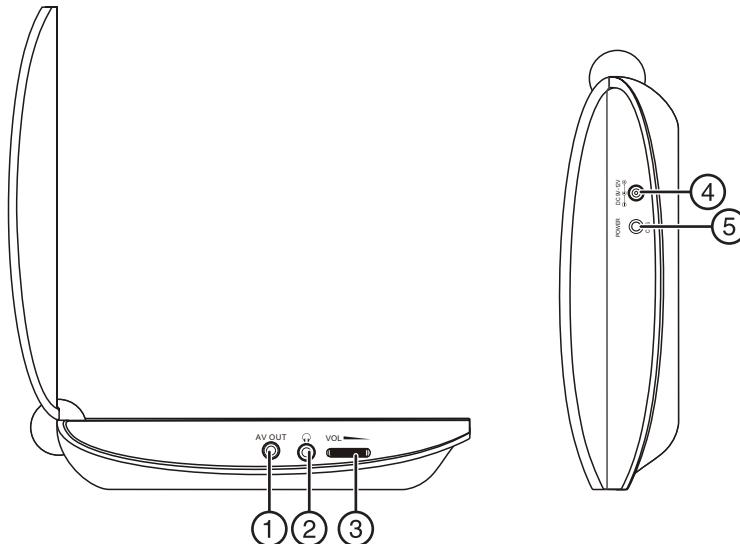


| # | Component                      | Description   |
|---|--------------------------------|---|
| 1 | AV OUT jack                    | Plug an A/V device, such as a TV, into this jack.   |
| 2 | Headphone jack                 | Plug headphones into this jack. When headphones are plugged in, sound does not come out of your player's speakers.  |
| 3 | Volume control                 | Rotate to increase or decrease the volume.  |
| 4 | DC input jack                  | Connect the wall power adapter or the car power adapter to this jack.   |
| 5 | Power/battery charge indicator | Lights green when your player is on and flashes green when the battery power is low. Lights red when the battery is charging and flashes red when you turn off your player and connect it to the car power adapter, which cannot be used to charge the battery. |

## Inside

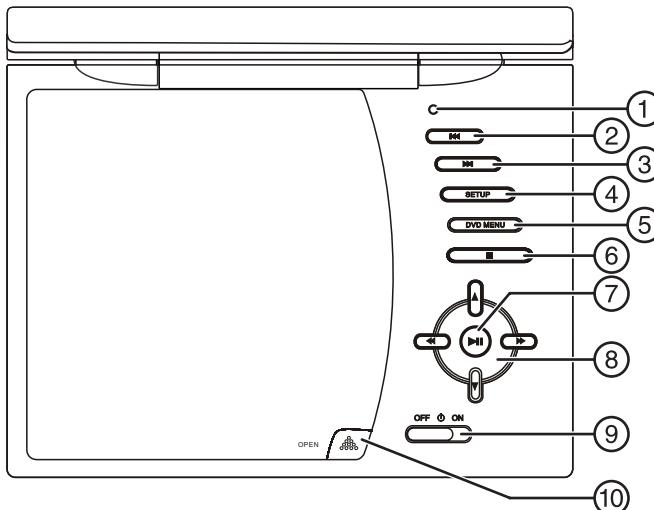

| #  | Component   | Description  |
|----|---|--|
| 1  | LCD screen shut-off button                                      | Press to turn off the LCD screen.  |
| 2  | ◀◀ (prev) button  | Press to go to the previous chapter, track, or scene during disc playback.   |
| 3  | ▶▶ (next) button  | Press to go to the next chapter, track, or scene during disc playback.   |
| 4  | <b>SETUP</b> button   | Press to open or close the <i>Setup</i> menu.  |
| 5  | <b>DVD MENU</b>   | Press to open the main DVD menu.   |
| 6  | ■ (stop)  | Press to stop disc playback.   |
| 7  | ▶▷ (play/pause) button  | Press to start or pause playback.  |
| 8  | ▲ or ▼ buttons<br>◀◀ (fast rev) button<br>▶▶ (fast fwd) buttons | Press to navigate up or down on a menu.<br>Press to fast reverse or navigate left on a menu.<br>Press to fast forward or navigate right on a menu. |
| 9  | Power On/Off switch   | Slide to turn your DVD player on or off.   |
| 10 | <b>OPEN</b> button  | Press to open the disc tray.   |

## Remote control

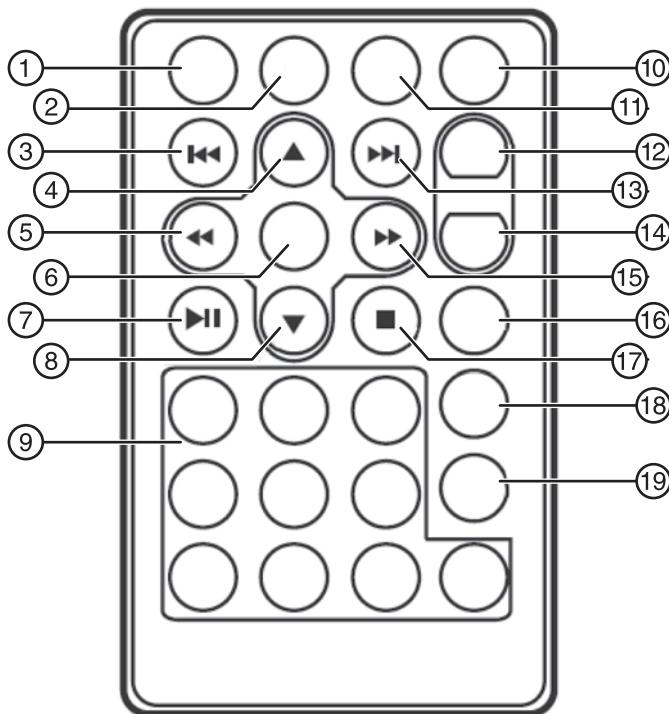

**Note:** The first time you use the remote control you must remove the film between the battery and the compartment cover to activate the remote control.

| # | Button                     | Description  |
|---|----------------------------|--|
| 1 | SETUP                      | Press to open or close the <i>Setup</i> menu.  |
| 2 | DISPLAY                    | Press to display information about the disc, such as title, chapter number, track number, and time.  |
| 3 | ◀ (previous)               | Press to go to the previous title, chapter, or track.  |
| 4 | ▲ (up)                     | Press to navigate up in a menu.  |
| 5 | ◀◀ (reverse)<br>/ ◀ (left) | Press to scan backward on the disc. Each time you press this button, the fast-reverse speed increases from 2, to 4, to 8, to 16, to 32 times the normal speed. In menu mode, press to navigate left on a menu. |
| 6 | ENTER                      | Press to execute or confirm a selection.   |
| 7 | ▶▶ (play/pause)            | Press to start playback. When a disc is playing, press to pause playback. Press again to resume playback.  |

| #  | Button                          | Description   |
|----|---------------------------------|---|
| 8  | ▼ (down)                        | Press to navigate down in a menu.   |
| 9  | Numbers                         | Press to select menu items or to enter the password.  |
| 10 | SUB (Subtitle)                  | Press to turn subtitles on and off, or press to select the subtitle language. This option works only if the DVD has subtitles.  |
| 11 | ZOOM                            | Press to enlarge the display image. You can enlarge the image for 2, 3, or 4 times the normal size.   |
| 12 | A-B (repeat)                    | Press to repeat a specific portion (from point A to point B) of a disc.   |
| 13 | ▶▶ (next)                       | Press to skip forward to the next chapter or scene on a DVD, or track on a CD.  |
| 14 | 1/ALL REPEAT                    | Press to repeat the current title, chapter, or track.   |
| 15 | ▶▶ (fast forward)/<br>▶ (right) | Press to fast-forward on the disc. Each time you press this button, the fast-forward speed increases from 2, to 4, to 8, to 16, to 32 times the normal speed. In menu mode, press to navigate right on a menu.  |
| 16 | MENU                            | Press once to open the main DVD menu. This option works only if the DVD has a main menu.<br>Press twice to open the DVD title menu or hold the button down for three seconds. This option works only if the DVD has a title menu.   |
| 17 | STOP                            | Press once to stop playback. Your player remembers where you stopped. If you press ▶▶ (play/pause), your player starts playing at the point where you stopped.<br>Press twice to stop playback. If you press ▶▶ (play/pause), your player starts playing at the beginning of the disc.<br><i>Note: When playing an audio CD, press STOP once to stop playback and return the player to the beginning of the CD.</i> |
| 18 | AUDIO                           | Press to select the DVD audio language. This option works only if the DVD has multiple audio languages.   |
| 19 | WIDE                            | Press to toggle the LCD display from 16:9 to 4:3 aspect ratio.  |

## Setting up your player

### Package contents


Your box should contain:

- DVD player with 7" or 9" LCD monitor
- Remote control with battery
- Wall power adapter (AC adapter)
- Car adapter
- A/V cable
- *Quick Setup Guide*

## Connecting to AC power

### To connect to AC power:

- 1 Plug one end of the AC to DC power adapter into the **DC** jack on the side of your player.

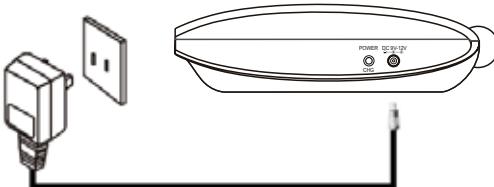

- 2 Plug the other end of the adapter into an AC outlet.

## Charging and using the built-in battery

### To charge and use the built-in battery:

- 1 Turn off the player. The battery charges only when the player is turned off.
- 2 Connect the supplied AC power adapter to the DC input jack on the player, then plug the adapter into an AC power outlet. When the battery is charging, the charge indicator LED turns red. When the battery is fully charged the indicator turns off.
- 3 Unplug the AC power adapter when the battery is fully charged, then you can use your player by using the built-in battery.

**Note:** During playback, an icon  appears on the screen, and the power indicator LED flashes green, which means the battery has low power and you should recharge the built-in battery now.

## Connecting to a 12V car power outlet

**Note:** The car power adapter cannot be used to charge the battery.

### To connect to a 12V car power outlet:

- 1 Plug one end of the car power adapter into the **DC** jack on the side of your player.



- 2 Plug the other end of the adapter into a 12V car power outlet or car cigarette lighter socket.
- 3 Turn off your player. The red charge indicator will flash, reminding you that the battery cannot be charged with the car power adapter.

## Connecting headphones

### To connect headphones:

- Plug headphones (not included) into the **Headphone** jack. When headphones are plugged into the **Headphone** jack, no sound comes from the built-in speakers.




## Connecting a TV or monitor or viewing photos

You can connect your player to a TV or monitor so you can watch DVDs or view photos on the TV or monitor.

### To connect a TV or monitor:

- 1 Plug the end of the supplied A/V cable that has one black connector into the **AV** jack on your player.

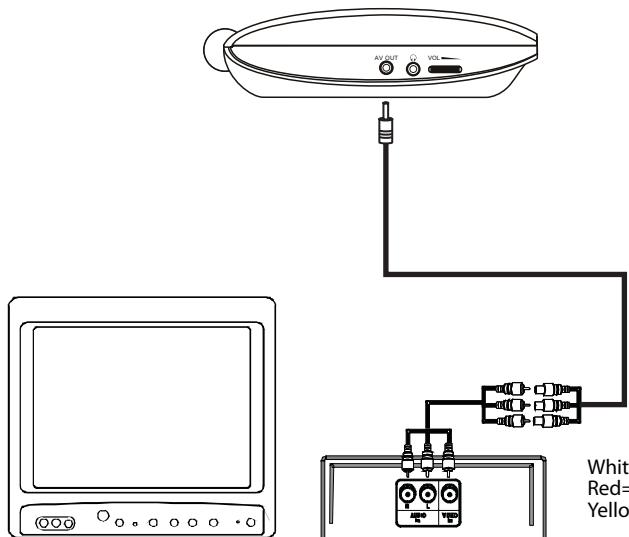

White=left audio  
Red=right audio  
Yellow=video

- 2 Plug the connectors on an RCA cable (not included) into the connectors on the other end of the supplied A/V cable. Make sure that the colors on the connectors match.
- 3 Plug the other end of the RCA cable into the A/V jacks on the TV or monitor. The white connector goes into the left audio jack. The red connector goes into the right audio jack. The yellow connector goes into the video jack.

## Using your player

### Playing a DVD or audio CD

*Note: Most DVDs and your player have region codes that help control illegal distribution of DVDs. The region code for your player is 1. You can only play DVDs with a region code of 1 or ALL. The region code for a DVD is printed on the DVD or the DVD packaging.*

#### To play a disc:

- 1 Make sure that your player is connected to power or that the battery is charged.
- 2 Slide the **ON/OFF** switch inside your player to the **ON** position.
- 3 Press the **OPEN** button inside your player. The disc tray opens.
- 4 Place a disc, label side up, in the disc tray, then close the tray. The disc starts playing automatically.

### Controlling DVD or audio CD playback

#### To control disc playback:

- Press **STOP** once to stop playback. Your player remembers where you stopped. If you press **►II**, your player starts playing at the point where you stopped.
- Press **STOP** twice to stop playback. If you press **►II**, your player starts playing at the beginning of the disc.

*Note: When playing an audio CD, press **STOP** once to stop playback and return the player to the beginning of the CD.*

- Press **►II** to pause playback. Press this button again to resume playback.
- Press **►►** to fast-forward on the disc. Each time you press this button, the fast-forward speed changes from 2 to 4 to 8 to 16 to 32 times the normal speed.
- Press **◀◀** to fast-reverse on the disc. Each time you press this button, the fast-reverse speed changes from 2 to 4 to 8 to 16 to 32 times the normal speed.
- Press **►►I** to go to the next title, chapter, or track.
- Press **◀◀I** to go to the previous title, chapter, or track.

### Adjusting the volume


#### To adjust the volume:

- Rotate the volume control on the left side of your player.

## Viewing DVD information

To view DVD information:

- 1 During playback, press **DISPLAY**. The following display appears.

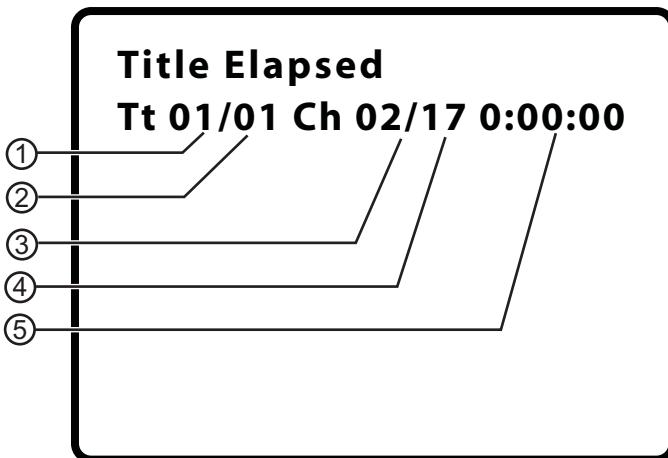

|   |   |
|---|---|
| 1 | Current title number.                       |
| 2 | Total number of titles.                     |
| 3 | Current chapter number.                     |
| 4 | Total number of chapters.                   |
| 5 | Elapsed playing time for the current title. |

- 2 Press **DISPLAY** one or more times to view specific DVD information. You can view:
  - **Title Elapsed**—Shows the elapsed playing time for the title.
  - **Title Remain**—Shows the remaining playing time for the title.
  - **Chapter Elapsed**—Shows the elapsed playing time for the chapter.
  - **Chapter Remain**—Shows the remaining playing time for the chapter.
  - **Display Off**—Turns off the information display.

**Note:** The information display automatically turns off if you do not press **DISPLAY** within three seconds.

## Viewing audio CD information

### To view audio CD information:

- 1 During playback, press **DISPLAY**. The following display appears.



- 2 Press **DISPLAY** one or more times to view specific audio CD information. You can view:
  - **Single Elapsed**—Shows the currently playing track and the elapsed playing time for the track.
  - **Single Remain**—Shows the currently playing track and the remaining playing time for the track.
  - **Total Elapsed**—Shows the currently playing track and the elapsed playing time for the CD.
  - **Total Remain**—Shows the currently playing track and the remaining playing time for the CD.
  - **Display Off**—Turns off the information display.

## Opening the DVD main menu

### To open the DVD menu:

- During playback, press **MENU**. If the DVD has a main menu, the menu opens.

**Note:** *Contents of DVD main menus vary from DVD to DVD. Some DVDs only let you start playback from the main menu.*


## Selecting a viewing angle

Some DVDs are recorded with multiple viewing angles for some scenes. When a scene has multiple viewing angles, the angle icon appears on the screen.

### To select a viewing angle:

- 1 Press **SETUP** to enter the *Setup* menu, then set Angle Mark to **ON**. See ““Using the *Setup* menu” on page 19 for more information.

2 During playback, press the number keys. The angle display appears showing the current angle and the total number of angles. In the following example, the current angle is 1 and the total number of angles is 3.

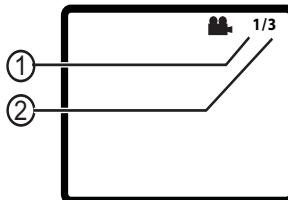

|   |                         |
|---|-------------------------|
| 1 | Current angle number.   |
| 2 | Total number of angles. |

3 Press the number keys to select a different viewing angle.

## Selecting an audio language

Some DVDs are recorded with multiple audio languages.

### To select an audio language:

- 1 During playback, press **AUDIO**. The audio display appears showing the current audio language and the total number of audio languages.
- 2 Press **AUDIO** one or more times to select the audio language you want.


#### Notes:

- *The audio language display turns off if you do not press **AUDIO** within three seconds.*
- *Some DVDs only let you select an audio language from the DVD main menu.*

## Enlarging the display image

### To enlarge the display image:

- 1 Press **ZOOM** one or more times to enlarge the display image from 2 to 3 to 4 times the normal image size. The zoom display appears.

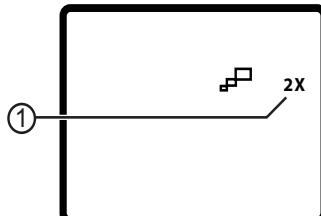

|   |                                |
|---|--------------------------------|
| 1 | Current amount of enlargement. |
|---|--------------------------------|


- 2 Press **ZOOM** a fourth time to return to normal viewing.
- 3 Press the arrow buttons to navigate through the enlarged image.

## Creating a playback loop

You can create a playback loop by selecting the beginning and end of the section of the disc that you want to play repeatedly.

### To create a playback loop:

- 1 During playback, find the starting point for the loop, then press **A-B**.

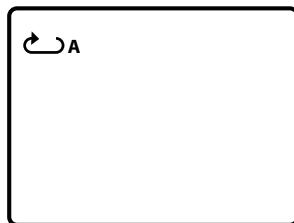

- 2 Play the disc until you reach the stopping point for the loop, then press **A-B**.



Your player repeatedly plays the loop you created.


- 3 To cancel the loop and return to normal viewing, press **A-B** again.



## Repeating a chapter, title, or DVD

### To repeat a chapter, title, or DVD:

- During playback, press **1/All REPEAT**. The following display appears, and your player repeats the currently playing chapter.

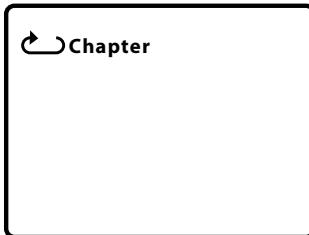

- Press **1/ALL REPEAT** twice to repeat the currently playing title.
- Press **1/ALL REPEAT** three times to repeat all the chapters and titles.
- Press **1/ALL REPEAT** four times to turn off the repeat function.

## Repeating a track or CD

### To repeat a track or CD:


- During playback, press **1/All REPEAT** one or more times to select:
  - Track**—Repeats the currently playing track.
  - All**—Repeats the entire CD.
  - Off**—Turns off the repeat function.

## Selecting a subtitle language

Some DVDs are recorded with subtitle languages that appear as text on the screen.

### To select a subtitle language:

- During playback, press **SUBTITLE**. The subtitle display appears showing the current subtitle language and the total number of subtitle languages. In the following example, the current subtitle language is 1 and the total number of subtitle languages is 2.

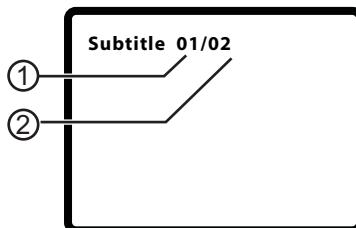

|   |                                     |
|---|-------------------------------------|
| 1 | Current subtitle language number.   |
| 2 | Total number of subtitle languages. |

- 2 Press **SUBTITLE** one or more times to select a different subtitle language.
- 3 To turn off subtitles, press **SUBTITLE** until **Subtitle Off** appears.

**Notes:**

- *The subtitle display turns off if you do not press **SUBTITLE** within three seconds.*
- *Some DVDs only let you select a subtitle language from the DVD main menu.*

## Selecting the aspect ratio

When your player is connected to a TV or monitor, you can select the aspect ratio for the TV or monitor.

**To select the aspect ratio:**

- 1 Press **SETUP**. The *General Setup Page* opens.
- 2 Press **ENTER**. **TV Display** is highlighted.
- 3 Press **►** to access the **TV Display** options.
- 4 Press **▼** or **▲** to select the aspect ratio. You can select:
  - **Normal/PS**—Select this option when the player is connected to a normal TV. Wide-screen images are shown on the screen, but with some parts cropped automatically.
  - **Normal/LB**—Select this when the player is connected to a normal TV. Wide-screen images are shown on the screen, with a black band on the top and bottom.
  - **Wide**—Displays the video image full-screen when your player is connected to a widescreen TV.

## Setting parental controls

**To set parental controls:**

- 1 Make sure that the disc tray is empty.
- 2 Press **SETUP**. The *General Setup Page* opens.
- 3 Press **◀** or **►** to enter the *Preference Page*, then press **ENTER**.
- 4 Press **▼** or **▲** to select **Parental**, then press **ENTER**.
- 5 Press **▼** or **▲** to select the rating you want to block. The rating you select and all higher ratings are blocked. You can select:
  - **KID SAFE** (All children)
  - **G** (General audiences)
  - **PG** (Parental guidance suggested)
  - **PG-13** (Parents strongly cautioned)
  - **P-GR** (Parents very strongly cautioned)
  - **R** (Restricted)
  - **NC-17** (No one under 17)
  - **ADULT** (Adults only) (factory default)
- 6 Press **ENTER**, then enter the password. The default password is **3308**.

**Note:** If you change the password, then forget it, enter **3308**.

## Using the Setup menu

Your player has a Setup menu you can use to adjust settings for your player.

### To use the Setup menu:

- 1 Press **SETUP**. The *General Setup Page* opens and the  icon is highlighted.
- 2 Press **◀** or **▶** to select the menu page you want, then press **ENTER**.
- 3 Press **▼** or **▲** to select an option, then press **▶** to open the sub-menu.
- 4 Press **▼** or **▲** select an option, then press **ENTER** to confirm your selection.
- 5 To go to a previous menu, press **◀**.
- 6 Repeat Step 2 through Step 4 to select other menu pages.

### Setup menu pages

| Page   | Options  |
|--|--|
| General Setup Page          | <p><b>TV Display</b>—Selects the aspect ratio. You can select:</p> <ul style="list-style-type: none"> <li>• <b>Normal/PS</b>—Select this option when the player is connected to a normal TV. Wide-screen images are shown on the screen, but with some parts cropped automatically.</li> <li>• <b>Normal/LB</b>—Select this when the player is connected to a normal TV. Wide-screen images are shown on the screen, with a black band on the top and bottom.</li> <li>• <b>Wide</b> displays the video image full-screen when your player is connected to a widescreen TV.</li> </ul> <p><b>Angle Mark</b>—If this option is turned on and the DVD you are watching has multiple viewing angles, the icon appears in scenes that have multiple viewing angles.</p> <p><b>OSD Language</b>—Selects the language for the <i>Setup menu</i>. You can select <b>English</b>, <b>French</b>, or <b>Spanish</b>.</p> <p><b>Screen Saver</b>—When this option is turned on, your player displays a screen saver when the same image stays on the screen for five minutes.</p> <p><b>Last Memory</b>—When this option is turned on and you open the disc tray, your player remembers where you stopped. If you close the tray with the same disc loaded, your player starts playing at the point where you stopped.</p> |
| Video Quality Setup Page  | <p><b>Brightness</b>—Increases the brightness to add more light to dark areas of the picture or decreases the brightness to add more dark to light areas of the picture.</p> <p><b>Contrast</b>—Increases the picture level to adjust the white areas of the picture or decreases the picture level to adjust the black areas of the picture.</p> <p><b>Hue</b>—Increases the color level to add more green to skin tones or decreases the color level to add more purple to skin tones.</p> <p><b>Saturation</b>—Adjusts the color saturation.</p>  |
| Password Setup Page       | <p>Press <b>SETUP</b>. Press <b>ENTER</b> to open the <i>Password Page</i>. Press <b>ENTER</b> twice to open the <i>Password Change Page</i>.</p> <p>To change the password, enter the old password or default password, then enter the new password in the <b>New Password</b> and <b>Confirmed New Password</b> (Confirm PWD) fields. If you change the password, then forget it, enter 3308.</p>  |

| Page  | Options   |
|---|---|
| Preference Page  | <p><b>Note:</b> To access this menu, make sure that there is no disc in the disc tray.</p> <p><b>Audio</b>—Selects the audio language. If the language you select is not recorded on the DVD, your player plays the default audio language.</p> <p><b>Subtitle</b>—Select the subtitle language. If the language you select is not recorded on the DVD, your player displays the default subtitle language.</p> <p><b>Disc Menu</b>—Selects the DVD menu language. If the language you select is not recorded on the DVD, your player displays the default language.</p> <p><b>Parental</b>—Blocks DVD playback based on ratings. For more information, see “Setting parental controls” on page 18.</p> <p><b>Default</b>—Reset all settings except the password and parental controls back to the factory default.</p> |

## Troubleshooting

| Problem   | Solution  |
|---|---|
| No sound or distorted sound.  | <ul style="list-style-type: none"> <li>Adjust the volume.</li> <li>Make sure that all cables are inserted correctly into the appropriate jacks.</li> </ul>  |
| Cannot fast-forward or fast-reverse through a movie.  | <ul style="list-style-type: none"> <li>You cannot fast-forward through opening credits and warning information at the beginning of a movie.</li> <li>Some DVDs do not allow rapid scanning or skipping of titles or chapters.</li> </ul>  |
| The  icon appears on the screen. | <p>The action you tried cannot be done because:</p> <ul style="list-style-type: none"> <li>The DVD software does not allow it.</li> <li>The DVD does not support the feature (for example the Subtitle feature).</li> <li>The feature is not available at the current point on the DVD.</li> <li>You entered a title or chapter number that is out of range.</li> </ul> |
| Picture is distorted.   | <ul style="list-style-type: none"> <li>During fast-forwarding or fast-reversing, distortion is normal.</li> <li>The DVD may be damaged. Try another DVD.</li> </ul>   |
| Remote control does not work.   | <ul style="list-style-type: none"> <li>Make sure that the battery is fresh.</li> <li>Make sure that nothing is blocking the IR sensor.</li> <li>Make sure that you point the remote directly at the IR sensor and that you are within 10 feet of the IR sensor.</li> </ul>  |
| Disc does not play.   | <ul style="list-style-type: none"> <li>Make sure that the disc is inserted with the label side up.</li> <li>Make sure that the disc is compatible with your player. Your player can play DVDs and audio CDs.</li> </ul>   |

| Problem                              | Solution  |
|--------------------------------------|---|
| Play starts, then stops immediately. | <ul style="list-style-type: none"><li>• Make sure that the region code for a DVD matches the region code for your player. Your player's region code is 1. The DVD's region code is on the DVD or the DVD packaging.</li><li>• Make sure that the disc is not dirty.</li><li>• If condensation has formed inside your player, let your player dry out.</li></ul> |

## Maintaining

 
### Cleaning your player

Clean the outside of your player with a clean cloth, slightly dampened with water.

**Caution:** Do not use liquid cleaners or aerosol cleaners because they may damage your player.

### Handling discs

- To keep a disc clean, do not touch the play side (non-label side) of the disc.
- Do not attach paper or tape to the disc.



- Keep the disc away from direct sunlight or heat sources.
- Store the disc in a disc case after playback.

### Installing the remote control battery

**To install the remote control battery:**

- 1 Remove the battery compartment cover.
- 2 Insert the battery into the battery compartment. Make sure that the + and – symbols on the battery match the + and – symbols in the battery compartment.
- 3 Replace the battery compartment cover.

## Cleaning discs

- Before playback, wipe the disc outwards from the center with clean cloth.



## Specifications

Specifications subject to change without notice.

|                        |   |
|------------------------|---|
| Compatible discs       | DVDs and CDs  |
| Signal system          | NTSC  |
| LCD                    | DX-P7DVD - 7 inches<br>DX-P9DVD - 9 inches  |
| Frequency response     | 20 Hz to 20 kHz   |
| Audio S/N              | Better than 60 dB   |
| Dynamic range          | Better than 85 dB   |
| Laser                  | Semiconductor   |
| Wave length            | 650 nm/795 nm   |
| Power source           | DC 9 V-12 V   |
| Operating temperature  | 41° to 95°F (5° to 35°C)  |
| Weight                 | DX-P7DVD - 1.65 lbs. (0.75kg)<br>DX-P9DVD - 2.44 lbs. (1.11 kg)   |
| Dimensions (W × D × H) | DX-P7DVD - 7. 97 × 6. 2 × 1.7 inches<br>(202.5 × 157.5 × 43.2 mm)<br>DX-P9DVD - 9. 49 × 6. 79 × 1. 87 inches<br>(241 × 172.5 × 47.5 mm) |
| Battery                | Li-polymer  |

## Legal notices

### FCC Part 15

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **FCC warning**

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.



## 90-day limited warranty

Dynex Products ("Dynex") warrants to you, the original purchaser of this new **DX-P7DVD** or **DX-P9DVD** ("Product"), that the Product shall be free of defects in the original manufacture of the material or workmanship for a period of 90 days from the date of your purchase of the Product ("Warranty Period"). This Product must be purchased from an authorized dealer of Dynex brand products and packaged with this warranty statement. This warranty does not cover refurbished Product. If you notify Dynex during the Warranty Period of a defect covered by this warranty that requires service, terms of this warranty apply.

### **How long does the coverage last?**

The Warranty Period lasts for 90 days from the date you purchased the Product. The purchase date is printed on the receipt you received with the product.

### **What does this warranty cover?**

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Dynex repair center or store personnel, Dynex will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Dynex and are not returned to you. If service of Products and parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Dynex Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

### **How to obtain warranty service?**

If you purchased the Product at a retail store location, take your original receipt and the Product to the store you purchased it from. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from an online web site, mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain in-home warranty service for a television with a screen 25 inches or larger, call 1-888-BESTBUY. Call agents will diagnose and correct the issue over the phone or will have an Dynex-approved repair person dispatched to your home.

### **Where is the warranty valid?**

This warranty is valid only to the original purchaser of the Product in the United States, Canada, and Mexico.

### **What does the warranty not cover?**

This warranty does not cover:

- Customer instruction
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to acts of God, such as lightning strikes
- Accident
- Misuse
- Abuse
- Negligence
- Commercial use
- Modification of any part of the Product
- Plasma display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).

This warranty also does not cover:

- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage supply
- Attempted repair by anyone other than a facility authorized by Dynex to service the Product
- Products sold as is or with all faults
- Consumables, such as fuses or batteries
- Products where the factory applied serial number has been altered or removed

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY. DYNEX SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. DYNEX PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Dynex:

For customer service please call 1-800-305-2204

[www.dynexproducts.com](http://www.dynexproducts.com)

Distributed by Best Buy Purchasing, LLC  
7601 Penn Avenue South, Richfield, Minnesota, U.S.A. 55423-3645

© 2010 BBY Solutions, Inc.

All rights reserved. DYNEX is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.



[www.dynexproducts.com](http://www.dynexproducts.com) (800) 305-2204

© 2010 BBY Solutions, Inc. All rights reserved.

DYNE-X is a trademark of BBY Solutions, Inc. Registered in some countries.  
All other products and brand names are trademarks of their respective owners.

Distributed by Best Buy Purchasing, LLC  
7601 Penn Ave. South, Richfield, MN 55423 U.S.A.

09-1108  
ENGLISH